

Instructions for Use, Installation and Servicing Climastat

CONTENTS		
GENERAL INFORMATION	DESCRIPTION	SECTION
General Information	General Documents	1
	Appliancation Servicing	1
	Recycling	1
Instructions for Use	Setting knob description	2
	Setting the room temperature Setting the domestic hot water	2 2
User Fault Finding and Frost Protection	Fault finding Frost protection	3 3
Installer Important Information	Appliance location	4
	Safety instructions and regulations	4
	Regulations	4
	Technical data	4
Installation and Servicing	Climastat Room Thermostat installation	5
	Fixing to the wall Electrical connection	5 5
Commissioning	Adjustment Control / Commissioning	6
	User information	6

These instructions consist of, Instructions for Use, Installation, Servicing and Fault Finding. The instructions are an integral part of the appliance and must, to comply with the current issue of the Gas Safety (Installation and Use) Regulations, be handed to the user on completion of the installation.

1 General Information

General
Climastat is a room thermostat that gives you personalised heating comfort according to your needs and enhances the energy efficiency of your heating system. The modulating regulation built into this thermostat changes the temperature of the radiators to suit the desired ambient temperature.

Documents
Please keep these instructions as well as any documents enclosed with it, safe for future reference.
We accept no liability in case of damage due to the non-compliance of these instructions.

Application
The Climastat room thermostat controls a heating appliance depending on the room temperature.
Any other use is considered as inappropriate and is forbidden.
The manufacturer shall not be responsible for any damage caused by another use. In that case the user shall be responsible.

Servicing
Clean the case of the Climastat with damp soapy cloth.
Make sure that no water goes inside the Climastat.
Do not use any abrasive cleaning products as they could damage the housing or plastic case.

Recycling
The Climastat comprises many recyclable parts.
The packaging, the Climastat and the content of the package shall not be thrown together with domestic waste but disposed of according to the current regulations.

2 Instructions for Use

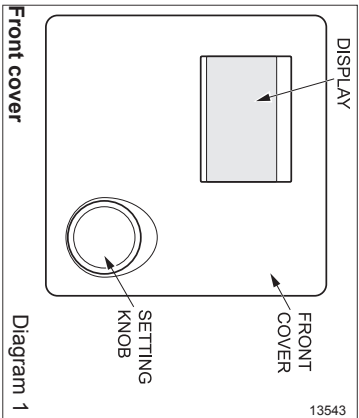


Diagram 1


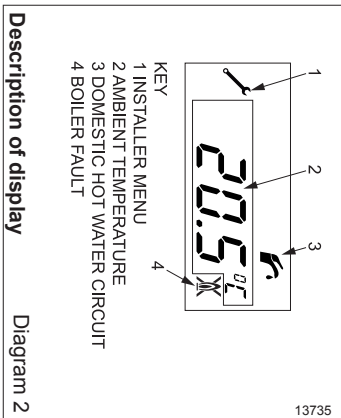


Diagram 2

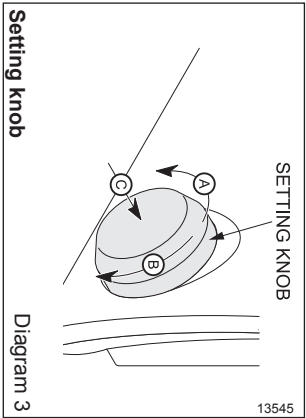

Setting knob description
Turn setting knob anti-clockwise (A) to adjust setting downward.
Turn setting knob clockwise (B) to adjust setting upward.
To access or confirm a setting, press the knob (C).

Setting the room temperature
Turn the setting knob to adjust to the desired room temperature once and the set temperature will flash.

Setting the temperature (°C)	
minimum	5
recommended	20
maximum	30

The setting is saved automatically after 5 seconds and the main screen is displayed.

Setting the domestic hot water temperature (for combination boilers only)

Press the setting knob.
Turn the setting knob once to adjust to desired hot water temperature and the set temperature will flash. Press the knob again to confirm the new temperature or the setting is saved automatically after 5 seconds. The set temperature flashes.

Setting the temperature (°C)	
minimum	38
recommended	60
maximum	65

3 User Fault Finding and Frost Protection

Fault finding
In the event of an anomaly, the Climastat displays error messages on the display.

Warning:
Never try to service or repair the Climastat by yourself and only start the Climastat once a skilled professional has repaired the fault.

Frost protection

The frost protection system activates the boiler when the ambient temperature in the room where the Climastat is installed falls below 3°C. The outside temperature falls below 5°C (protection possible only if an outside sensor is connected to the boiler).
If you leave home for a long period, consult the boiler manual.

Fault	Cause	Corrective action
The display is off	Power failure	Check the mains power supply is on and that the boiler is switched on at the spur or socket. The Climastat starts automatically once the power supply is on. If the fault persists. Please call your Installation/Servicing company or Glow-worm service.
Err	Communication error between the boiler and Climastat	Please call your Installation/Servicing company or Glow-worm service.
⌘	Boiler fault	Refer to the fault finding procedures contained in the literature supplied with boiler.

4 Installer Important Information

Appliance location

Do not install the Climastat above another appliance that could damage it, for example, above a cooker that might emit steam or grease or in a room, which has a lot of dust in the atmosphere which is corrosive.

The Climastat must be installed in a room protected from freezing temperatures. Take the necessary precautions.

Install the Climastat in such a manner so as to guarantee optimum measurement of the ambient temperature by positioning it on an inside wall in the main room of the house, approximately 1.5 metres from the ground. Do not install the Climastat near heat sources such as radiators, televisions, sunlight, on cold walls, between furniture, behind curtains, or other objects that could effect measurement of ambient air temperature in the room. Do not install close to draughts of air that could come from doors or windows.

Explain these requirements to the home owner.

Safety instructions and regulations

This Climastat is tested and certificated for safety and performance. It is, therefore, important that no alteration is made to the Climastat, without permission, in writing, from Glow-worm.

Any alteration not approved by Glow-worm, could invalidate the certification, appliance warranty and may also infringe the current issue of the statutory requirements.

Warning:
Incorrect installation can cause electric shock or appliance damage. Protect all the electrical components from water when you carry out any work.

Regulations

When installing and commissioning the control, the regulations below shall be observed in their current version.

The electrical installation must be installed by a **competent person** and in accordance with the relevant standards.

All wiring to current I.E.E. wiring regulations.
In GB, this is BS 7671.
In IE, this is the current edition of ETCl rules.


Where no specific instructions are given, reference should be made to the relevant British Standard Code of Practice.

Where no British Standard exists, materials and equipment should be fit for their purpose and of suitable quality and workmanship.

The installation of this appliance must be carried out by a **competent person** in accordance with the rules in force in the countries of destination. Manufacturer's instructions must not be taken as overriding statutory requirements.


Technical data

Description	Unit	
Max room temperature in the room where the control is installed	°C	50
Dimensions:		
Height	mm	96
Width	mm	96
Depth	mm	30
Supply voltage	V	24
Current consumption	mA	≤ 17
Min diameter of electrical connection cables	mm ²	2 x 0.75
Max. length of electrical connection cables	m	300
Electrical protection		IP20
Electrical category		III

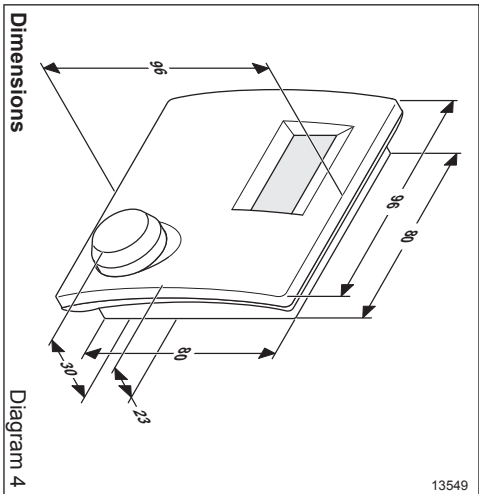

5 Installation and Servicing


Climastat Room Thermostat installation
Remove the front cover from the Climastat respecting the order of operations (A) to (C), refer to diagram 5.

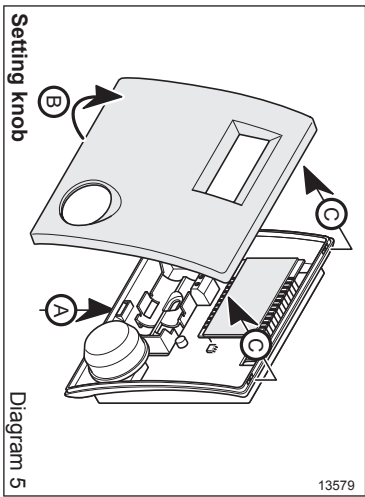

Fixing to the wall

Fit the Climastat back box to the wall, refer to diagram 6.

Choose the location of the Climastat. See section "Appliance location".

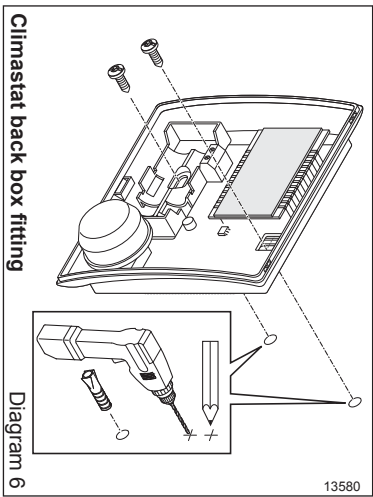

Electrical connection

Warning: Isolate the boiler from the electrical supply




A skilled professional should make the electrical connections.

Use a 2 core connection cable that complies with the specifications given in. (“Technical data”).

Important: If the cable is greater than 10 metres, separately insulate EBUS and high voltage cables to avoid electrical interference.

Route the cable between the Climastat room thermostat and the electrical cartridge on the boiler. Connect the cable to the terminal connection in the Climastat. Polarity is not important, refer to diagram 7.

Connect the cable to the EBUS connection in the electrical cartridge at the boiler. Polarity is not important, refer to diagram 8.

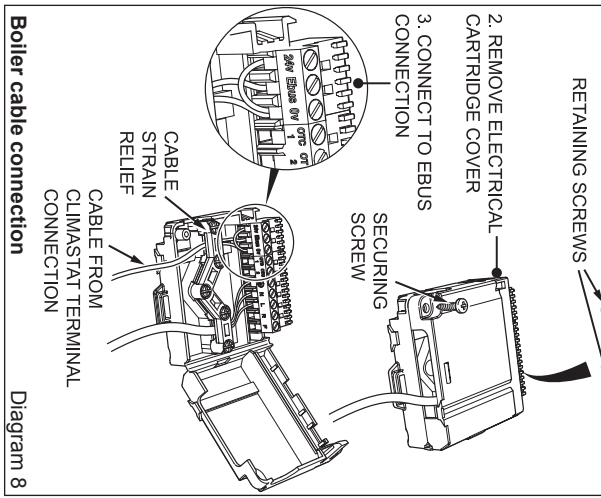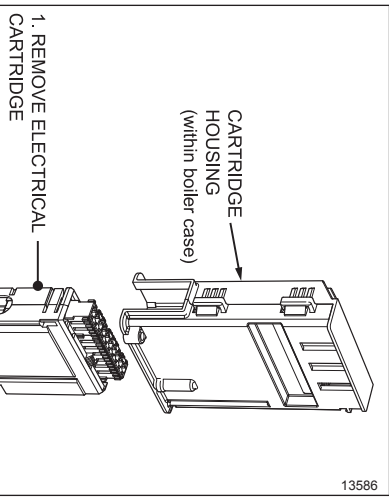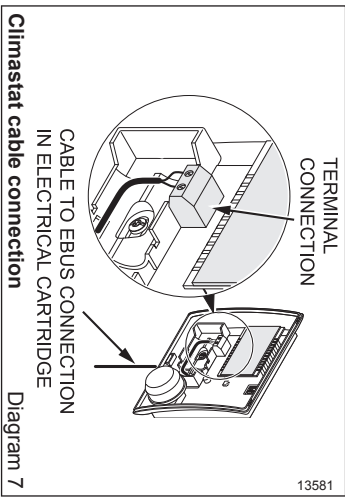


6 Commissioning

IMPORTANT

- As supplied the operating mode of this control is ON/OFF as per a conventional room thermostat (the boiler will modulate to achieve the flow temperature selected on the boiler as per conventional boiler operation).
- The modulating operating mode must be selected before this control will modulate the temperatures of the radiators to achieve the room temperature set point.
- The modulating operating mode must not be selected if this control is used with a heating only appliance that heats DHW via an external cylinder/store.

Installation Menu Adjustments

1. Press the setting knob for 10 seconds to access the setting menu
2. When "0" appears, turn the setting knob up to "96" on the display.
3. Confirm by pressing the setting knob.

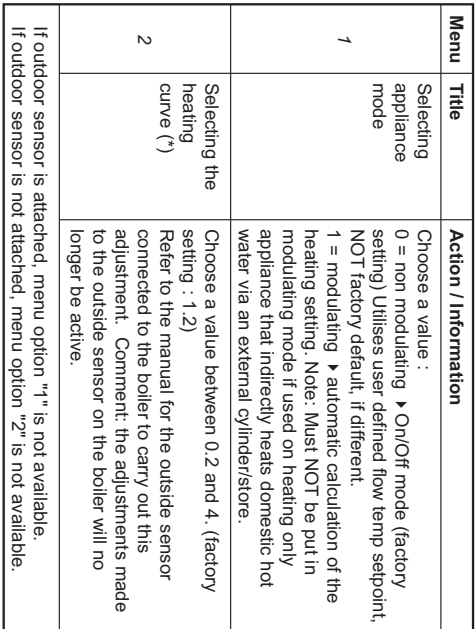

Control / Commissioning

Start the Climastat according to the indications of the operating instructions and check whether it runs.

Check the whole control and safety devices, their setting and their operation.

User information

Explain to the user the Climastat operating principles and demonstrate Look at the operating instructions together and answer any questions.

Give the user all the manuals and documents concerning the appliance and tell the user to keep them near the Climastat / Boiler.

GLOW-WORM

Nottingham Road,
Belper, Derbyshire.

DES56 1JT

Because of our constant endeavour for improvement, details may vary slightly from those shown in these instructions

www.glow-worm.co.uk

Customer Service: 01773 828100
Technical Helpline: 01773 828300

General and Sales enquiries:
Tel. 01773 824639
Fax: 01773 820569

Fax: 01773 820569

0020041169_05-07/11



Subject to engineering changes