



Glow•worm

Instructions for use

Climapro₂ RF

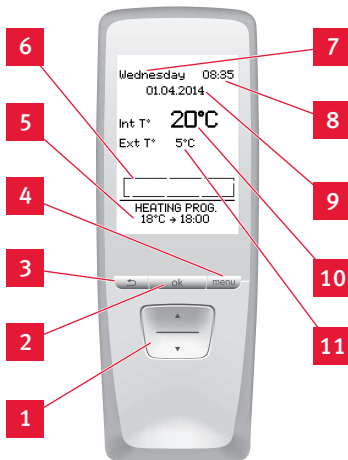


HOW TO USE YOUR CLIMAPRO₂ RF

1 Climapro₂ RF is delivered with:

- User instruction manual
- Installation manual
- Guarantee booklet with user precautions.
- For more information, consult: www.glow-worm.co.uk

2 Screen description



Legend

- 1 Scroll button (top/bottom)** Navigate in the menus.
Reduce/increase the value to be adjusted.
- 2 Selection button** Validate the selection or the setting.
- 3 Return button** Return to the previous menu.
Return to the previous setting.
- 4 Menu button** To access the main menu.
Return to the main screen (at any time).

- 5** Current functioning mode display zone
- 6** Display area for messages
- 7** Day of the week
- 8** Current time
- 9** Current date
- 10** Room temperature*
- 11** Outside temperature measured by the outdoor sensor (only if the sensor is connected)



(*) Please note: the value of the room temperature displayed on Climapro₂ RF may vary when the thermostat is held in your hand.

3 Description of the main menu

Menu	Browsing
	Browse with buttons:
	Press the button: to return to the previous screen.
	Select with the button:
	Press the button: to return to the main screen. (at any time)

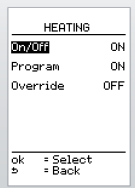


(**) Menus available according to the configuration of the system.

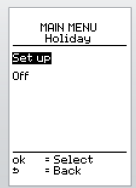


The standby screen appears after 1 minute without use

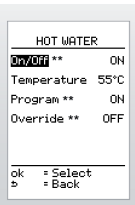
3.1 Heating

Menu	This menu allows you to:
	Activate or deactivate the heating
	Program the timed intervals for the heating
	Override the program (if activated)


3.4 Holiday

Menu	This menu allows you to:
	Set a period of absence.
	Activate or deactivate the holiday function.

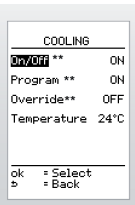
3.2 Hot water**

Menu	This menu allows you to:
	Activate or deactivate the hot water heating
	Adjust the temperature of the hot water
	Program the on/off times for hot water heating
	Override the program (if activated)

3.5 Parameters

Menu	This menu allows you to:
	Adjust the date and time
	Choose the language
	Personalise the name of the control
	Turn the keyboard lock on or off
	Adjust the brightness and contrast of the screen
	Return to factory settings
	Display information: zone, type and software version for the room thermostat

3.3 Cooling** (Heat Pump only)


Menu	This menu allows you to:
	Activate or deactivate cooling
	Program the timed intervals for cooling
	Override the program (if activated)
	Adjust cooling to the desired temperature



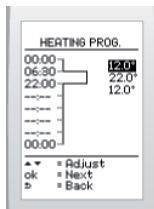
() The heating, hot water and cooling functions must be activated ("ON") to use the timed programs.**


 

 
4 Programming

4.1 Heating program

 
 
 
 
- Press button  then select on screen > heating > program > set up > choose a day.

Programming for a day begins at 00:00 with a maximum of 7 time intervals over 24 hours.



- Increase or decrease with the  buttons to display the desired room temperature setting and validate with button .
- Define the end of the time interval with the  buttons and validate with the  button.
- Begin the programming again if you wish to add other time intervals.

 
To modify a setting:

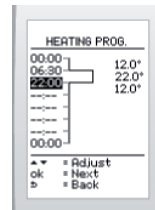
- Use the buttons  (go back) or  (go forward) to highlight the setting.
- Modify a temperature or a time with the  buttons and validate with the  button.

To delete a time interval:

Deletion is performed:

- time interval by time interval,
- from the last time interval to the first.

- Use the button  to highlight the last time interval that was set.

 


- Use the button  to display **00:00**.

 
The display automatically goes to **----** and deletes the programmed temperature.




 
The setting for the previous time interval then applies up to **00:00**.

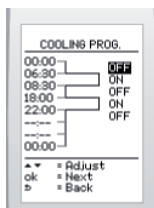
- Validate with the button  or delete another time interval.

To delete another time interval:

- Use the button  to highlight the previous time interval and perform the action again.

4.2 Hot water heating and cooling program (**)

- For hot water heating program: press button  > then select on screen > hot water > program > set up > choose a day.
- For cooling program : press button  > then select on screen > cooling > program > set up > choose a day. (NOTE: HEAT PUMP ONLY)



- Define the time slots with the same programming principle (see heating program).

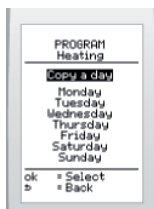
Programming for a day begins at 00:00 with a maximum of 7 time intervals over 24 hours.



(**) Menus available according to the configuration of the system.

4.3 Copy a day

This function lets you apply the rules for one day to other days.



Once a day has been programmed, you are automatically returned to the selection screen of the day to be programmed.

- Select the day to copy
- Copy to the day or group of days of your choice.

4.4 Override of central heating/hotwater (available program activated)

 
This feature allows the temporary override of current programmes.

- From the main screen, press .



- Select the program to which the override will be applied.**
- Set the setting and the end time of the override.

To cancel:

- From the main screen, press .
- Select the override(s) to be cancelled.**



(**) Menus available according to the configuration of the system.

4.5 Holiday

- Press button  then select on screen > holiday > set up.



- Set the start and end date of your holiday (date and time).
- Remember to adjust the room temperature.

4.6 Protection against frost

The device's anti-freezing system controls the start-up of the heating when the temperature of the room in which the device is installed falls below 5°C, or if the outside temperature falls below 3°C.



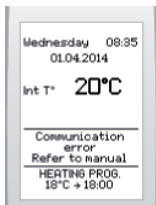
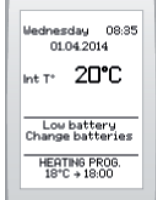


(**) Menus available according to the configuration of the system.


ANY ASSISTANCE?

5 Trouble-shooting

This chapter contains all the messages that the thermostat may display, and the corrective actions that you can carry out to put the appliance back into service.

- If after carrying out this basic advice and your appliance still does not work, leave it turned off and contact your qualified engineer.

Warning	Procedure
	<p>Check that power is supplied to the heating system.</p> <p>See the manual for the appliance</p>
	<p>Replace the batteries, following the instructions (see "battery replacement").</p>
	<p>See the appliance manual to reset.</p>
	<p>See the appliance manual to increase the system pressure.</p>

Warning	Procedure
	<p>Call the telephone number displayed on the screen.</p>
<p>No display</p>	<p>Check that:</p> <ul style="list-style-type: none"> - the batteries are installed in compartment - the battery polarity is not reversed - the batteries are not exhausted. If so, replace with new batteries.

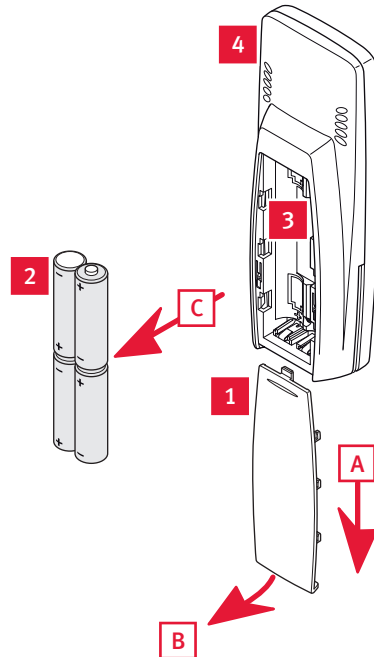
6 Replacing the batteries



When the message "low battery - change the batteries" appears on the main screen, the remaining life of the batteries is about one month.

Note :

- If the batteries are not changed in time, the boiler functions without the room thermostat.
- Programme settings will not be lost.
- Clean the battery compartment before inserting new batteries.
- Do not mix new and used batteries or batteries of different types.
- Do not use rechargeable batteries.
- Never expose the batteries to excessive heat or a naked flame, never try to take them apart, and make sure that they are never short-circuited.
- If electrolyte leaks and comes into contact with skin or clothing, rinse them immediately with water.



Legend

- 1 Battery cover
- 2 Batteries
- 3 Battery compartment
- 4 Room thermostat

- Remove the battery cover (1) for the room thermostat (4) respecting the order of operations from (A) to (C).
- Remove the batteries (2).
- Replace the batteries with new batteries of type "AA LR6", respecting their polarity (direction "+" and "-").



The batteries must not be placed in household waste, but disposed of in accordance with the regulations in force.





Subject to engineering changes

0020094583_02 - 06/11

GLOW-WORM

Nottingham Road,
Belper, Derbyshire.
DE56 1JT

www.glow-worm.co.uk

Because of our constant endeavour for
improvement, details may vary slightly
from those shown in these instructions.

Glow • worm