

Glow-worm

Installation and Servicing

Ultracom₂ 35 Store

G.C. No. 47-019-15

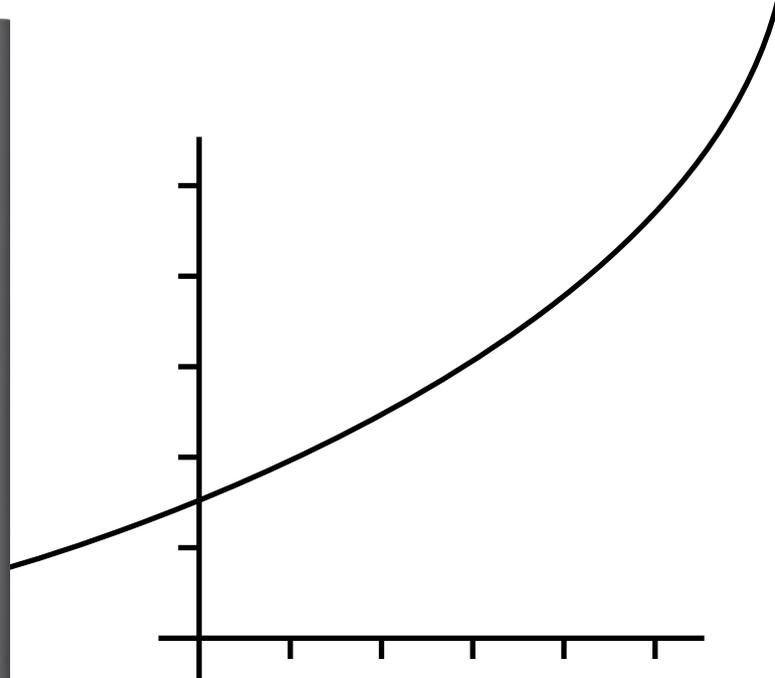


TABLE OF CONTENTS

INTRODUCTION

1	Instructions guidance		
		1.1	Product documentation3
		1.2	Associated documents3
		1.3	Explanation of symbols3
		1.4	Guarantee registration3
2	Appliance description		
		2.1	Safety devices3
		2.2	Data label.....4
		2.3	Gas category4
		2.4	Regulation and statutory requirements.....4
		2.5	Hydraulic schematic.....5
3	Safety instructions and regulations		
		3.1	Safety instructions6
		3.2	Regulations6
4	Recycling		
		4.1	Appliance7
		4.2	Packaging7

TECHNICAL DATA

5	Ultracom ₂ 35 Store
---	--------------------------------

INSTALLATION

6	Appliance location		
		6.1	Location10
		6.2	Clearances10
		6.3	Ventilation10
7	Appliance installation		
		7.1	Scope of delivery11
		7.2	Recommendations before installing11
		7.3	Dimensions13
		7.4	Mounting14
8	Hydraulic connection		
		8.1	Gas and water connections15
		8.2	Safety Discharge Valves.....16
		8.3	Connection to the condensate trap18
9	Evacuation of combustion gas		
		9.1	Regulation.....20
		9.2	Flue configuration description22
10	Remove the front panel		
11	Electrical connections		
		11.1	Access to main board24
		11.2	Main board.....25
		11.3	Electrical wiring25
		11.4	External accessories.....26
		11.5	Testing the electrical connections26
		11.6	Wiring diagram27

TABLE OF CONTENTS

12	Commissioning	
	12.1	Switching on28
	12.2	Filling the CH system (Central heating)28
	12.3	Filling DHW Circuit28
	12.4	Filling the Condensate Trap.....28
	12.5	Initial lighting29
	12.6	Gas rates.....30
	12.7	Testing heating system.....30
	12.8	Testing domestic hot water system.....30
	12.9	Completion.....30
13	Specific adjustment	
	13.1	Heating circuit adjustment.....31
	13.2	Appliance technical settings and parameter list31
	13.3	CO ₂ measurement36
	13.4	Re-check and restart36
14	User information	
MAINTENANCE		
15	Trouble-shooting	
	15.1	Fault diagnosis37
	15.2	Fault memory.....38
	15.3	Fault codes38
	15.4	Functional flow diagram40
16	Gas conversion adjustments	
	16.1	Settings41
	16.2	Restart - re-check commissioning.....42
17	Draining	
	17.1	Heating circuit42
	17.2	Domestic Hot water circuit42
18	Servicing	
	18.1	Annual Maintenance43
	18.2	Casing removing44
	18.3	Combustion check and setting the air/gas ratio valve44
	18.4	Servicing.....45
	18.5	Silencer.....46
	18.6	Central heating expansion vessel46
	18.7	DHW expansion vessel46
	18.8	Particle filter.....47
	18.9	Condensate trap47
	18.10	Combustion block48
	18.11	Service completion49
19	Replacement of Parts	
	19.1	General49
	19.2	Boiler Access50
	19.3	Viewing window.....50
	19.4	Hydraulic block.....52
	19.5	Combustion block55
	19.6	Condensate trap57
	19.7	PCB.....58
20	Spare parts	
	20.1	Short List of Parts59
	20.2	Short List of Parts60

INTRODUCTION

1 Instructions guidance

1.1 Product documentation

The instructions are an integral part of the appliance and must be handed to the user on completion of the installation in order to comply with the current regulation.

- Carefully read the manual, to understand all the information to enable safe installation, use and servicing. No liability can be accepted in the event of damage for not complying with the guidance in this instruction manual.

These instructions consist of, Installation, Servicing, Fault Finding, Replacement of Parts and Spares. The instructions are an integral part of the appliance and must, to comply with the current issue of the Gas Safety (Installation and Use) Regulations, be handed to the user on completion of the installation.

1.2 Associated documents

- 1 Instructions for use
- 1 magnetic lighting instruction label
- 1 flue guide
- 1 extended guarantee leaflet
- 1 guarantee envelope pack
- 1 wall template
- 1 gas conversion label

1.3 Explanation of symbols



DANGER: Risk of injuries.



DANGER: Risk of electric shock.



ATTENTION: Risk of damage to the appliance or to its surroundings.



IMPORTANT: Important information.

1.4 Guarantee registration

Thank you for installing a new Glow-worm appliance in your home. Glow-worm appliances are manufactured to the very highest standard so we are pleased to offer our customers a Comprehensive Guarantee.

This product is guaranteed for 24 months from the date of installation or 30 months from the date of manufacture, whichever is the shorter, for parts and labour.

The second year of guarantee, from the beginning of the 13th month onwards after installation or manufacture, is conditional upon the boiler having been serviced by a **competent person** approved at the time by the Health and Safety Executive, in accordance with the manufacturer's recommendations. We strongly recommend regular servicing of your gas appliance, but where the condition is not met, any chargeable spare parts or components issued within the applicable guarantee period still benefit from a 12 month warranty from the date of issue by the manufacturer.

We recommend you complete and return as soon as possible your guarantee registration card. If your guarantee registration card is missing you can obtain a copy or record your registration by telephoning the Glow-worm Customer Service number 01773 828100.

2 Appliance description

2.1 Safety devices

2.1.1 Overheating safety

The appliance is designed to recognise the potential for an overheat lockout and will shutdown before this happens.

2.1.2 Safety discharge valve

Heating and domestic discharge safety valves and a domestic hot water pressure relief valve are fitted to the boiler. This valve must not be touched.

- The heating safety valve opens when the pressure in the heating circuit exceeds 3 bars.
- The domestic hot water safety valve opens when the pressure in the heating circuit exceeds 10 bars.
- Should there be any discharge from the pipe, isolate the boiler electrical supply and call your installer or Glow-worm's own service organisation.

2.1.3 Frost protection

The frost protection system operates the pump to start as soon as the temperature in the heating circuit falls below 12°C. The pump stops as soon as the temperature of the water contained in the heating circuit reaches 15°C. If the temperature in the heating system falls below 7°C, the burner ignites until it reaches 35°C.

The frost-protection system is active when the appliance is switched on.

The system alone cannot ensure that the installation is protected against frost. An separate frost thermostat is necessary to control the temperature of the system.



Your domestic water circuit (hot or cold) is not protected by the boiler.


2.1.4 Condensate drain blockage

During freezing conditions this may be due to the forming of ice in the condensate drain external to the house. In this case, a safety device shuts down the appliance.

2.2 Data label

The data label certifies the country where the appliance is intended to be installed.

Data label location:

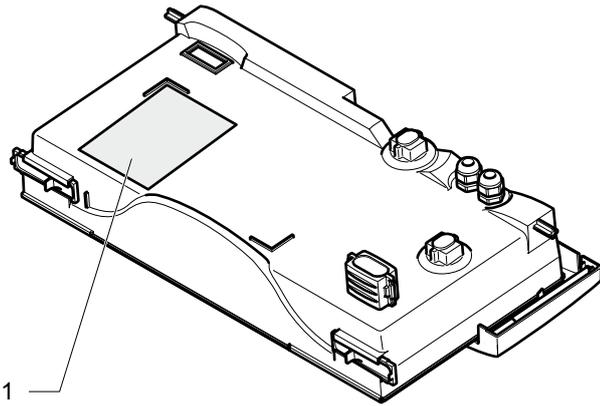

Key

1 Data label

The data label contains the following data:

- The name of the manufacturer
- The country of intended destination
- The commercial name of the appliance and its serial number
- The types of flues installations authorised
- The appliance's gas category
- The gas type, group and pressure, set in the factory
- The DHW specific flow rate (D)
- The maximum pressure in the heating circuit (PMS)
- The maximum pressure in the domestic water circuit (PMW)
- The NOx class of the appliance
- The type and voltage of electricity supply
- The maximum power rating
- The electrical protection class
- The minimum and maximum heat input (Q)
- The minimum and maximum power output (P)
- The CE number and logo

2.3 Gas category

This boiler is for use only on G20, but can be converted for use on G31.

- To adapt the appliance to another type of gas, see the chapter "Gas conversion".

2.4 Regulation and statutory requirements

2.4.1 CE Mark

This boiler meets the requirements of Statutory Instrument, No. 3083 The Boiler (Efficiency) Regulations, and therefore is deemed to meet the requirements of Directive 92/42/EEC on the efficiency requirements for new hot water boilers fired with liquid or gaseous fuels.

Type test for purposes of Regulation 5 certified by: Notified body 1312.

Product/production certified by: Notified body 0086.

The CE mark indicates that the appliances described in this manual are in compliance with the following directives:

- European directive n°2009-142 relative to gas appliances
- European directive n°2004-108 from the European Parliament and Council relative to electromagnetic compatibility
- European directive n°2006-95 from the European Parliament and Council relative to low voltage
- European directive n°92-42 relative to the yield of boilers

2.4.2 Local regulations

Benchmark places responsibilities on both manufacturers and installers. The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by a competent person approved at the time by the Health and Safety Executive and that it meets the requirements of the appropriate Building Regulations. The Benchmark Checklist can be used to demonstrate compliance with Building Regulations and should be provided to the customer for future reference.


Installers are required to carry out installation, commissioning and servicing work in accordance with the Benchmark Code of Practice which is available from the Heating and Hotwater Industry Council who manage and promote the Scheme.

- Visit www.centralheating.co.uk for more information.



The appliance shall only be connected to the gas type(s) indicated on the data label.

2.5 Hydraulic schematic

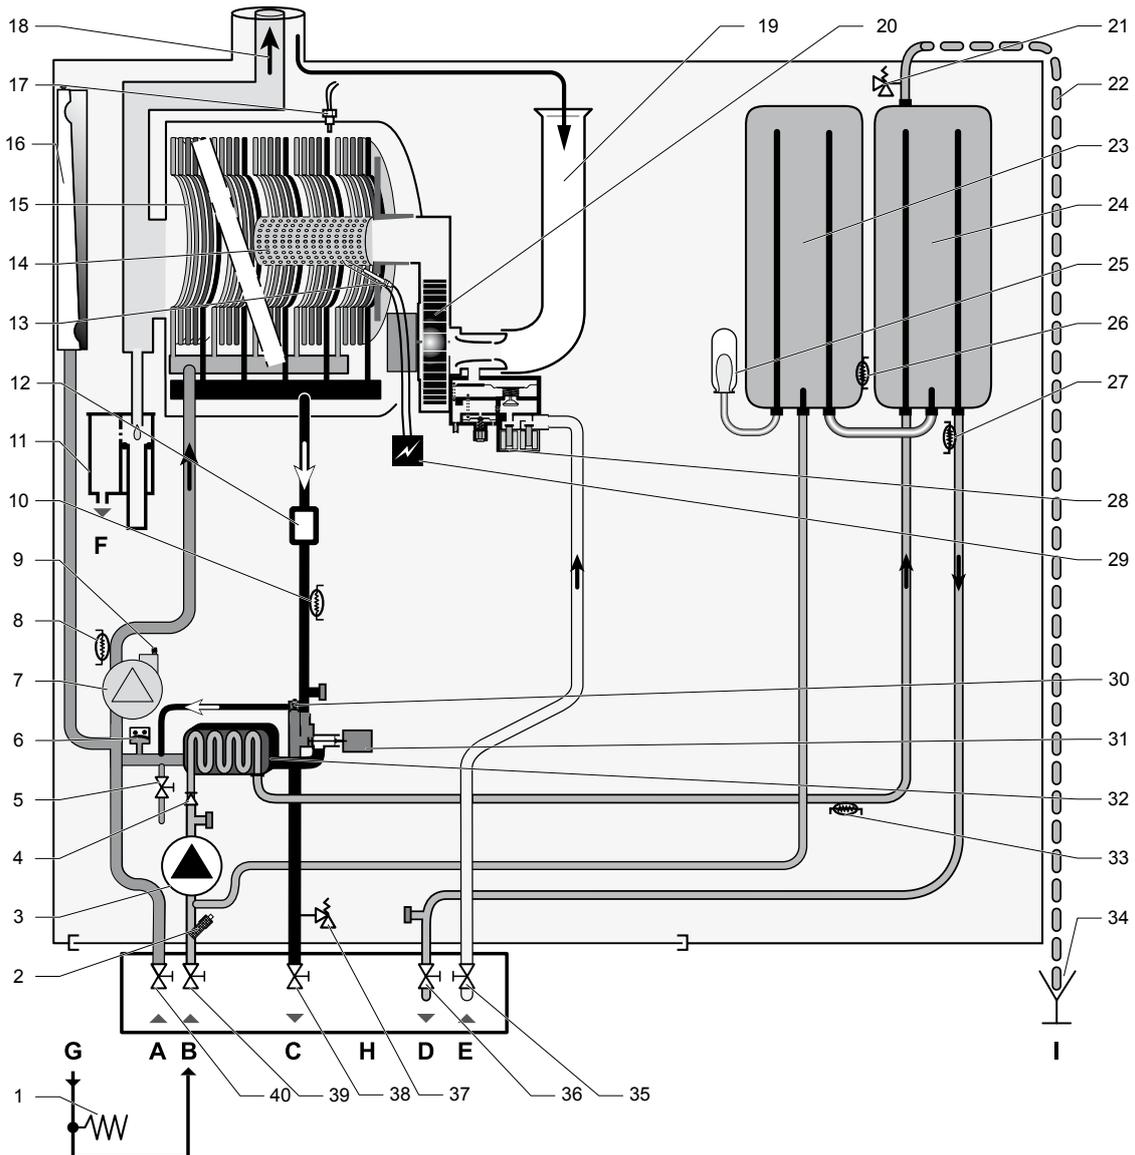

- Key**
- | | |
|-----------------------------------|---|
| 1 Pressure reducer | 26 Storage tank temperature sensor |
| 2 Filter on cold water inlet | 27 Hot water temperature sensor |
| 3 Domestic hot water pump | 28 Gas control valve |
| 4 Non-return valve | 29 Ignition module |
| 5 Heating circuit drain tap | 30 By-pass |
| 6 Water pressure sensor | 31 Three way valve |
| 7 Heating pump | 32 Domestic plate to plate heat exchanger |
| 8 Heating return thermistor | 33 Hot water heat exchanger output temperature sensor |
| 9 Air vent | 34 Tundish |
| 10 Heating flow thermistor | 35 Gas isolating valve |
| 11 Condensate trap | 36 Domestic hot water isolating valve |
| 12 Particle filter | 37 Heating safety valve |
| 13 Ignition and control electrode | 38 Heating flow isolating valve |
| 14 Burner | 39 Domestic cold water isolating valve |
| 15 Main heat exchanger | 40 Heating return isolating valve |
| 16 Heating expansion vessel | |
| 17 Thermal fuse | A Heating return |
| 18 Flue outlet | B Cold water inlet |
| 19 Silencer | C Heating flow |
| 20 Fan | D Domestic hot water outlet |
| 21 Hot water safety valve | E Gas |
| 22 Discharge tube (not supplied) | F Condensate drain |
| 23 Storage tank | G Cold water supply |
| 24 Storage tank | H Heating safety valve drain |
| 25 DHW expansion vessel | I Hot water safety valve drain |

3 Safety instructions and regulations

3.1 Safety instructions

If the gas pressure at the input of the appliance is outside the range specified, the appliance must not be put into operation.



Incorrect installation can cause electric shock or appliance damage.

- Never disable security devices and do not try to adjust them.

With regards to the “Manual Handling Operations, 1992 Regulations”, the appliance exceeds the recommended weight for a one person lift.

The handling of the boiler may involve lifting, pushing and pulling, the use of a sack truck may be required.

- Be sure to consider the following handling techniques and precautions:
 - Grip the appliance at its base
 - Use safety clothing where appropriate, e.g. gloves, safety footwear.
- Ensure safe lifting techniques are used:
 - Keep back straight.
 - Avoid twisting at the waist.
 - Avoid upper body/top heavy bending.
 - Always grip using the palm of the hand.
 - Use designated hand holds.
 - Keep load as close to body as possible.
 - Always use assistance if required.
- Under no circumstances must the user interfere with or adjust sealed parts.
- When assembling the connections, correctly position the seals to avoid any leakage of gas or water.
- This appliance contains metal parts (components) and care should be taken when handling and cleaning, with particular regard to edges.

The basic safety instructions must be followed before attempting to maintain or replace spare parts:

- Stop the appliance.
- Electrically isolate the appliance from the power supply.
- Turn off the appliance gas isolation valve.
- Hydraulically isolate the appliance using the isolation valves if provided.
- Allow the appliance to cool before performing maintenance work.
- Should you need to replace hydraulic components, drain the appliance.

- Protect all the electrical components from water while working on the appliance.
- Use only original spare parts.
- Use only new O-rings and gaskets.
- After having completed work on gas or water carrying components, check for their tightness.
- When work on the appliance is completed, perform an operational test and check for safety.

3.2 Regulations

3.2.1 Statutory requirements

IMPORTANT

Installation of this appliance falls within the scope of the Building Regulations 2010 (Part G). This requires that the installation of an unvented system should be notified to the local authority Building Control Department and the work must be carried out by a competent person as defined in the approved document G3.

Where no British Standards exists, materials and equipment should be fit for their purpose and of suitable quality and workmanship.

The installation of this boiler must be carried out by a competent person approved at the time by the Health and Safety Executive and in accordance with the rules in force in the countries of destination.

Manufacturer’s instructions must not be taken as overriding statutory requirements.

Statutory Requirements

In GB, the installation of the boiler must comply with the requirements of the current issue of BS6798 and be carried out by a competent person approved at the time by the Health and Safety Executive and as described in the following regulations:

- The manufacturer’s instructions supplied.
- The Gas Safety (Installation and Use) Regulations.
- The appropriate Buildings Regulations either The Building Regulations, The Building Regulations (Scotland), The Building Regulations (Northern Ireland).
- The Water Supply (water fittings) Regulations 1999 and water byelaws 2000, Scotland.
- The Health and Safety at Work Act, Control of Substances Hazardous to Health (COSHH).
- Any electrical work must conform to BS7671 and part P of the building regulations where applicable.

Where no specific instructions are given, reference should be made to the relevant British Standard Code of Practice.

In IE, the installation must be carried out by a competent person approved at the time by the Health and Safety Executive and installed in accordance with the current edition of I.S.813 “Domestic Gas Installations”, the current Building Regulations and reference should be made to the current ETCI rules for Electrical Installation.

GB: the following Codes of Practice apply: BS4814, BS6798, BS5440 Part 1 and 2, BS5546 Part 1, BS5449, BS6891, BS6700, BS7074 Part 1 and 2, BS7593, BS7671.
IE: I.S.813, BS5546, BS 5449, BS 7074, BS 7593.

NOTE: For further information, see the current issue of the Building Regulations, approved document L1 (in the UK) and the following current issues of:

- 1) Central heating system specification (CheSS) and
- 2) Controls for domestic central heating system and hot water. BRECSU.

Gas Supply

The gas installation must be in accordance with the relevant standards.

In GB, this is BS6891.

In IE, this is the current edition of I.S.813 “Domestic Gas Installations”.

The supply from the governed meter must be of adequate size to provide a steady inlet working pressure of 20mbar (8in wg) at the boiler. On completion, test the gas installation for tightness using the pressure drop method and suitable leak detection fluid, purge in accordance with the above standard.

Domestic Hot Water

All domestic hot water circuits, connections, fittings must be in accordance with the relevant standards and water supply regulations.

Heating System

In GB, it is necessary to comply with the Water Supply (Water Fittings) Regulations 1999 (for Scotland, the Water Byelaws 2000, Scotland). To comply with the Water regulations your attention is drawn to: The Water Regulations guide published by the Water Regulations Advisory Service (WRAS) gives full details of the requirements.

In IE, the requirements given in the current edition of I.S.813 “Domestic Gas Installations” and the current Building Regulations must be followed.

Electrical Supply

The boiler MUST be earthed. All system components shall be of an approved type and all wiring to current I.E.E. wiring regulations. External wiring must be correctly earthed, polarised and in accordance with the relevant standards.

In GB, this is BS 7671.

In IE, this is the current edition of ETCI rules.

The boiler MUST be connected to a permanent 230V ac, 50Hz supply.

Connection of the whole electrical system of the boiler, including any heating controls, to the electrical supply MUST be through one common isolator and must be fused 3 Amp maximum.

Isolation should be by a double pole switched fused spur box, with a minimum gap of 3mm for both poles. The fused spur box should be readily accessible and preferably adjacent to the appliance. It should be identified as to its use.

Alternatively connection can be made through an unswitched shuttered socket and 3A fused 3-pin plug both to the current issue of BS 1363, provided they are not used in a room containing a bath or shower.

Wiring to the boiler must be PVC 850C insulated cable, not less than 0.75mm² (24/0.20mm).

3.2.2 Other regulations

Gas Safety (Installation and Use) Regulations

In your own interests and that of safety, it is the Law that ALL gas appliances are installed by a competent person approved at the time by the Health and Safety Executive in accordance with the current issue of these regulations.

Control of Substances Hazardous to Health

Under Section 6 of The Health and Safety at Work Act 1974, we are required to provide information on substances hazardous to health. The adhesives and sealants used in this appliance are cured and give no known hazard in this state.

Insulation Pads:

These can cause irritation to skin, eyes and the respiratory tract. If you have a history of skin complaint you may be susceptible to irritation. High dust levels are usual only if the material is broken. Normal handling should not cause discomfort, but follow normal good hygiene and wash your hands before eating, drinking or going to the lavatory.

- If you do suffer irritation to the eyes or severe irritation to the skin seek medical attention.

4 Recycling



The recycling of the packaging must be carried out by the qualified professional who installed the appliance.

4.1 Appliance

Most of the appliance is made of recyclable materials.



This symbol indicates that this appliance must not be disposed of with household waste, that it should be selectively collected for energy recovery, reuse or recycling.

- Take the appliance to an appropriate collection point.



By complying with this directive, you will contribute to the preservation of natural resources and the protection of human health.

4.2 Packaging

We recommend that you recycle the packaging of the appliance in a responsible fashion.

- Sort the waste in order to separate those elements which can be recycled (cardboard, plastics ...) and those which cannot be recycled.
- Eliminate the waste in accordance with existing regulations.

TECHNICAL DATA

 5 Ultracom₂ 35 Store

Boiler, type C13, C33, C43

Description	Unit	35 Store
Gas category		II _{2H3P}
SEDBUK 2005 rating	%	NA
SEDBUK 2009 rating	%	NA
Heating		G20
Maximum heating input power	kW	30.6
Minimum heating output power at 80/60°C (P min.)	kW	8.5
Maximum heating output power at 80/60°C (P max.)	kW	30
Minimum heating output power at 50/30°C (P min.)	kW	9.3
Maximum heating output power at 50/30°C (P max.)	kW	32.5
PCI Efficiency max heating power at 80/60°C	%	97.9
PCI Efficiency max heating power at 50/30°C	%	106.3
Efficiency at part load (30%) on PCI at 40°C/30°C	%	108.6
Efficiency level according to the European Directive 92/42	-	Condensing
Minimum calorific rate (Q min.)	kW	8.7
Maximum calorific rate (Q max.)	kW	30.6
Minimum heating flow rate	l/h	400
Minimum heating temperature	°C	10
Maximum heating temperature	°C	80
Content of heating expansion vessel	l	12
	gallons	2.64
Heating expansion vessel preset pressure	bar	0.75
	psi	10.9
Max. capacity of the installation at 75°C	l	220
Heating safety valve preset pressure (PMS)	bar	3
	MPa	0.3
Domestic Hot Water		G20
Minimum DHW output power (P min.)	kW	8.7
Maximum DHW output power (P max.)	kW	35.7
Min. calorific rate (Q min)	kW	8.7
Maximum calorific rate (Q max.)	kW	35.7
Minimum DHW temperature	°C	45
Maximum DHW temperature	°C	65
Specific flow rate (ΔT of 35 K)	l/min	19.7
Specific flow rate according to EN 625	l/min	NA
Level of sanitary confort EN 13203	-	***
Flow rate operating threshold	l/min	0.1
High capacity tank	l	42
Water flow limiter	l/min	16
Safety valve, maximum working pressure (PMW)	bar	10
	psi	145
Minimum inlet water pressure	bar	0.3
	psi	4.3
Maximum inlet water pressure (*)	bar	10
	psi	145

Description	Unit	35 Store
Maximum temperature hot water safety valve	°C	90
Maximum pressure hot water safety valve	bar	10
	psi	145
(*) For a supply pressure above 3 bar, it is recommended that you install a pressure reducer.		

Description	Unit	35 Store
Combustion		G20
Fresh air flow rate (1013 mbar -0°C)	m ³ /h	45.7
Flue gas flow rate at Pmin.	g/s	4
Flue gas flow rate at Pmax.	g/s	13.8
Flue gas flow rate in hot water mode	g/s	16
Flue gas temperature at Pmin. 80°C/60°C	°C	72.4
Flue gas temperature at Pmin. 50°C/30°C	°C	47.4
Flue gas temperature at Pmax. 80°C/60°C	°C	77.2
Flue gas temperature at Pmax. 50°C/30°C	°C	55.8
Flue gas temperature in hot water mode (with hot water temperature of 50°C)	°C	81
Value of combustion products (measured at nominal calorific rate and with G20 reference gas, in heating):		
CO	ppm	NA
	mg/kWh	8
CO ₂	%	9.2
Weighted Nox	ppm	22.6
	mg/kWh	39.8
Appliance NOx class		5
Electrical		
Electrical supply	V/Hz	230/50
Standby mode electrical power	W	6
Operational mode electrical power (Max)	W	178
Intensity	A	0.75
Internal fuse rating on main PCB	A	2
Index of electrical protection (EN 60529)		IPX4D
Electrical classification		I

Description	Unit	35 Store
Gas connection Ø O.D.	mm	15 (copper)
Heating flow and return connection Ø O.D.	mm	22 (copper)
Domestic Hot Water connection Ø O.D.	mm	22 (copper)
Safety valve discharge connection Ø O.D.	mm	22 (copper)

Description	Unit	35 Store
Dimensions:		
Height	mm	990
Width	mm	470
Depth	mm	570
Weight	kg	67
Total weight (installed)	kg	115.5
Number of CE certificate		1312 CL 5531

Description	Unit	35 Store
Natural Gas G 20 (15 °C, 1013.25 mbar)		
Maximum DHW gas rate	m ³ /h	3.77
Maximum heating gas rate	m ³ /h	3.24
Minimum gas rate	m ³ /h	0.92
CO ₂ at Qmax DHW + "tolerance case ON"	%	9.2 ± 0.3%
CO ₂ at Qmax DHW + "tolerance case OFF"	%	9 ± 0.2%
CO ₂ at Qmin + "tolerance case ON"	%	8.9 ± 0.3%
CO ₂ at Qmin + "tolerance case OFF"	%	8.7 ± 0.2%
Inlet pressure	mbar	20

Description	Unit	35 Store
Propane Gas G 31 (15 °C, 1013.25 mbar)		
Maximum DHW gas rate	kg/h	2.77
Maximum heating gas rate	kg/h	2.37
Minimum gas rate	kg/h	0.67
CO ₂ at Qmax DHW + "tolerance case ON"	%	10.3 ± 0.3%
CO ₂ at Qmax DHW + "tolerance case OFF"	%	10.1 ± 0.2%
CO ₂ at Qmin + "tolerance case ON"	%	9.8 ± 0.3%
CO ₂ at Qmin + "tolerance case OFF"	%	9.6 ± 0.2%
Inlet pressure	mbar	37

INSTALLATION



All the drawings dimensions are shown in mm.

6 Appliance location

6.1 Location

6.1.1 Instructions

Before choosing a site for the appliance, carefully read the safety warnings and installation manual.

- Ensure that wall to which the appliance will be mounted on is structurally safe in order to support the weight of the appliance.
- Ensure that the space that the appliance is to be installed within allows the appliance to be installed and the clearances maintained. This will ensure that the connections to the water, gas and flue can be accessed and inspected (see chapter Clearances).
- Explain these requirements to the appliance user.
- Do not install the appliance above another appliance that could damage it (for example, above a cooker that might emit steam or grease) or in a room, which has a lot of dust in the atmosphere which is corrosive.
- The boiler must be fitted inside the property and exposed pipe work may need to be protected from frost by fitting a frost thermostat.

6.1.2 Regulations

Location

This boiler is not suitable for outdoor installation. This boiler may be installed in any room, although particular attention is drawn to the installation of a boiler in a room containing a bath or shower where reference must be made to the relevant requirements. This boiler is suitable for installation in bathroom zones 2 and 3. In GB this is the current I.E.E. WIRING REGULATIONS and BUILDING REGULATIONS. In IE reference should be made to the current edition of I.S.813 "Domestic Gas Installations" and the current ETCI rules.

Timber Frame Buildings

If the boiler is to be installed in a timber frame building it should be fitted in accordance with the Institute of Gas Engineers document IGE/UP/7/1998. If in doubt seek advice from local gas undertaking or Glow-worm.

6.2 Clearances


- To allow periodic maintenance, ensure the distances indicated on the diagram.

Additional clearances may be beneficial around the boiler for installation and servicing. For flue installations where external access is not practicable,

consideration should be given for the space required to insert the flue from inside the property, which may necessitate clearance larger than those specified in diagram below.



The appliance can be placed with zero clearance on the left hand side if practical to do so.

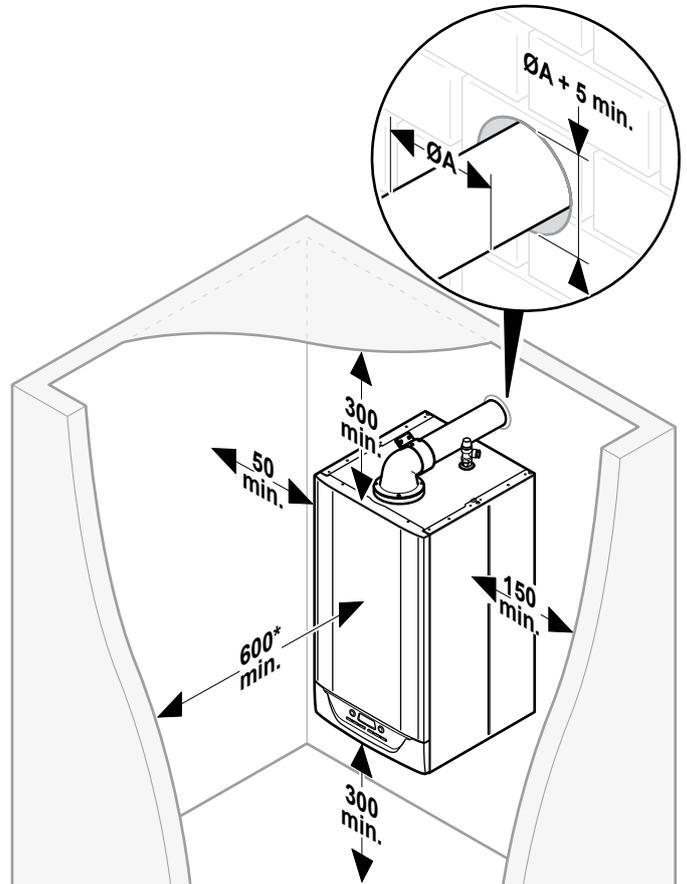

Key

* A removable compartment door can be placed a minimum 5 mm in front of appliance. A clearance of 600 mm is required from a fixed surface.

The boiler and flue are suitable for installation onto and through combustible materials provided that:

- Minimum 5mm clearance is maintained around the circumference of the flue (air intake).
- The combustible surface and fixings are suitable for supporting the load.
- The minimum clearances from the boiler case are maintained.

6.3 Ventilation

6.3.1 Room Ventilation

The boiler is room sealed so a permanent air vent is not required.

6.3.2 Cupboard or Compartment Ventilation

Due to the high efficiency and low casing temperature of this boiler, cupboard or compartment ventilation is not necessary.

- Existing ventilation should be investigated for its purpose before removing.

7 Appliance installation


7.1 Scope of delivery

The appliance is delivered in a single carton with a document pack and fittings.



The flues package will be ordered according to the configuration of the installation.

- Please check the contents.

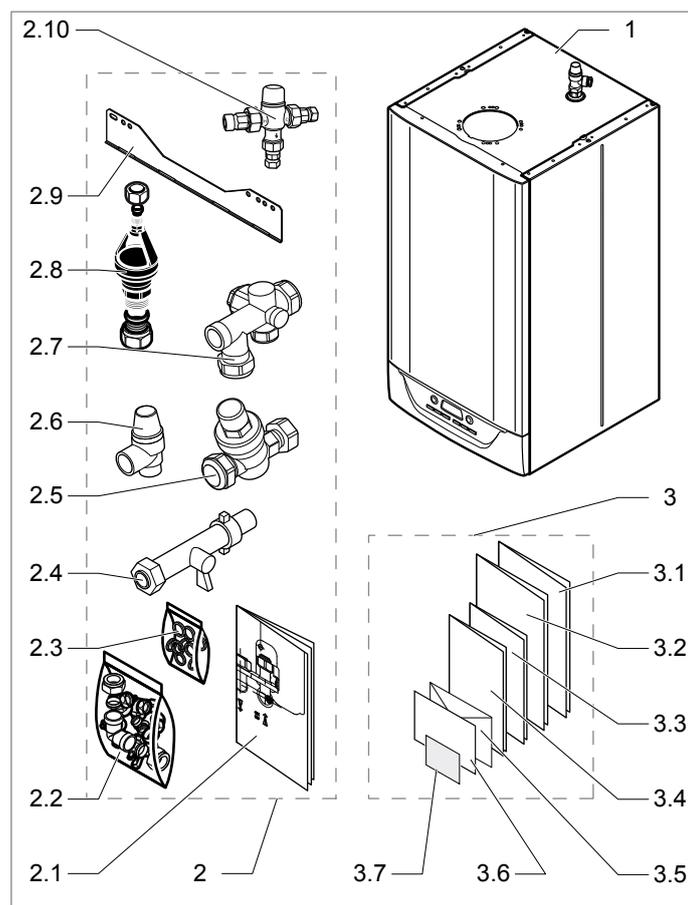


Key		
1	Boiler	(x1)
2	Accessories bag	(x1)
2.1	Wall template	(x1)
2.2	Fittings pack	(x1)
	- Heating return valve	(x1)
	- Cold water inlet valve	(x1)
	- Heating flow valve	(x1)
	- Domestic hot water connection	(x1)
	- Gas isolation valve	(x1)
	- Compression fitting	(x1)
2.3	Seals bag	(x1)
2.4	Filling loop	(x1)
2.5	Pressure reducing valve	(x1)
2.6	Pressure relief valve	(x1)
2.7	Check valve	(x1)
2.8	Tundish	(x1)
2.9	Hanging bracket	(x1)
2.10	Mixing valve	(x1)

3	Documents bag	(x1)
3.1	Installation and servicing manual	(x1)
3.2	Flue book	(x1)
3.3	Instructions for use	(x1)
3.4	Extended guarantee leaflet	(x1)
3.5	Guarantee envelope pack	(x1)
3.6	Magnetic lighting instruction label	(x1)
3.7	Gas conversion label	(x1)

7.2 Recommendations before installing

7.2.1 Domestic hot water circuit design

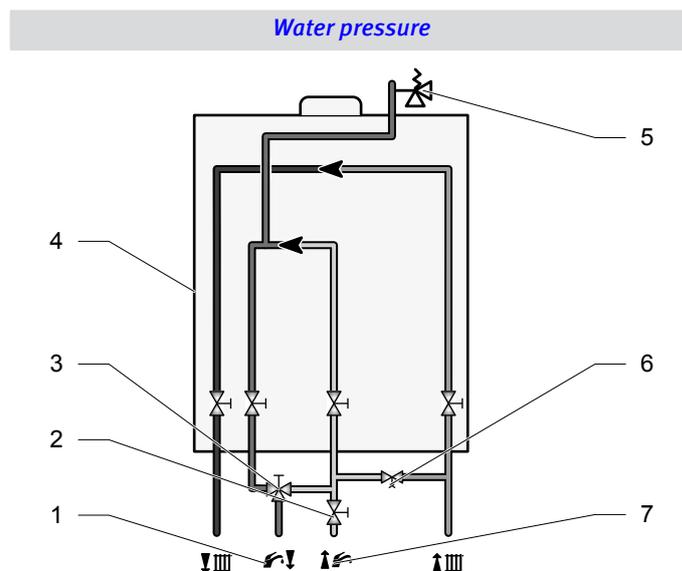

Key	
1	Domestic hot water out
2	Pressure reducing valve (if required)
3	Mixing valve
4	Boiler
5	Temperature/pressure relief valve
6	Filling loop in accessory box
7	Domestic cold water supply in

The minimum working pressure to obtain the maximum domestic flow is 1,0 bar.

The boiler is supplied with a pressure reduction valve pre-set to deliver an inlet pressure of 3.5bar.

'Hard' water areas


The temperatures within the heat exchanger are limited by the boiler control system to minimise scale formation within the hot water pipework. However, in areas where the water is 'hard' (i.e. more than 200 mg/L of calcium carbonate), it is recommended that the hot water setting is reduced and that a scale reducer is fitted, refer to the manufacturer's instructions or consult the local water company for additional advice.

Domestic water flow rate

The domestic hot water flow has a restrictor, factory fitted, which reduces the flow to a maximum of:

- 35 Store ▶ 16 l/min.

Prevention of scalding - Thermostatic mixing valve

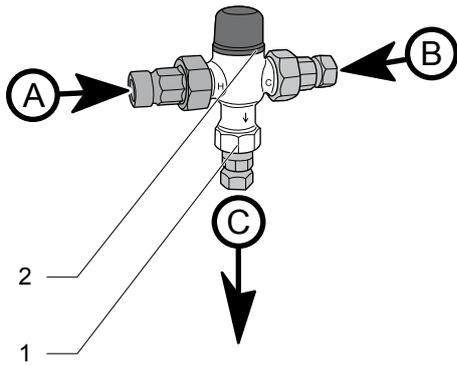

- Key**
- 1 Thermostatic mixing valve
 - 2 Standard flue length horizontal
 - A Hot water
 - B Cold water
 - C Mixed water


A thermostatic mixing valve is used in the domestic hot water circuit.

Its function is to maintain the temperature of the mixed water, supplied to the user, constant at the set value when there are variations in the supply pressure and temperature of the incoming hot and cold water or in the flow rate.

The hot water supply temperature to a bath should be limited to a maximum of 48°C. The thermostatic mixing valve should not be easily altered by users.

The thermostatic mixing valve conforming to WRAS, BS EN 1111 and BS EN 1287, compliant to Part G of the plumbing regulations.

7.2.2 Heating circuit design

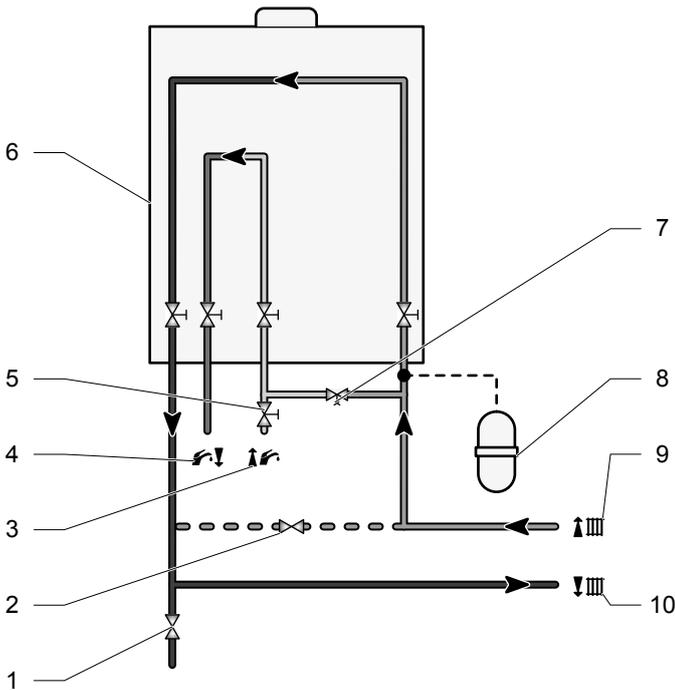

- Key**
- 1 Drain point
 - 2 External bypass (if required)
 - 3 Domestic cold water supply in
 - 4 Domestic hot water out
 - 5 Pressure reducing valve (if required)
 - 6 Boiler
 - 7 Filling loop in accessory box
 - 8 Additional expansion vessel (if required)
 - 9 Heating return circuit
 - 10 Heating flow circuit

General

This boiler is designed for use as part of a sealed water central heating system with fully pumped circulation. The pump, expansion vessel and associated safety devices are all fitted within the boiler.

Safety valve

The safety valve is an integral part of the boiler and it cannot be adjusted. The pipe from the safety discharge valve must discharge safely in accordance with standards.

Expansion vessel

The boiler has an integral expansion vessel with a capacity of 12 litres (2.64 gallons), with a charge pressure of 0.75bar.



The heating system volume should be calculated to ensure that the expansion vessel is suitable, it may be necessary to add an additional vessel.

- In GB, Guidance on vessel sizing is also given in the current issue of BS5449 and BS7074 Part 1.
- In IE, current edition of I.S.813 "Domestic Gas Installations".

Bypass

The boiler is fitted with an automatic bypass which can be adjusted to suit your system requirements.


- Ensure that under no circumstances does the flow rate drop below the figure specified, refer to chapter "Technical data".

Filling the sealed system



The water pressure at the boiler must be at least 1.2bar to operate the filling loop. If the pressure is less than 1.2bar an external filling loop must be fitted. If this pressure is not available contact the local water authority.

Suitable external filling systems are shown diagrammatically, see diagram [overleaf](#).

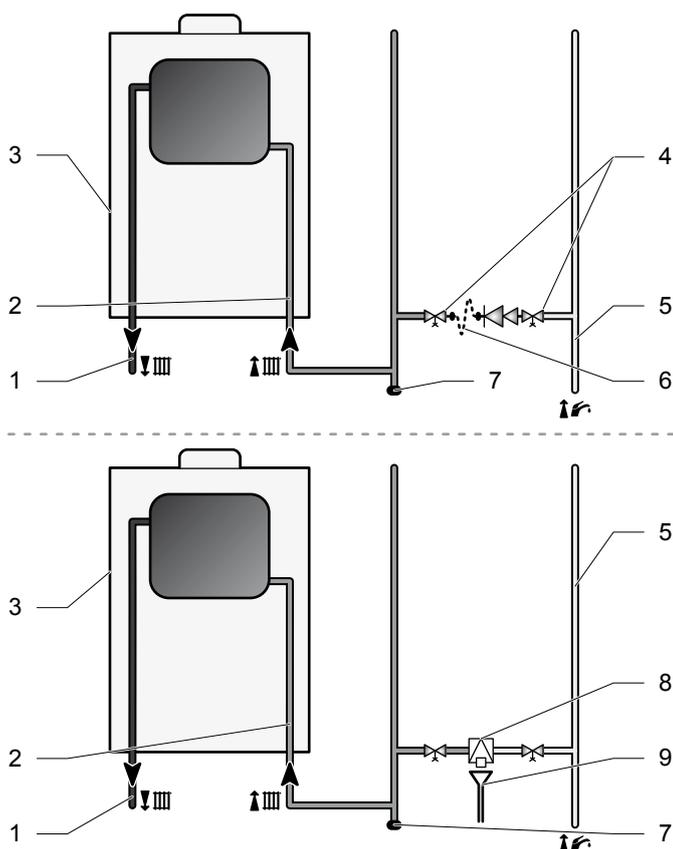

Key

- 1 Heating flow circuit
- 2 Heating return circuit
- 3 Boiler
- 4 Double check valve assembly
- 5 Domestic cold water supply in
- 6 Temporary filling loop (remove immediately after filling)
- 7 Drain point
- 8 Back flow prevention device
- 9 Tundish

The system should be pressurised to 0.8bar, indicated on the digital display with no heating demand.

Drain points

Drain taps must be provided at all low points of the system, which will allow the entire system to be drained.

Drain taps shall be to the current issue of BS2879.

Water treatment

Existing system- It is essential that prior to installing the new boiler the system is thoroughly flushed.

New system- For optimum performance after installation, the boiler and its associated central heating system should also be flushed.

Flushing shall be carried out in accordance with BS 7593, a chemical cleanser can be used either Sentinel X300, X400 or Fernox F3 are suitable.


It is recommended to flush existing systems first before fitting the new boiler.

- Ensure all cleanser is removed from the whole system before adding an inhibitor.

For long-term corrosion protection after flushing, an inhibitor suitable for stainless steel heat exchangers can be used. Either Sentinel X100 or Fernox F1 inhibitor can be used.


Artificially softened water- BS7593 notes that soft water has an increased potential for corrosion and this may influence the choice of corrosion inhibitor. Where water is artificially softened, it is advisable to feed unsoftened water to drinking water taps. The boiler primary circuit should only be filled with unsoftened water.

7.3 Dimensions

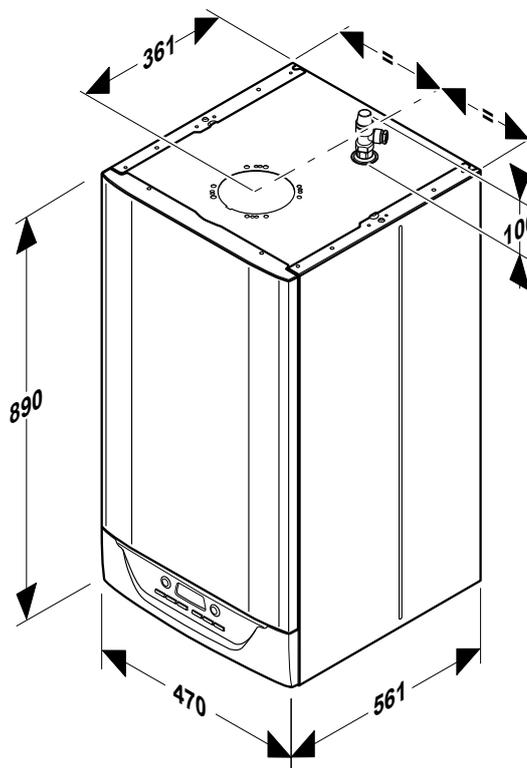

7.4 Mounting


- Make sure that the equipment used for implementing the installation is compatible with that of the appliance.
- Determine the assembly location. See the "Appliance location" chapter.

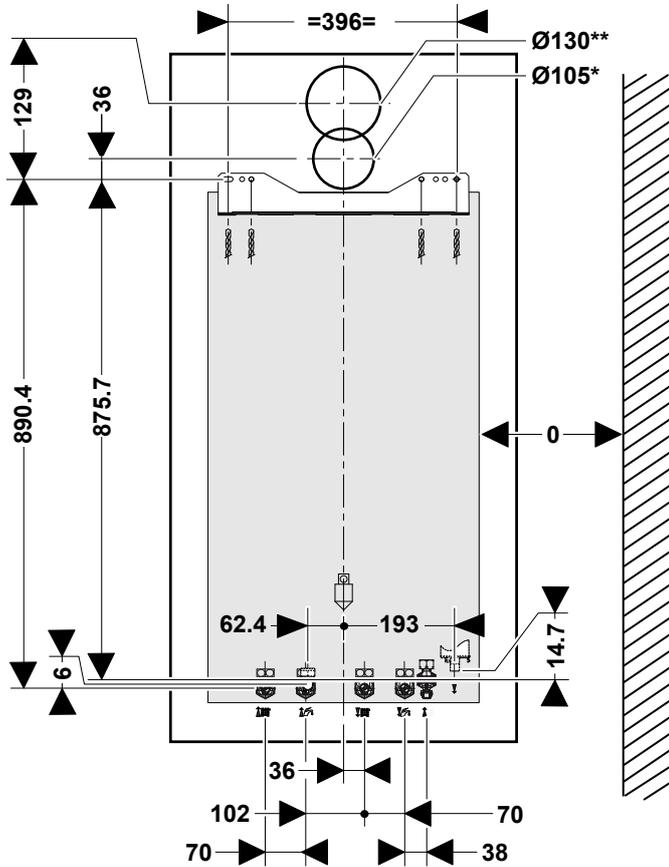

* 60/100 flue
** 80/125 flue

- Take the wall template and place in the desired position on the wall, giving due consideration to the required boiler clearances, see chapter "Appliance location ▶ Clearances", and the flue you are fitting.

7.4.1 Fixing to the wall

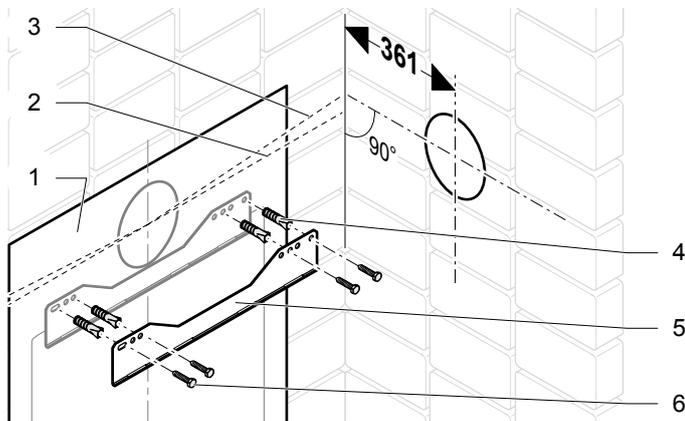

Key

- 1 Wall template
- 2 Standard flue length horizontal
- 3 2.5° 44mm/metre inclined extended flue length
- 4 Wall plug
- 5 Hanging bracket
- 6 Screw (not supplied)

Flue hole cutting

- Mark the position of the flue centre.
- Remove the wall template, then drilling the flue hole.



The flue is designed with an internal fall of 44mm/metre (2.5°), therefore the hole can be drilled horizontally.

- Use a 105mm diameter core drill for external access flue installation (60/100 flue) (80/125 flue ▶ Ø130mm).
- Use a 125mm diameter core drill for internal access only flue installation (60/100 flue) (80/125 flue ▶ Ø150mm).



If flue extension pipes are to be used then a core drill size of 125mm is required. This will allow the extension pieces to slope at 44mm/metre (2.5°) towards the boiler.

- If fitting a side flue, extend the flue centre line into the corner then 130mm along the adjacent wall.
- If fitting an extended side flue, determine the flue hole centre by extending the dashed inclined line on the template to the side wall. This dashed line is drawn at 44mm/metre (2.5°) rise from the boiler. Where this line reaches the side wall, a horizontal line should be marked. The vertical centre line of the flue should then be marked at 130mm from the back wall. To allow for the flue passing through the wall at this angle a 125mm hole should be drilled irrespective of internal or external installation.

Hanging bracket fixing


Due to the varied site conditions, fixings are not supplied and advise that the installer should supply those which are suitable.

- Drill the holes for the fixing screws in accordance with the wall template.
- Fix the hanging bracket on the wall.

7.4.2 Boiler hanging



With regards to the Manual Handling Operations, 1992 Regulations, the following lift operation exceeds the recommended weight for a one person lift, refer to chapter "Manual Handling".

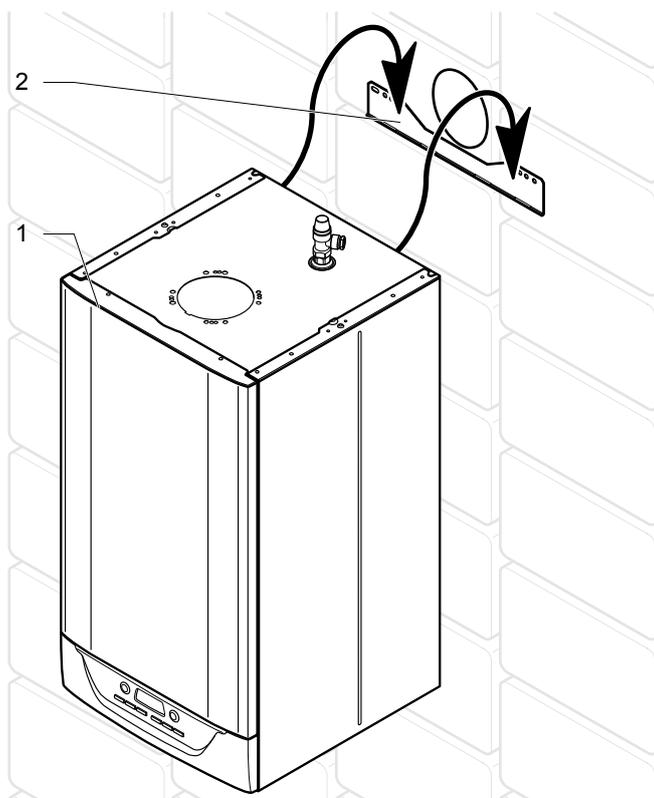

Key
 1 Boiler
 2 Hanging bracket

- Lifting the boiler into position, lean the top of the boiler slightly to the wall and position just above the hanging bracket.
- Lower the boiler slowly and engage onto the hanging bracket

8 Hydraulic connection

8.1 Gas and water connections

The whole of the gas installation, including the meter, should be inspected, tested for tightness and purged in accordance with the current issue of BS6891 and in IE the current edition of I.S.813 "Domestic Gas Installations".




The appliance may contain a small amount of water, place a water container beneath the boiler connections.

- Take care to clean the pipes before assembly removing any debris or burrs. Grease and oils may need to be removed they are not possible to remove by cleansing and flushing. Foreign bodies in the system may enter the appliance and interrupt its operation.
- Do not use any solvent products, due to the risk of damaging the circuit.



Do not perform any 'hot work' directly under the appliance, this may cause damage to the appliance base. Heat may also damage the isolation valves. Always pre-assemble pipes before fitting them to the boiler.

- Only use original seals supplied with the appliance.
- Check that there are no leaks. Repair if necessary.

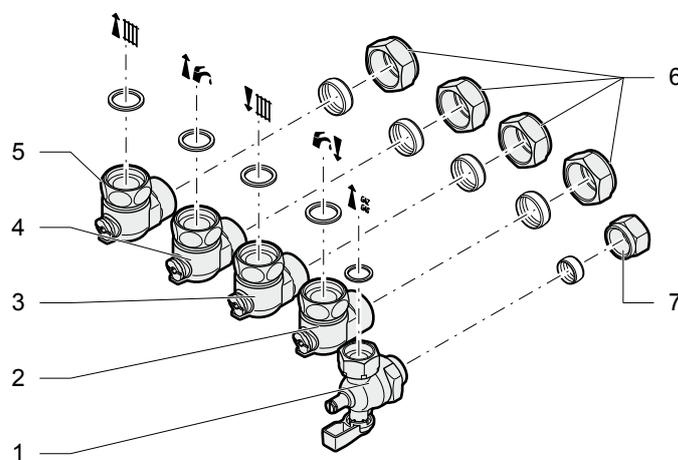


Key

- 1 Gas service isolating valve with pressure test point + sealing washer 1/2"
- 2 Domestic hot water outlet isolating valve + sealing washer 3/4"
- 3 Heating flow isolating valve + sealing washer 3/4"
- 4 Cold water inlet isolating valve + sealing washer 3/4"
- 5 Heating return isolating valve + sealing washer 3/4"
- 6 Connection Ø O.D. 22 mm
- 7 Gas connection Ø O.D. 15 mm

- Use only the original gas cock GER/1 DN15, CE-0085 CL 0082
- Use only the olive and flat seal washer supplied with the gas cock.


8.2 Safety Discharge Valves

8.2.1 Heating safety valve

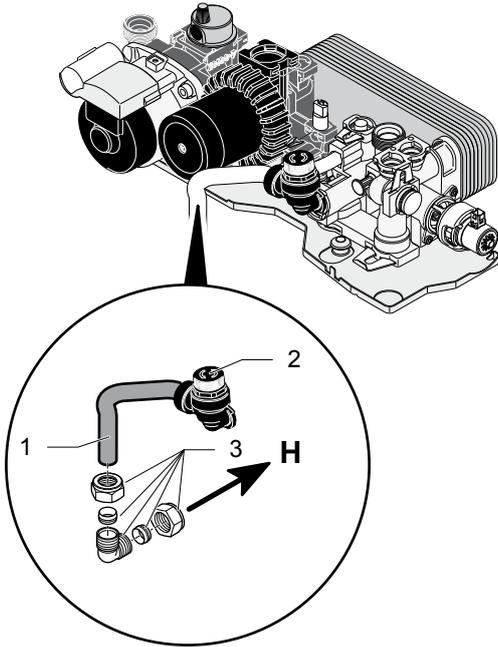

- Key
 1 Pressure relief valve pipe
 2 Heating safety valve
 3 Compression fitting
 H Pressure relief valve outlet - to outside

8.2.2 Combined temperature and pressure relief valve

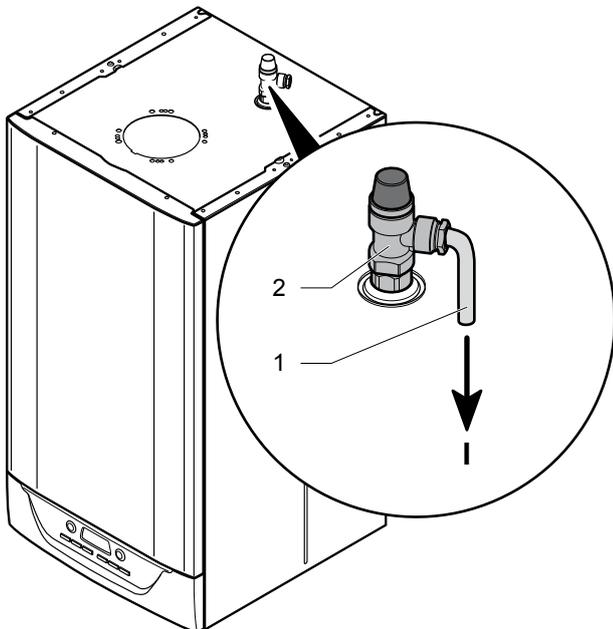

- Key
 1 Pipe for Pressure relief valve
 2 DWH safety valve
 I Pressure relief valve outlet - to outside


- Connect the safety valves. The drain equipment must allow the water flow to be seen.

This must be extended, using not less than 15mm o.d. pipe, to discharge, in a visible position, outside the building, facing downwards, preferably over a drain.

To ease future servicing it is advisable to use a compression type fitting to extend the safety discharge valve tube.

The pipe must have a continuous fall and be routed to a position so that any discharge of water, possibly boiling, or steam cannot create any danger to persons, damage to property or external electrical components and wiring.

8.2.3 Discharge

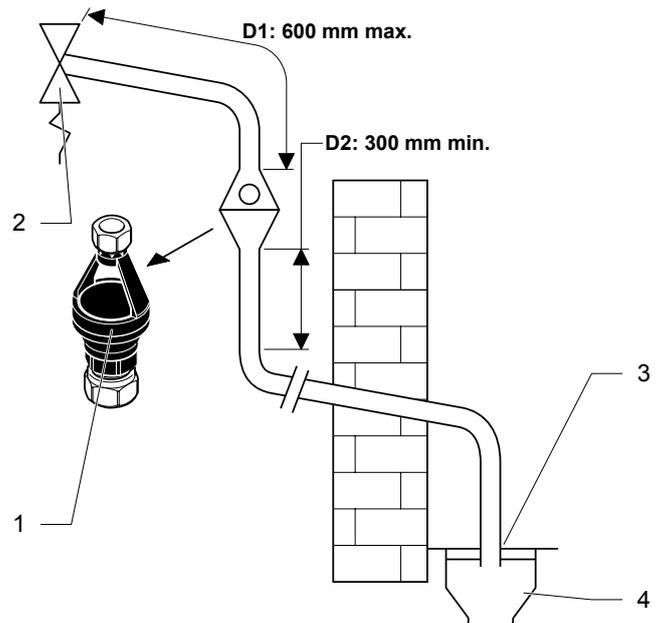

- Key
 1 Tundish
 2 Pressure relief valve
 3 Trapped gully
 4 Fixed grating

Combined Temperature and Pressure relief and Expansion Valve Discharge arrangement

The outlet connections of the temperature and pressure relief valve must be connected to the tundish provided. The tundish must be installed with no greater than 600mm of 15mm pipe (D1) with the tundish fitted in the vertical position. It is permissible to connect the expansion valve to this pipe if practicable to do so, by means of a tee piece. If not the expansion valve must be fitted with a tundish and discharged using the same methods. The Tundish must be left in a visible position for the user and in the same space as the boiler and away from any electrical components.

The pipe connected to the underside of the tundish (D2) must be vertical for the first 300mm of length before any bend or elbow, then any horizontal pipework must be installed with a fall of at least 1 in 200 to its final discharge location. The pipe must be either metal or other approved safe material (e.g complying with BS 7921-1 2006). The minimum pipe size is 22mm copper (or equivalent internal diameter material). To calculate the D2 pipe maximum equivalent length see the table and the worked example. As an alternative BS 6700:2006 can be used.

Sizing of copper discharge pipe "D2" for common temperature relief

Valve outlet size	Minimum size of discharge pipe D1	Minimum size of discharge pipe D2 from tundish	Maximum resistance allowed, expressed as a length of straight pipe (i.e. no elbows or bends)	Resistance created by each elbow or bend
G1/2	15mm	22mm	Up to 9m	0.8m
		28mm	Up to 18m	1.0m
		35mm	Up to 27m	1.4m
G3/4	22mm	22mm	Up to 9m	1.0m
		28mm	Up to 18m	1.4m
		35mm	Up to 27m	1.7m
G1	28mm	22mm	Up to 9m	1.4m
		28mm	Up to 18m	1.7m
		35mm	Up to 27m	2.3m

The above table is based on copper tube. Plastic pipes may be of different bore and resistance. Sizes and maximum lengths of plastic should be calculated using data prepared for the type of pipe being used.

Worked example

The product is supplied with a G1/2 T&P valve the pipe D2 is measured to be 4m in length from the tundish to the point of discharge with 4 elbows.

7m of 22mm pipe = 4m

4 22mm elbows = 0.8 X 4 = 3.2m

3.2 + 4 = 7.2m and permissible in 22mm pipe should the calculation not be permissible in 22mm the pipe must be increased to 28 or even 35mm copper pipe or internal diameter equivalent.

If in multiple dwellings a common discharge pipe is used it should be at least one pipe size larger than the largest individual discharge pipe to be connected.

Connection into soil stacks

Under normal circumstances it is not permissible to discharge the pipe (D2) into a soil stack unless the following conditions are met

1. The soil stack and its seals are clearly designed and marked to withstand the temperatures of the water which could be discharged under fault conditions.
2. A mechanical type seal trap is used (water traps are not permitted) with a temperature rating defined as above
3. It is a separate branch pipe with no other sanitary appliances connected to it.
4. If the branch pipe used is plastic it must be either
 - a. Polybutalene (PB) Class S of BS 7921-2:2006
 - b. Cross linked polyethylene (Pe-X) Class S of BS 7921-3:2006
 - c. A continuous marking applied to the pipe to warn that no sanitary appliance may be fitted to it

Termination of the discharge pipe



The discharge pipe must terminate in a safe place where there is no risk to persons in the vicinity of the discharge.

Acceptable terminations are

1. Into a trapped gully, the end of the pipe may be below the grating but above the water seal
2. Facing downward and up to 100mm above an external surface (providing a type of wire cage is fitted to prevent contact)
3. Discharged at a high level into a metal hopper and downpipe (the end of the pipe must be visible)
4. Discharged onto a roof providing that
 - a. The roof is constructed of a material designed to withstand the temperatures
 - b. The gutter or drain system connected to the roof is at least 3m away from the point of discharge



The tundish should be installed so that it is visible to the occupants and is positioned away from electrical devices.



The discharge pipes (tundishes) drain valves etc. shall be positioned away from any electrical components.



Cylinder relief valve connections should not be used for any other purposes.



No valve should be fitted between the expansion valve and the storage cylinder.

8.5 Connection to the condensate trap



Condensate produced by the appliance is mildly acidic (pH 3.5 - 5.0). Use protective gloves




Condensate must only be discharged in accordance with these instructions.



The volume of condensates evacuated can reach about 15 litres per day for a detached house. This volume is negligible compared to the volume of waste water discharged by a house, because the condensates are diluted in this water.

- Refer to BS5546 or BS6798 for advice on disposal of boiler condensate.

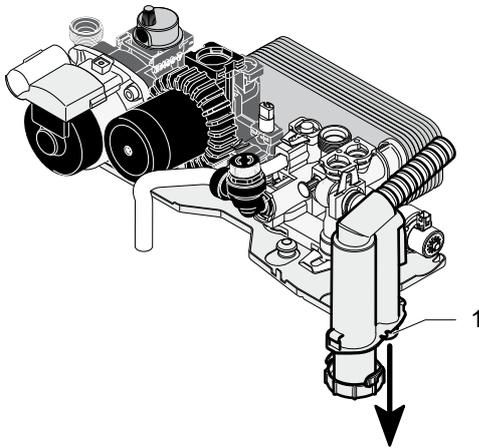

Key

1 Condensate pipe

- Make sure there is no protective plug fitted.
- Connect the condensate pipe (1).




The pipe should have a fall of a least 2.5° 44mm/ metre away from the boiler.

Condensate should, if possible be discharged into the household internal drainage system.


- If this is not practicable, discharge can be allowed into the external household drains or a purpose designed soak away, refer to diagram overleaf.

It is recommended that any external condensate drain pipe is protected and also preferably of 32mm diameter, to prevent freezing in adverse weather conditions.


- Always ensure the pipe is installed with the correct fall
- Use **push fit** plastic pipe to connect to the condensate outlet - do not use metal pipes. It is permissible to use a condensate neutraliser providing that it is checked for correct operation.

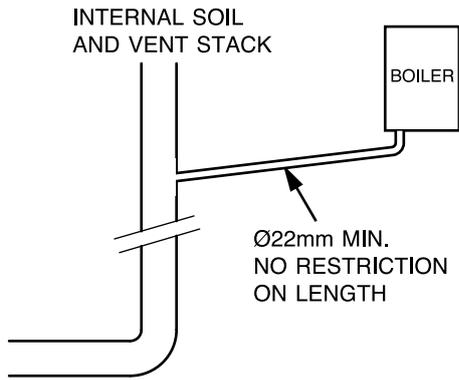

Internal Soil and Vent Pipe

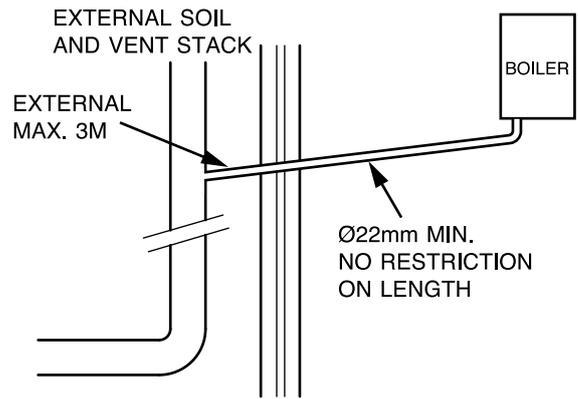


External Soil and Vent Pipe

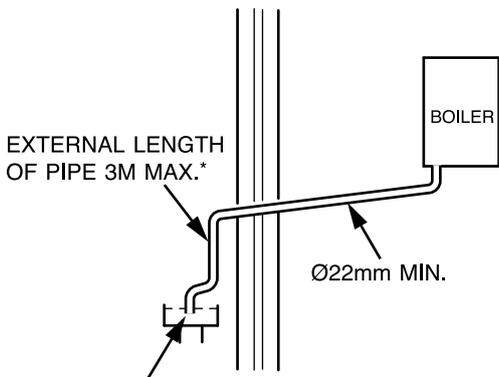


OPEN END OF PIPE DIRECT INTO GULLEY BELOW GROUND BUT ABOVE WATER LEVEL

*NOTE: FOR EXTENDED PIPE RUNS 32mm DIA. PIPE SHOULD BE USED.


External Termination to a Gully or Hopper

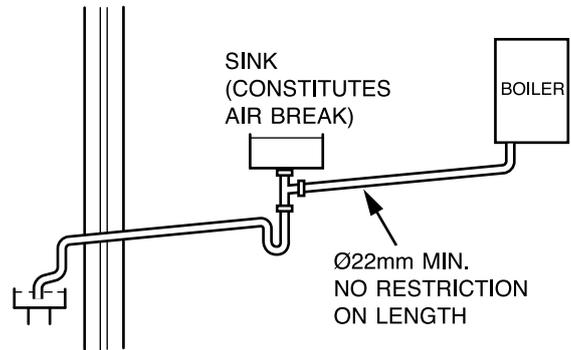

Internal Termination into Combined Sink Waste

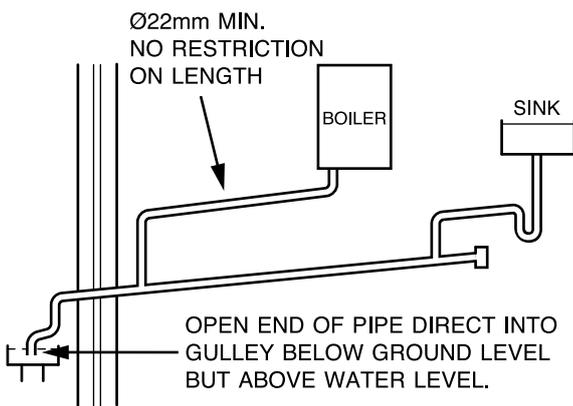

Internal Termination Downstream of Sink Waste

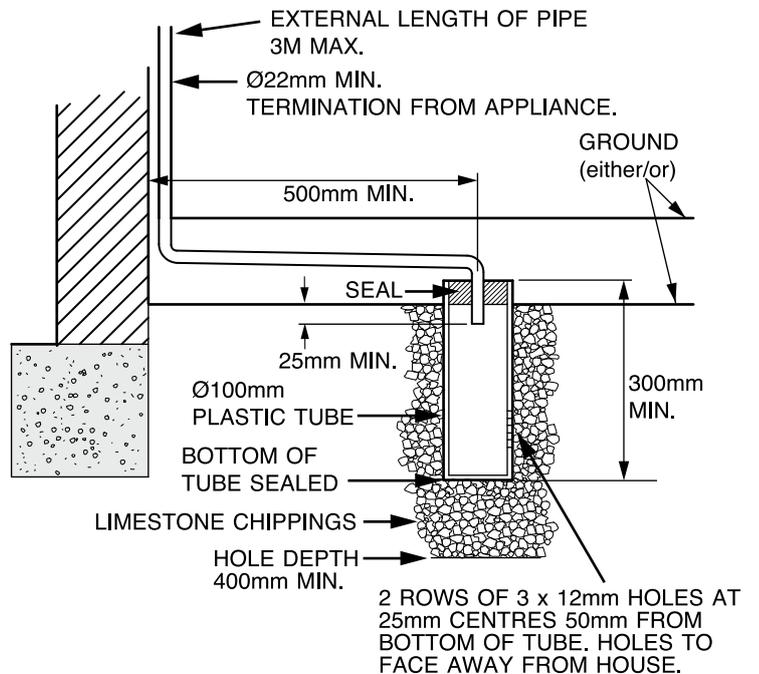

External Termination into Soakaway

NOTE: PIPEWORK SHOULD ALWAYS FALL AWAY FROM BOILER BY AT LEAST 2.5° 44mm FOR EVERY 1M.

9 Evacuation of combustion gas


9.1 Regulation



Only flue accessories supplied by Glow-worm must be used.

Different flue outlet configurations can be carried out.

- Consult your supplier for more information about the other possibilities and associated accessories.

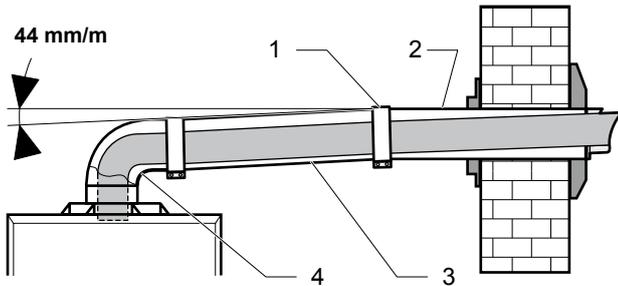

- Standard flue terminal kits have an in-built fall back to the boiler to drain the condensate. These can be fitted level between the appliance and the termination position. All other extended flues must have a fall of at least 44mm/m

The maximum length of the flue outlet is defined according to its type (for example C13).

- Whatever the kind of flue system chosen, observe the minimum distances indicated in the chart **overleaf** to position the flue terminals.
- To install the flue, refer to the separate flue instruction supplied with your appliance.
- Explain these requirements to the user of the appliance.



If necessary, you must install a terminal protection kit.



Caution! The connection between the flue elbow and the flue outlet must be sealed.

In GB the minimum acceptable siting dimensions for the terminal from obstructions, other terminals and ventilation openings are shown in diagram overleaf.

In IE the minimum distances for flue terminal positioning must be those detailed in I.S.813 "Domestic Gas Installations".


The terminal must be exposed to the external air, allowing free passage of air across it at all times.

Being a condensing boiler some plumbing may occur from the flue outlet. This should be taken into consideration when selecting the position for the terminal.


Carpports or similar extensions of a roof only, or a roof and one wall, require special consideration with respect to any openings, doors, vents or windows under the roof. Care is required to protect the roof if made of plastic sheeting. If the carport comprises of a roof and two or more walls, seek advice from the local gas supply company before installing the boiler.



If the flue terminal is positioned near a light source insects may enter the flue system. Where safe and practical to do so advise the homeowner to check the flue outlet and clear visible insects from the terminal end.

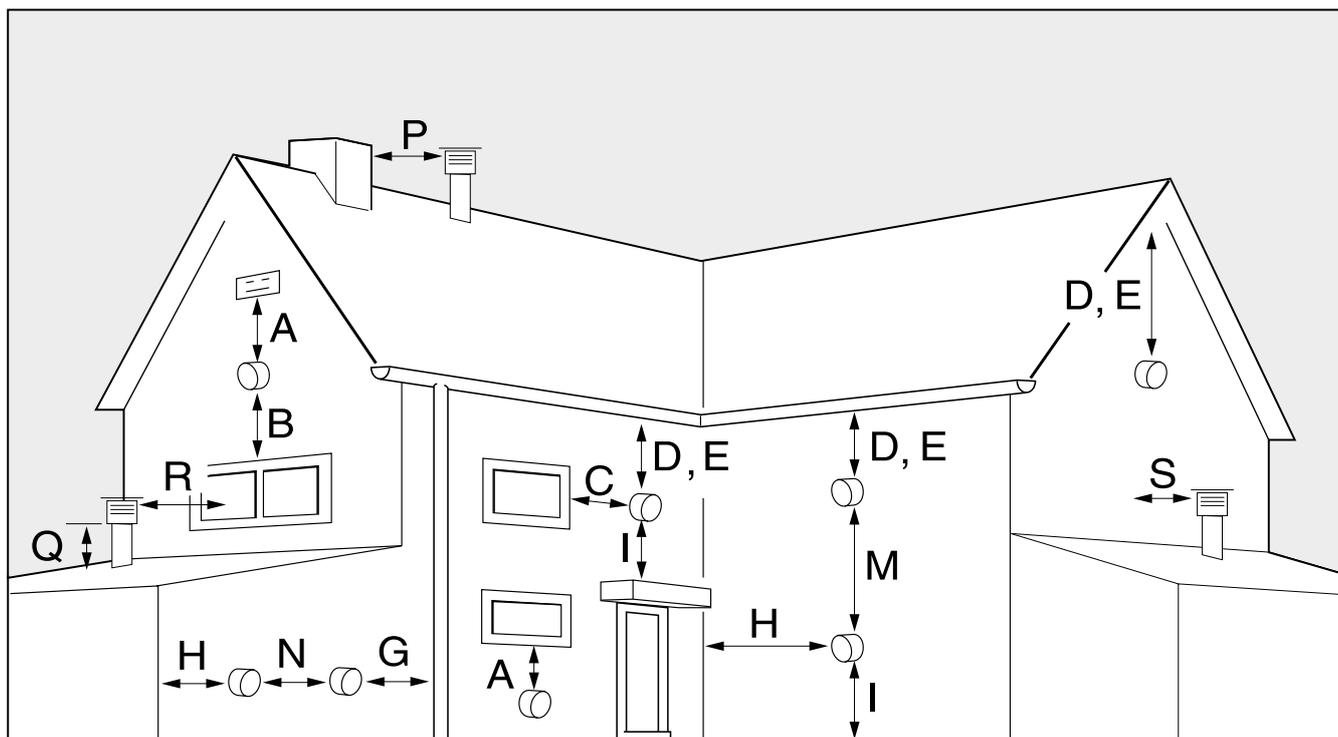

UNDER CAR PORT etc.

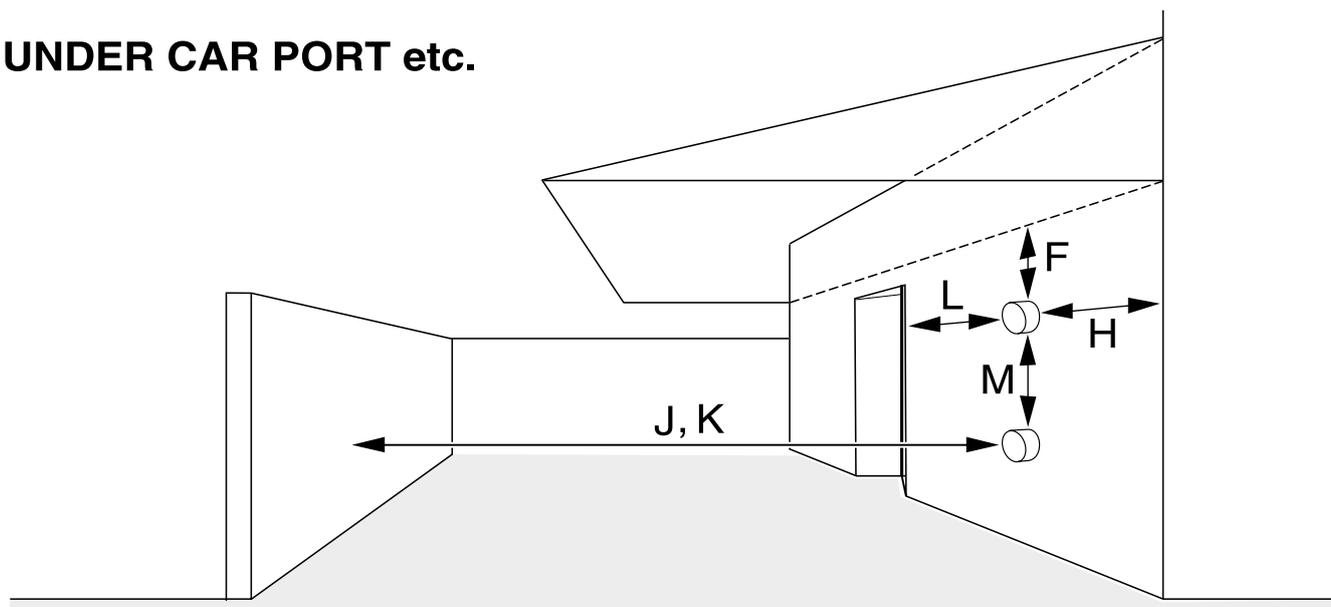


Position	Position of the flue terminal	mm
Horizontal flues		
A	directly below an opening, air brick, opening windows	300
B	above an opening, air brick, opening windows	300
C	horizontally to an opening, air brick, opening windows	300
D	below gutter, drain/soil pipe	25
E	below eaves	25
F	below a balcony or car port	25
G	from vertical drain pipes and soil pipes	25
H	from internal/external corners	25
H*	to a boundary alongside the terminal	300
I	above adjacent ground or balcony level	300
J*	from surface or a boundary facing the terminal	600

Position	Position of the flue terminal	mm
L	from opening (door/window) in car port into dwelling	1200
M	vertical from a terminal	1500
N	horizontally from a terminal	300
Vertical flues		
P	from another terminal	600
Q	above roof level	300
R	from adjacent opening window	1000
S	from adjacent wall to flue	300

(* These dimensions comply with the building regulations, but they may need to be increased to avoid wall staining and nuisance from plumbing depending on site conditions.

9.2 Flue configuration description

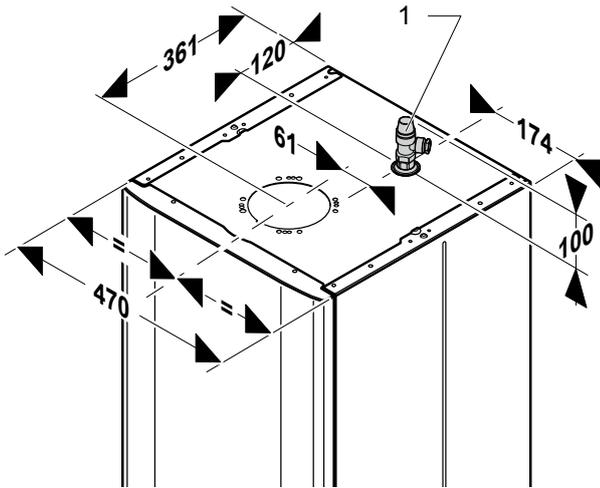

Key
1 DWH safety valve




Be careful not to damage the DWH safety valve during installation of the flue.

9.2.1 Horizontal concentric flue \varnothing 60/100 mm or \varnothing 80/125 mm (C13 type installation)




If necessary, you must install a terminal protection kit.

\varnothing 60/100 mm

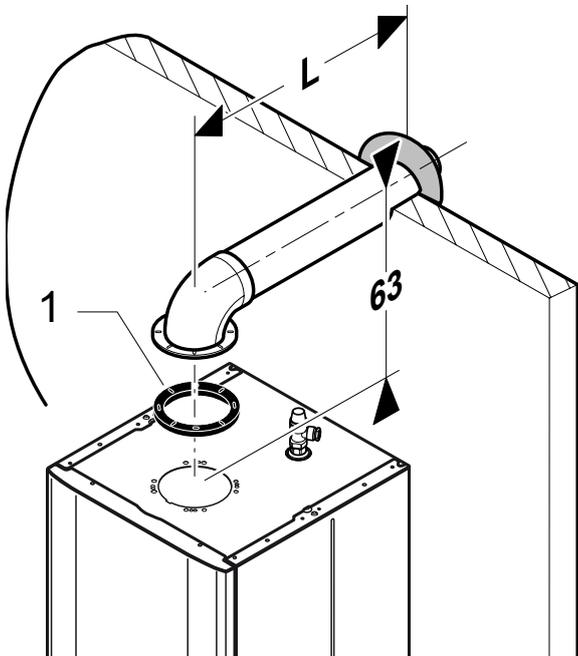

Key
1 Gasket (fitted)

\varnothing 80/125 mm

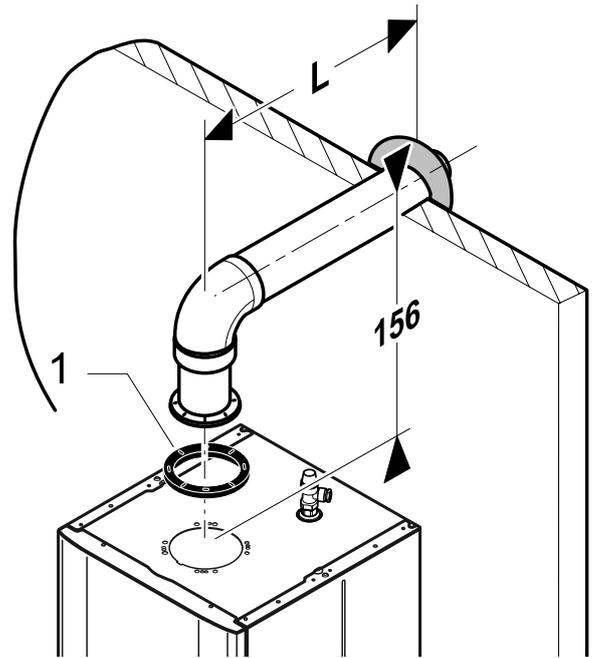


Key
1 Gasket (fitted)

Type	Max length
\varnothing 60/100	10 m
\varnothing 80/125	12 m

Each time an additional 90° bend is necessary (or 2 at 45°), the length (L) must be reduced by 1 m.

9.2.2 Vertical concentric flue Ø 60/100 mm or Ø 80/125 mm (C33 type installation)

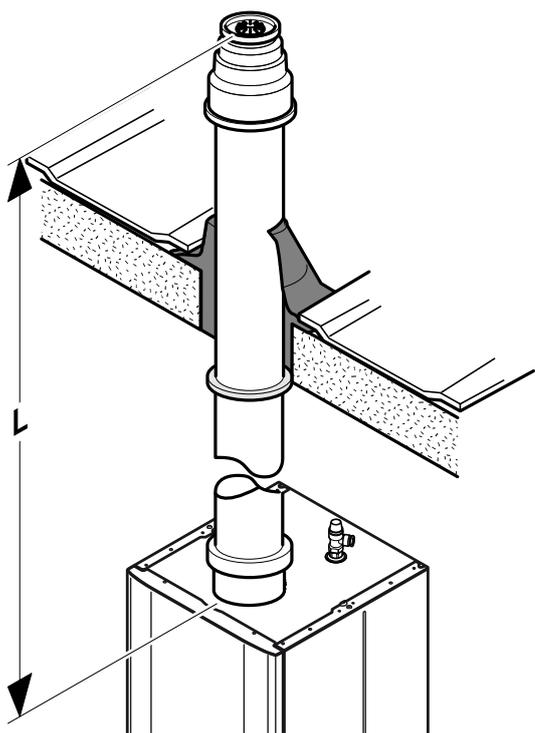

Type	Max length (L)
Ø 60/100	10 m
Ø 80/125	13 m

Each time an additional 90° bend is necessary (or 2 at 45°), the length (L) must be reduced by 1 m.

9.2.3 Multiple boiler chimney flue Ø 60/100 mm (C43 type installation)




The flue connecting from the appliance to the flue system must be supplied from the manufacturer of the boiler.



C43 flue systems must not be a 'pressurised system' but act under natural draught principles



C43 type flue systems must have their own condensate drain fitted and not allow condensate to mix into other appliances

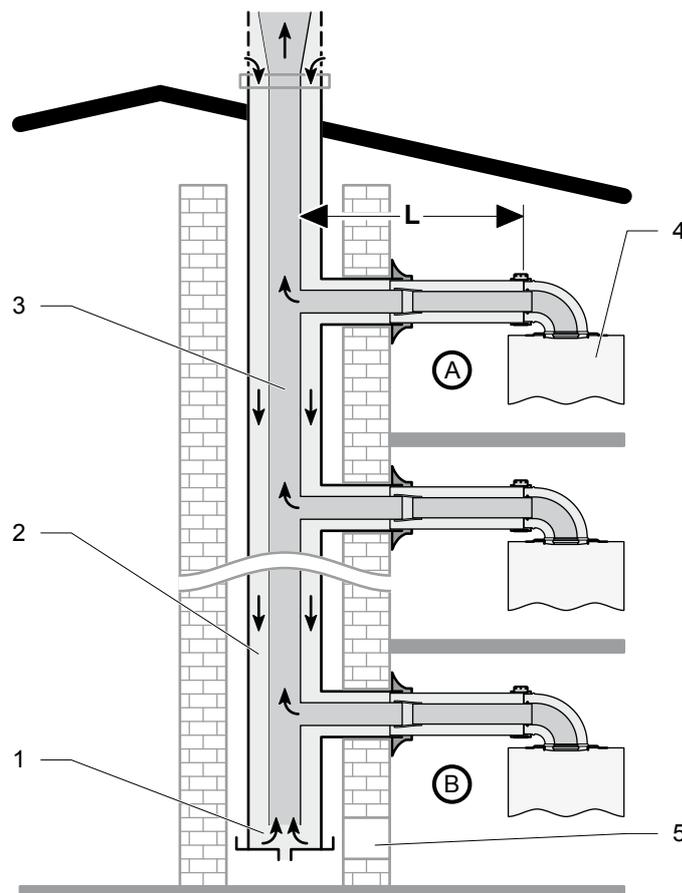


- Key
- 1 Pressure balancing system
 - 2 Air-inlet pipe
 - 3 Collector pipe
 - 4 Boiler
 - 5 Inspection hatch
 - A Final storey
 - B Ground floor

Type	Max length (L)
Ø 60/100	10 m

Each time an additional 90° bend is necessary (or 2 at 45°), the length (L) must be reduced by 1 m.

10 Remove the front panel

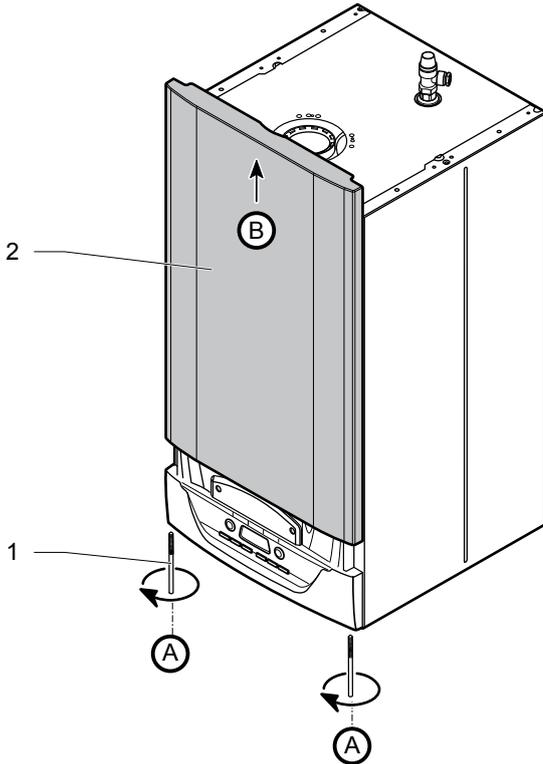

- Key**
- 1 Front panel retaining screw
 - 2 Front panel

- Undo the two screws (1) on the underside of the front panel and remove the front panel (2).

11 Electrical connections



Incorrect installation can cause electric shock or appliance damage. The electrical connection of the appliance must be made only by a qualified engineer.

The appliance must be connected directly to an accessible, fixed, switched, electrical outlet.

The external wiring must be earthed, with correct polarity and in accordance with current standards.

The manufacturer declines any responsibility for damages to persons or others caused by the incorrect installation of the appliance earthing. This includes failure to comply with current standards.

Electrical components have been tested to meet the equivalent requirements of the BEAB.

- Do not use cable greater than 10 mm in diameter for the electrical connections.

All system components must be of an approved type.


- Do not interrupt the mains supply with a time switch or programmer.

The boiler is suitable for installation in bathroom zones 2 and 3.

11.1 Access to main board




It is necessary to remove the appliance front cover.

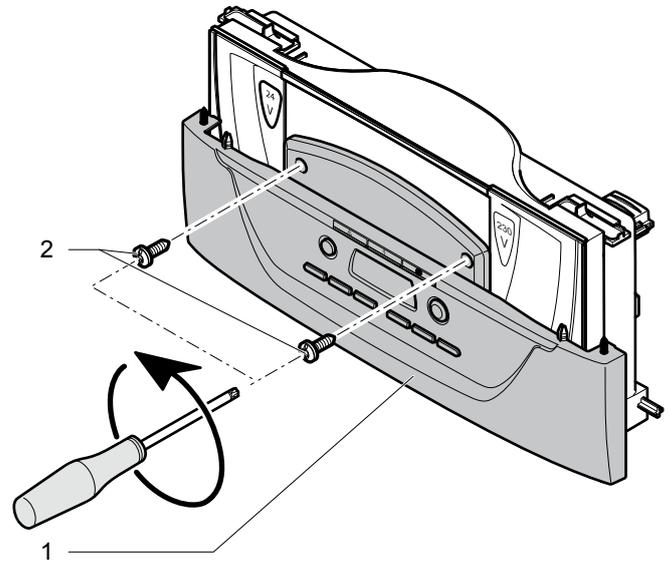

- Key**
- 1 User interface
 - 2 Fastening screw


- Pivot the user interface to access the electrical panel.

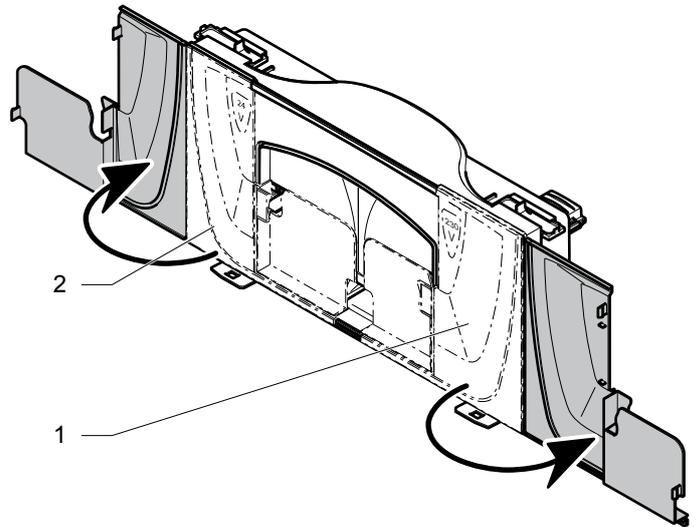

- Key**
- 1 230 V access cover
 - 2 24 V access cover

- Tilt the user interface panel to access the 24V and 230V connections.

11.2 Main board

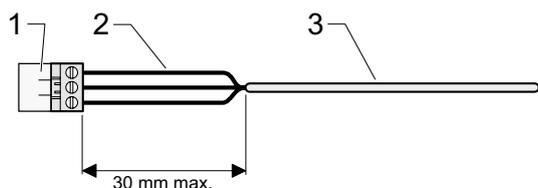

Key

- 1 Connector
- 2 Electrical wires
- 3 Insulation

When you connect the electrical wires to a connector on the electronic board:


- Keep a distance of a maximum of 30 mm between connector (1) and the start of the insulation (3).
- If using single core wires are used(2) ensure that the are wrapped together in an insulating sheath.
- Fix the cables in the cable-clamp on the eBox.

11.3 Electrical wiring

Connection of the whole electrical system and any heating system controls to the electrical supply must be through a common isolator.

Isolation should preferably be by a double pole switched fused spur box having a minimum contact separation of 3mm on each pole. The fused spur box should be readily accessible and preferably adjacent to the boiler. It should be identified as to its use.

A fused three pin plug and shuttered socket outlet may be used instead of a fused spur box provided that it is not used in a room containing a fixed bath or shower.

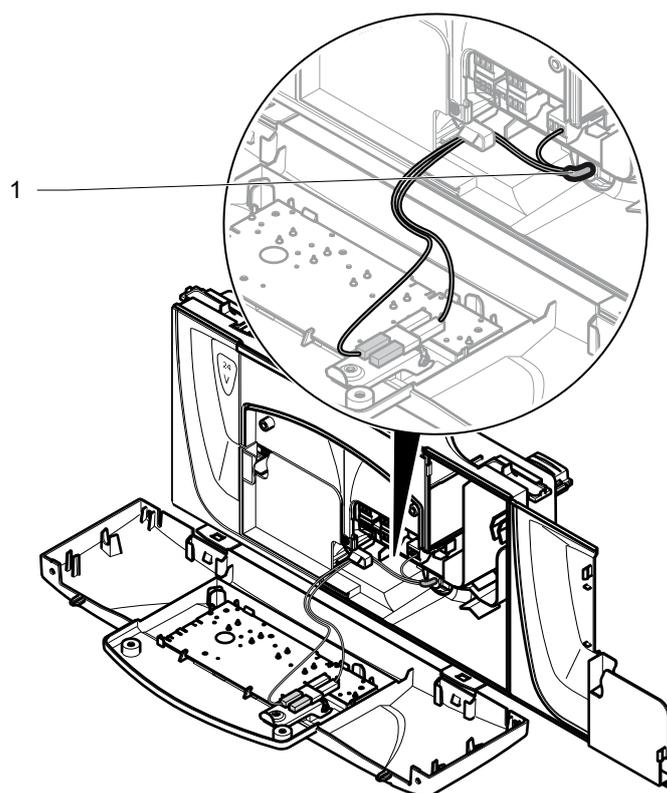

Key


- 1 Power supply cable

- Connect the appliance's power cable to the 230 V single-phase network + earth.
- Connect the appliance in accordance with the live and neutral connections.

11.3.1 230V permanent supply



All cables connected to the appliance should be permanently fixed to the wall.

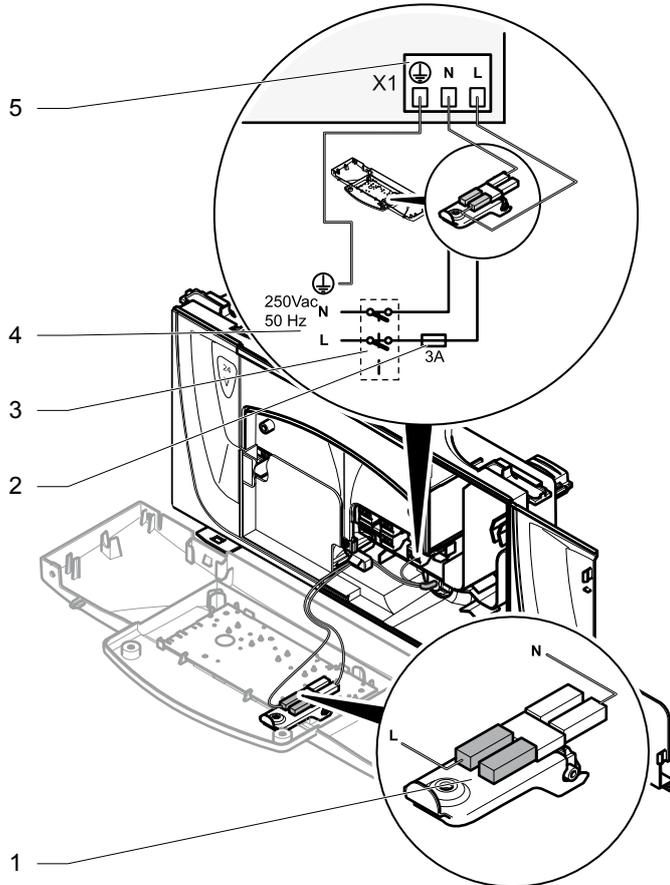

Key


- 1 Connector
- 2 Fuse
- 3 Double pole connector
- 4 230V permanent supply
- 5 Main board terminal block
- ⊕ = Mains earth
- N = Mains neutral
- L = Mains live

- Connect mains supply as described.

11.4 External accessories



Under no circumstances must any mains voltage be applied to any of the terminals on the 24V connection plug.

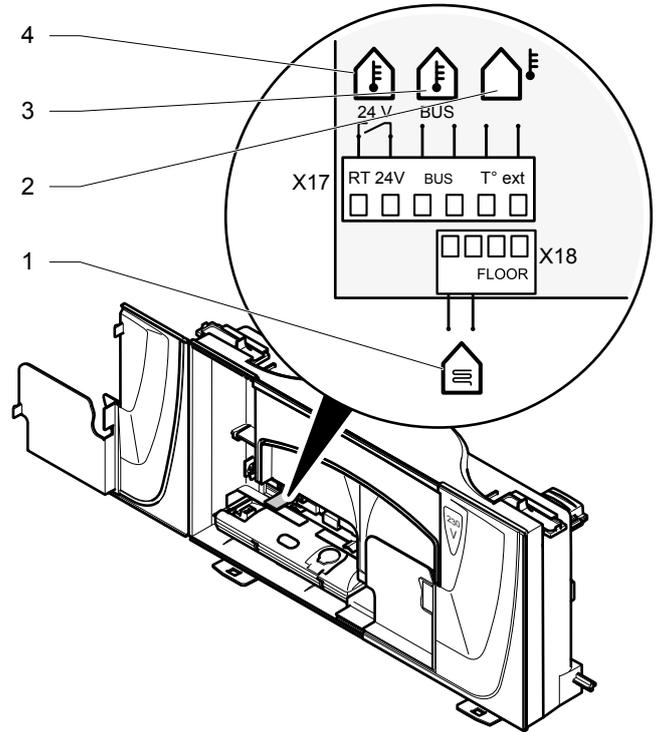

Key

- 1 Overheating safety connector for heating floor
- 2 Outdoor sensor connector
- 3 Ebus room thermostat connector or Ebus radio receiver
- 4 24V room thermostat connector


- Fit external controls in accordance with the rules in force.

11.5 Testing the electrical connections

Carry out preliminary electrical system checks as below:

- Resistance to earth (<1 Ohm)
- Short circuit test (L-N)
- Resistance to earth (L-E)
- Polarity check

11.6 Wiring diagram

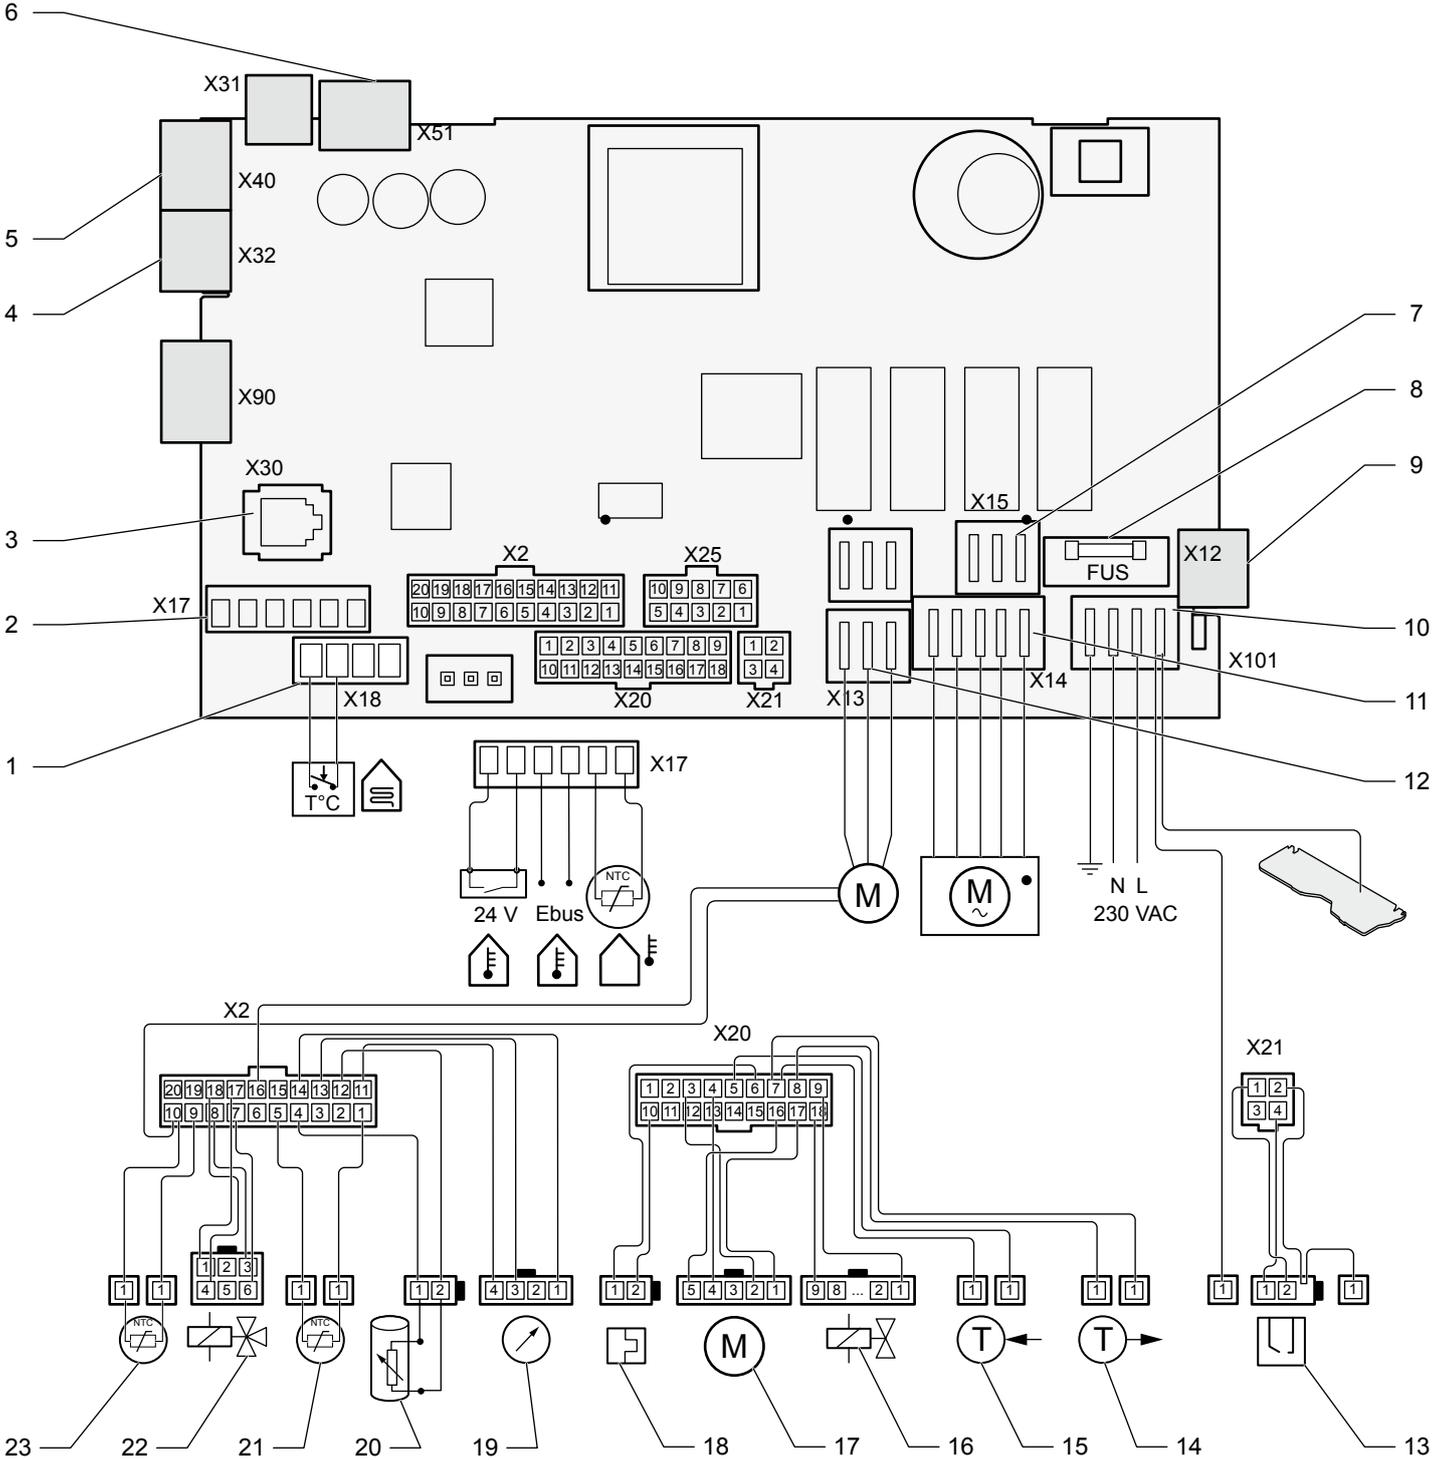

- | | |
|--|--|
| <p>Key</p> <ul style="list-style-type: none"> 1 Overheating safety connector for heating floor 2 Control accessories connector 3 Appliance diagnostic connection 4 Solar connector 5 24V option card 6 User interface 7 Connector for automatic filling kit 8 Fuse 2A 9 Connector for 230 V option 10 Main supply 230V 11 Heating pump | <ul style="list-style-type: none"> 12 Domestic hot water pump 13 Combined spark and flame recognition electrode 14 Heating outlet temperature sensor 15 Heating return temperature sensor 16 Gas valve 17 Fan 18 Thermal fuse 19 Heating pressure sensor 20 Storage tank temperature sensor 21 Hot water heat exchanger output temperature sensor 22 Three way valve 23 Hot water temperature sensor |
|--|--|

12 Commissioning



At the time of commissioning, complete all relevant sections of the Benchmark Checklist located in the centre pages of this document.


The commissioning should be carried out by a competent person approved at the time by the Health and Safety Executive and in accordance with the current issue of BS6798.

12.1 Switching on

- Do not operate the boiler without water.
- Make sure that the system has been thoroughly flushed out with cold water and that all cleanser if used has been removed.
- With the gas service isolation valve closed, with no demand from any external controls and the power supply to the boiler switched off.
- Test for gas soundness and purge air from the gas supply.
- Press the on/off button to activate the appliance.
- Make sure that the domestic hot water and heating functions on your appliance are not activated.

12.2 Filling the CH system (Central heating)

- Make sure that the installation's cold-water inlet isolating valve is open.
- Open isolating valves located on external filling loop: they must be positioned in the direction of the flow.

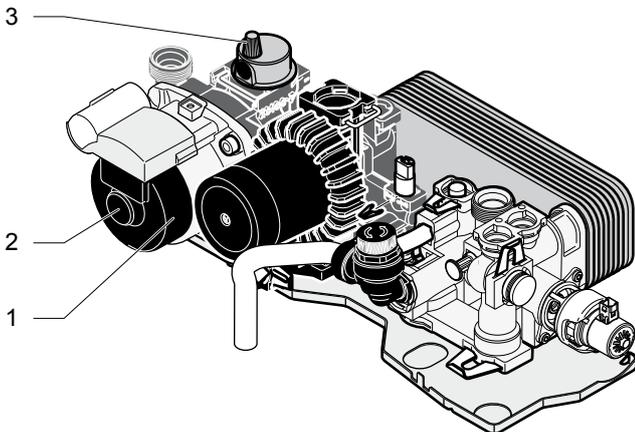

Key

- 1 Air vent
- 2 Pump
- 3 Screw for the pump shaft

- Open the plug on the air vent located on the pump and the automatic air vents on the installation.
- If the pressure shown on the pressure gauge is less than 0.4 bar, top up the installation by connecting external filling loop to the appliance until you obtain a pressure of between 0.8 and 1.2 bars.



When turning the 230Vac supply on to the boiler should the water pressure be less than 0.5 bar an automatic air vent function will be activated for a period of 5 minutes. During this time the pressure should be increased and air vented from the system. Note that the burner will not fire in either CH or DHW mode and the display will blink displaying the current water pressure.

- Vent air from each radiator until the water flows normally, then close the vents.
- Leave the pump's air vent open.




The following two operations will unblock the pump's engine after a prolonged storage period and will purge the air from the pumps circuit.

- Remove the screw from the pump shaft and introduce a flat screwdriver. A trickle of water, under no pressure, should normally come out of the pump.
- Rotate the pump shaft through several turns, then replace the screw.

12.3 Filling DHW Circuit

- Open the various hot water taps to fill the DHW circuit.

12.4 Filling the Condensate Trap

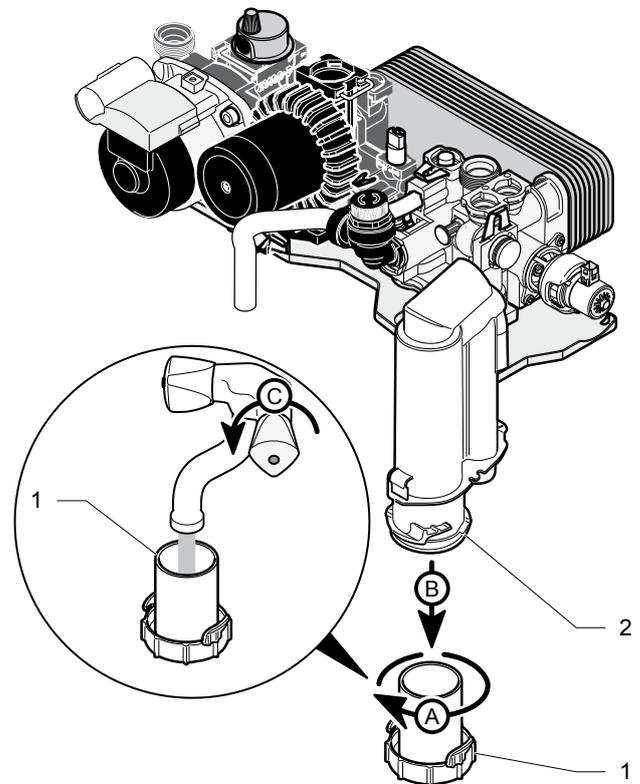

Key

- 1 Filling trap
- 2 Condensate trap

- Fill the trap 3/4 full with water (1).

- Activate the Heating and Domestic Hot Water functions.
- Run the appliance for at least 15 minutes, with a heating temperature set to greater than or equal to 50°C (not applicable for an installation with underfloor heating).
- Vent air from each radiator again until the water flows normally, then close the vents.



Verify that condensates drain correctly via the flexible pipe. If not, prime the siphon by pouring a ¼ litre of water down the combustion products flue outlet.

- If you have difficulties in removing the air, launch the air-removal programs in the heating circuit (see the chapter ("Technical settings for the appliance and list of parameters").
- Make sure that the pressure indicator shows a value of 0.8 bars; otherwise, fill the appliance again.

12.5 Initial lighting


12.5.1 Control



The combustion for this appliance has been checked, adjusted and preset at the factory for operation on natural gas (G20) as defined on the appliance data label. No measurement of the combustion is necessary. Should the appliance require to be converted to LPG gas ensure you follow the gas conversion section before lighting the boiler.

- Check that the appliance has been installed in accordance with the instructions.
- Check the integrity of the flue system and flue seals.
- Check the integrity of the appliance combustion circuit and relevant seals.
- Check that all internal/external controls are calling for heat.
- Check that the gas service isolation is open.
- To adapt the appliance to another type of gas, see chapter "LPG conversion".

12.5.2 Adjusting the temperature

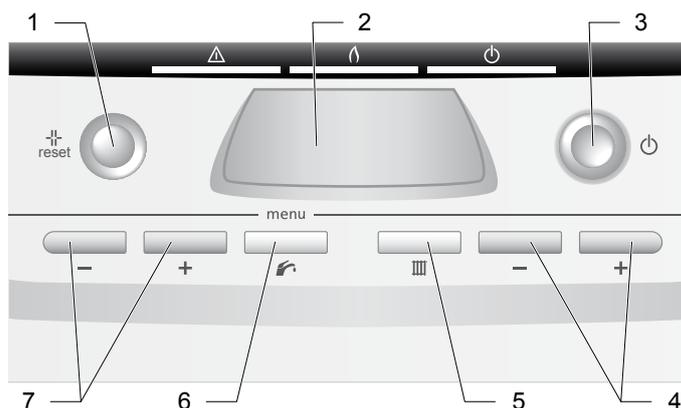

Key

- 1 Reset button
- 2 Display
- 3 On/Off button
- 4 Heating temperature controls (+/-)
- 5 Central Heating Function Button/Indicator
- 6 Domestic hot water Function Button/Indicator
- 7 Domestic hot water temperature controls (+/-)

- Light the appliance by following the procedure below.
- Select the "Heating + domestic hot water" function by pressing the "Central Heating Function Button/Indicator and Domestic hot water Function Button/Indicator" buttons repeatedly to scroll through your options until   are shown.

The appliance will enter a self checking routine, then the fan will start and the ignition sequence commence. The boiler, if necessary, will automatically repeat the ignition sequence a further 4 times.

If the burner fails to ignite "F28" will be displayed, initially, this may be due to air in the gas supply line. Press the reset button. Do not use the reset button to purge the installation - never press reset more than 3 times.

- Press the  Central Heating Function Button/Indicator button and the factory setting temperature will be displayed.
- Press ⊕ or ⊖ buttons to adjust.
- Press the  Domestic hot water Function Button/Indicator button and the factory setting temperature will be displayed.
- Press ⊕ or ⊖ buttons to adjust.
- Open a hot water tap, the display will indicate the domestic hot water temperature.
- Check that hot water is available at all taps, then close.

12.6 Gas rates

The supply from the governed meter must be of adequate size to provide a steady inlet working pressure of 20mbar (8in wg) at the boiler.


- On completion, test the gas installation for tightness using the pressure drop method and suitable leak detection fluid, purge in accordance with the above standard.



Due to the modulating operation of the boiler and the need to check the gas inlet pressure and measure the gas rate at maximum rate, it will be necessary to force it to maximum.

- Activate the test mode "P.01" and set the value to 100 in order to force the burner at P. max. See chapter "Specific adjustment ▶ Appliance technical settings and parameter list ▶ Test modes".

12.6.1 Operational Gas Inlet Pressure

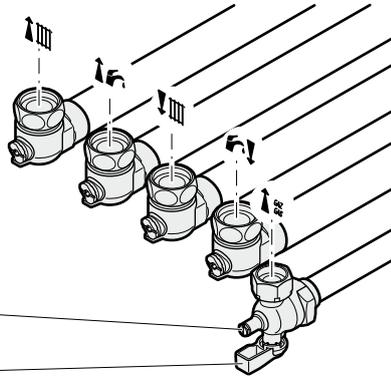

Key

- 1 Gas service isolation valve
- 2 Test point

- With all other gas appliances operating, check the operational supply pressure at the gas service isolation valve test point.

The nominal supply pressure for Natural Gas (G20) is 20mbar.
The nominal supply pressure for LPG (G31) is 37mbar.

- Turn the taps and appliances off, then disconnect the pressure gauge.

Additionally the safe nominal maximum heat input of the appliance can be achieved at an inlet pressure down to 15mbar.



The burner pressure cannot be measured and is not used to measure the gas rate.

12.6.2 Gas Rate

- Make sure that all other gas burning appliances and pilot lights are off.
- Check the gas rate using the gas meter test dial and stop watch, at least 10 minutes after the burner has lit, see table below for approximate rates.
- Gas rates for both central heating and hot water can be verified using the test program P.03 and P.01 respectively.

Gas rates (G20)				Gas rates (G31)	
(approx) after 10 mins from cold					
MIN		MAX		MIN	MAX
m ³ /h	ft ³ /h	m ³ /h	ft ³ /h	kg/h	kg/h
0.92	29.89	3.77	133.14	0.67	2.77

In communal or LPG installations where the gas rate cannot be measured it is acceptable to measure the combustion rate as described in the servicing section.

- On completion, press the "reset" button to reset the boiler.

12.7 Testing heating system

- Ensure that the external controls and programmer are calling for heat.
- Fully open all radiator valves, see chapter "Appliance installation ▶ Recommendations before installing ▶ Heating circuit design".
- Activate the C.H. function on the appliance's control panel.
- Balance the radiators as required to give the required system differential.
- Turn off all radiators that can be shut off by the user and check to see if less than the maximum differential allowed of 20°C can be achieved across flow and return.



Should the appliance require adjustment refer to the "Specific adjustment" section overleaf.

- Allow the system to reach maximum temperature then switch off the boiler by isolating from the electrical supply.
- Drain the entire system rapidly whilst hot, using the drain taps at all the low points of the system. Fill and vent the system as described previously in chapter "Commissioning ▶ Filling the CH system (Central heating)".
- Adjust the boiler temperature controls and any system controls to their required settings.

12.8 Testing domestic hot water system

- Open a hot-water tap.
- Check that the temperature obtained is compliant with the setting on the appliance.

12.9 Completion

- Ensure that the magnetic lighting instruction label is placed on the surface of the boiler casing.


GB: It is a requirement that the "Benchmark" Installation, Commissioning and Service Record is completed and left with the user.

IE: it is necessary to complete a "Declaration of Conformity" to indicate compliance to I.S.813. An example of this is given in the current edition of I.S.813.

13 Specific adjustment

13.1 Heating circuit adjustment

It may be necessary to adjust the by-pass to the design of the system. The boiler is delivered pre-set open 1/2 turn (1).

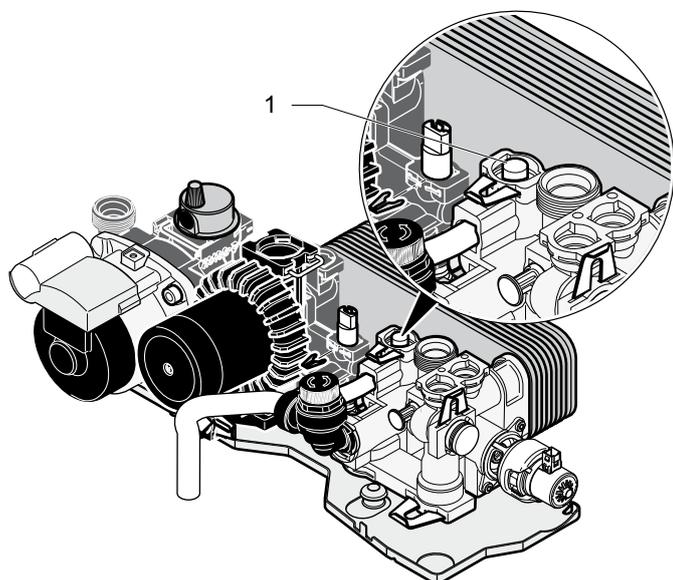


Key

1 Screw for by-pass

- Depending on the design of the system the by-pass may need further adjustment. It is adjusted clockwise to close and anti-clockwise to open. This should be balanced to ensure that it operates if the pump output is adjusted.

Output/pressure curve Ultracom₂ 35 Store

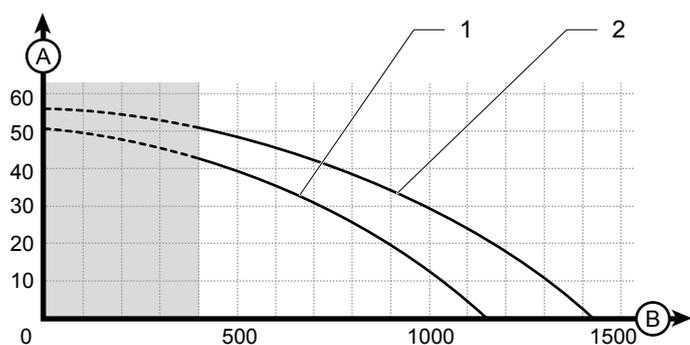

Key

A Available pressure between heating flow and return (kPa)
 B Heating circuit flow rate (l/h)
 1 Speed min
 2 Speed max

13.2 Appliance technical settings and parameter list

The access to the boilers technical data allows you to adjust the boiler to the exact system requirements.

Note: the heating power decrease has no effect on the domestic hot water power.

13.2.1 Installation settings

- Press the menu button for 7 seconds (menu) to access the configuration menu. The screen displays "0".
- Press the - button 4 times for mode. The screen displays "96". This is the installer's password.
- Press (menu) to validate. The screen displays the parameter "00" and its value "XX".
- Press + or - button of mode to access the parameter to modify.
- Press + or - button of the heating temperature controls III to modify the value of the parameter.
- Repeat the past two stages for each parameter that needs to be modified.
- Press the (menu) button for more than 3 seconds to exit the installer menu.

Code	Parameter	Unit	Description	Factory setting	Modifiable parameter
d.00	Maximum heating power	kW	Choose a value: 8 to 30 kW	30	yes
d.01	Pump over-run time - heating	min.	Choose a value between 2 and 60.	5	yes
d.02	Blocking time for burner in heating mode (anti-cycle time)	min.	To prevent the burner frequently switching on and off, the reactivation of the burner is electronically blocked for a period that is determined each time the burner stops. The burner blocking time can be adapted to the usage conditions for the heating installation and depends on the temperature that is set for heating: - at 80°C, the period is fixed (2 minutes) - at 10°C, the period is adjustable: choose a value between 2 and 60 minutes.	20	yes
d.03	Plate exchanger inlet temperature.	°C	Display of the plate exchanger inlet temperature on the short circuit	-	no
d.04	Temperature of water in the tank	°C	Display tank water temperature.	-	no
yes	Pump function	-	Mode: 0 = With the burner 1 = Continuous with ambient temperature 2 = Continuous	1	yes
yes	Speed of the pump	-	Functioning mode: 0 = Automatic: maximum speed when the burner is switched on 1 = Minimum speed 2 = Automatic: automatic speed when the burner is switched on 3 = Maximum speed	2	yes
yes	Maximum temperature setting for domestic hot water	°C	The recommended maximum temperature setting for domestic hot water is 60°C. Choose a value suitable for your needs.	60	yes
<i>The following 2 menus are displayed if an option card (not supplied) is installed on the appliance.</i>					
d.27	Function relay 1	-	Attributing a function to relay 1 of the option card: 1 = Domestic hot water circulation pump 2 = auxiliary heating pump 3 = Reservoir loading pump 4 = smoke valve / chimney extractor 5 = external gas valve 6 = external error message	1	yes
d.28	Function relay 2	-	Attributing a function to relay 2 of the option card: 1 = Domestic hot water circulation pump 2 = auxiliary heating pump 3 = Reservoir loading pump 4 = smoke valve / chimney extractor 5 = external gas valve 6 = external error message	2	yes
<i>The following menu displays automatically if an automatic fill kit is installed on the appliance.</i>					
d.31	Refill method	-	Operating mode: 0 = Manual 1 = Semi-automatic 2 = Automatic	0 or 2	-
d.34	Speed of fan	tr/ min.	Fan speed is displayed between 0 and 99. Multiply the displayed value by 100.	-	no
d.35	Position of 3-way valve	-	0 = Heating 100 = Hot water	-	no
d.36	Domestic hot water flow	l/ min.	Display domestic hot water flow.	-	no
<i>The following menu is displayed if a solar system (not supplied) is connected to the appliance</i>					
d.39	Solar circuit water temperature	°C	Displays the water temperature measured by the sensor located upstream of the mixer.	-	no
d.40	Heating flow temperature	°C	Display the heating flow temperature.	-	no
d.41	Heating return temperature	°C	Display the heating return temperature.	-	no

Code	Parameter	Unit	Description	Factory setting	Modifiable parameter
d.43	Heating curve	K	See the instructions for the external sensor connected to the appliance.	1.2	yes
d.45	Heating curve base	°C		20	yes
<i>The following menus are displayed if an outdoor sensor (not supplied) is installed on the appliance.</i>					
d.47	Exterior temperature	°C	Display the temperature measured by the external sensor.	-	no
d.62	Night-time offset	°C	Choice of lowering the setting between night (COMFORT period on the room thermostat) and night (ECO period on the room thermostat). Select a value between 0 and 31°C.	0	yes
d.67	Time remaining before the end of the anti-cycle in heating mode.	min.	Display the time remaining before the end of the anti-cycle.	-	no
d.71	Maximum temperature setting for heating outlet	°C	Select a value between 50°C and 80°C.	75	yes
d.85	Minimum heating power	kW	Choose a value: 8 to 30 kW	8	yes
d.90	Detection of eBUS controller	-	0 = Not detected 1 = Detected	-	no
d.94	Reinitialise fault list	-	This function is used to clear the fault list on the appliance. 0 = No 1 = Reset fault list	0	yes

13.2.2 After Sales Service settings

- Press the  button for more than 7 seconds to access the configuration menu. The screen displays "0".
- Press  or  button of the Domestic hot water temperature controls  and enter the After Sales Service password.
- Press  to validate. The screen displays the parameter "00" and its value "XX".
- Press  or  button of the Domestic hot water temperature controls  to access the parameter to modify.
- Press  or  button of the Heating temperature controls  to modify the value of the parameter.
- Repeat the process for each parameter modified.
- Press the  button for more than 3 seconds to exit the configuration menu.

Code	Parameter	Unit	Description	Factory setting	Modifiable parameter
d.09	Flow temperature set point from external eBus control	°C	External eBus set value.	-	no
d.10	Heating pump status	-	0 = off 1 = on	-	no
d.16	Current state of the 24V room thermostat	°C	0 = open (no heating), 1 = closed (heating mode)	-	no
d.17	Flow or Return temperature monitoring	°C	Temperature regulation on flow (radiator) or return (under-floor heating) temperature sensor.	0	yes
d.22	DHW demand active (tapping)	-	0 = off 1 = on	-	no
d.23	Central heating mode	-	0 = CH not available (summer mode) 1 = CH available (winter mode)	-	no
d.33	Speed setpoint of fan	rpm	Fan speed is displayed between 0 and 99. Multiply the displayed value by 100.	-	no
d.44	Digitalized ionisation voltage	V	Display the digitalized ionisation voltage	-	no
d.68	Unsuccessfull ignitions at first attempt	-	Display the number of unsuccessfull ignitions at first attempt.	-	no
d.69	Unsuccessfull ignitions at second attempt	-	Display the number of unsuccessfull ignitions at second attempt.	-	no
d.80	Operating hours in heating mode	h	Display the number of operating hours in heating mode. Multiply the displayed value by 100.	-	no
d.81	Operating hours in domestic hot water mode	h	Display the number of operating hours in domestic hot water mode. Multiply the displayed value by 100.	-	no
d.82	Number of burner starts in heating mode	-	Display the number of burner starts in heating mode. Multiply the displayed value by 100.	-	no
d.83	Number of burner starts in DHW mode	-	Display the number of burner starts in DHW mode. Multiply the displayed value by 100.	-	no
d.93	Device Specific Number	-	Select the product code of the appliance:	31	yes
d.96	Factory reset	-	All parameters stored in EEPROM (main board + appliance interface) are reset to factory settings if this function is activated. 0 = deactivated 1 = activated	0	yes

13.2.3 Status of the appliance

- Press button  of the Heating temperature controls  for more than 3 seconds to learn the current state of functioning of the appliance.
The screen displays the state of the appliance "S.XX".
- Press the  button for more than 3 seconds to exit this menu.

Status	Heating Mode
S.00	No request for heating
S.01	Pre-run fan
S.02	Pre-run pump
S.03	Ignition
S.04	Burner lit
S.05	Post run pump/fan
S.06	Post run fan
S.07	Post run pump
S.08	Time delay anti short-cycles after heating
Status	Domestic hot water heating
S.20	Pre-run pump
S.21	Pre-run fan
S.23	Ignition
S.24	Burner lit
S.25	Post run pump/fan
S.26	Post run fan
S.27	Post run pump
S.28	The boiler blocks tank reheating after a reheating cycle.
Status	Specific messages
S.30	Default status, no request for heating or domestic water. If an EBUS controller is connected to the boiler, check that a wiring link is present on terminals 3 and 4 of the boiler's main board.
S.31	"Hot water only" mode
S.32	Control cycle: the speed of the fan in the functioning phase is outside tolerance.
S.34	"Frost protection" mode
S.39	Underfloor heating contact open.
S.41	Water pressure too high.
S.53	Waiting cycle: temperature differential between heating flow and return is too high. If $\Delta T > 30$, forcing to Pmin.
S.54	Waiting cycle: lack of water in the installation/temperature rise between heating flow and return is too high.
S.96	Test temperature sensor for heating return.
S.98	Test temperature sensors for heating flow and return, or the appliance has a fault.

13.2.4 Test modes

By activating these various test modes, you can enable special functions on the appliance.

- Press the on/off button to switch off the appliance.
- While keeping the  button pressed for more than 5 seconds, press the on/off button.
The screen displays the first test mode "P01" and "Off".
- Press button  or  of  mode to choose the test mode that you wish to launch.
- Test mode "P.01" :
 - Press the  button to display the burner forcing setting.
The screen displays "P.01" and "0".
 - Press button  or  of  mode to modify the value of the setting from "0" (0%) to "100" (100%).
 - Press the  button for 1 second to exit the submenu or for more than 7 seconds to access the configuration menu.
- Test mode "P.02" to "P.07" :
 - Press  to launch the test mode. The screen displays "P.OX" and "On".
 - The test mode will be automatically stop after 15 minutes.
- When you have finished, press the reset button  or the On/Off button to exit the test modes.

Code	Parameter	Description
P.01	Forcing the adjustable-power burner when heating	The appliance functions at a power adjustable from "0" (0% = Pmin.) to "100" (100% = Pmax.) by using buttons  or  of the Heating temperature controls  after successful ignition.
P.02	Forcing the burner to heating ignition power	The appliance functions at ignition power after successful ignition.
P.03	Forcing the burner to Heating Pmax.	The appliance functions at its maximum power after successful ignition.
P.05	Filling the appliance	The 3 way valve is in the central position, the pump and the burner stop so that the appliance can be filled.
P.06	Venting the installation	The function is activated for a period of 5 minutes on the heating circuit. Make sure that the air vent is open.
P.07	Venting the appliance	The function is activated for a period of 5 minutes on the short circuit. Make sure that the air vent is open.

13.3 CO₂ measurement

The combustion for this appliance has been pre-set at the factory for operation on Natural Gas G20 as defined on the appliance data label.

No adjustment of the combustion is necessary.

If you wish to check the combustion then follow the instructions in the Servicing section.

13.4 Re-check and restart

- Once the appliance is installed, check the operation of the appliance.
- Start the appliance to ensure that any adjustments operate correctly and check that the appliance operates safely.
- Erase the fault code history from the appliance. To do this, refer to the section “Installation settings” and use code “d.94”.
- Check the gas-tightness and water-tightness of the appliance and eliminate any leaks.
- Check that the flue joints are tested for tightness and fitted in accordance with the instructions.
- Check the entire control and safety system, its settings and its operation.

- Draw attention, if applicable, to the current issue of the Gas Safety (Installation and Use) Regulations, Section 35, which imposes a duty of care on all persons who let out any property containing a gas appliance in the UK.

The user shall not interfere with or adjust sealed components.

It is the Law that any servicing is carried out by a **competent person** approved at the time by the Health and Safety Executive.

- Advise the user that, like all condensing boilers this appliance will produce a plume of condensation from the flue terminal in cool weather. This is due to the high efficiency and low flue gas temperature of the boiler.
- Advise the user that the permanent mains electrical supply should not be switched off, as the built in frost protection and pump exercise program will not operate.
- Advise the User if the mains electricity and gas are to be turned off for any long periods during severe weather, it is recommended that the whole system, including the boiler, should be drained to avoid the risk of freezing.



Sealed system: The system must be refilled to the correct pressure by a competent person as indicated in these instructions

- Leave these instructions and the ‘Benchmark’ Installation, Commissioning and Service Record with the user.

14 User information

At the end of the installation, the installer must:

- explain the operation of the appliance and its safety devices to the user, if necessary provide a demonstration and answer any questions;
- hand over to the user all the required documentation,
- fill in the documents where necessary;
- advise the user of the precautions necessary to prevent damage to the system, appliance and the building;
- remind the user to service the appliance annually.

MAINTENANCE

To ensure the continued efficient and safe operation of the boiler it is recommended that it is checked and serviced at regular intervals. The frequency of servicing will depend upon the particular installation and usage, but in general once a year should be enough.

It is the Law that any servicing is carried out by a competent person approved at the time by the Health and Safety Executive.

- Before commencing with a service or replacement of parts isolate the boiler from the electrical supply and turn off the gas supply at the gas isolation valve.
- When replacing a part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require. Do not use reconditioned or copy parts that have not been clearly authorised by Glow-worm.
- If any electrical connections have been disconnected and after their connection, checks to the earth continuity, polarity, short circuit and resistance to earth must be repeated using a suitable multimeter, as described in chapter "Trouble-shooting ▶ Fault diagnosis ▶ Check the electrical installation".
- After servicing, complete the relevant Service Interval Record section of the Benchmark Checklist located in the centre pages of this document.


15 Trouble-shooting

15.1 Fault diagnosis

The following checks should be performed before proceeding onto specific diagnostics:

- Make sure that the electricity supply has not been interrupted and that the appliance is connected correctly (See chapter "Trouble-shooting ▶ Fault diagnosis ▶ Check the electrical installation")
- Ensure that the isolating valves are open.
- Ensure that the pressure indicator displays a value of 0.8 bar (if the pressure falls below 0.4 bar, the air vent function will run automatically for a period of 5 minutes until you see 0.5 bar on the pressure indicator). If not, fill the appliance.
- Check that all external controls are connected correctly.
- If the symbol  and the message "rE SET" are displayed on the screen, display the fault code memory (see chapter "Trouble-shooting ▶ Fault memory").
- Press the reset button  to restart the appliance.
- Check the functional flow diagram.

15.1.1 Check the electrical installation

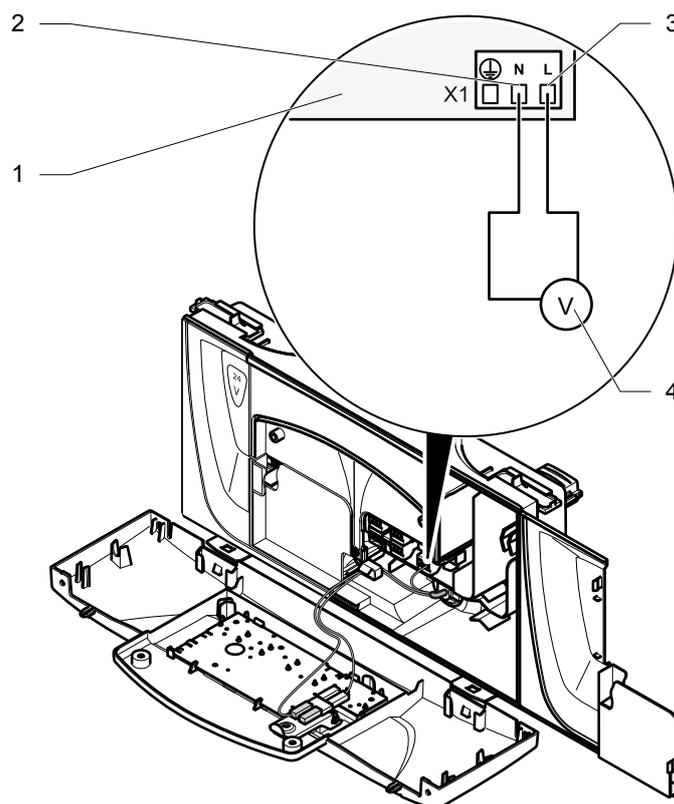


Key

- 1 Main board
- 2 Neutral
- 3 Live
- 4 Multimeter

- Remove the front casing panel
- Check the external electrical supply to the boiler is on and a supply of 230V is present at the 'L' and 'N' terminals on the main board.
- Check the electrical installation and appliance, carry out tests for earth continuity, polarity, short circuit and resistance to earth, using a suitable multimeter.
- Bare metal points such as screws or rivets will act as suitable earth check points on the appliance.

15.1.2 Check the gas supply

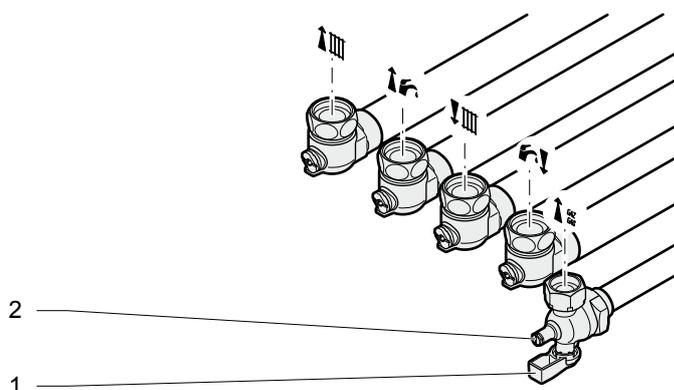

Key

- 1 Gas service isolation valve
- 2 Test point

- Check that there is a gas supply to the boiler and the gas service isolation valve is turned on.
- Check pressure at the gas service isolation valve.

15.2 Fault memory

- This menu allows you to display the 10 most recent failure codes registered by the appliance.
- In order to display the fault code memory, simultaneously press the buttons \oplus and \ominus of the heating temperature controls  for more than 7 seconds.
- The screen will display the first fault "01" (record) and "F.XX" (fault code).
- To display the other faults registered by the appliance, press the \oplus or \ominus button of the domestic hot water temperature controls .
- Press the  button for more than 3 seconds to exit this menu.

Record	Fault code	Description
01	XX	Consult the "Fault codes" chapter.
02	XX	Consult the "Fault codes" chapter.
03	XX	Consult the "Fault codes" chapter.
04	XX	Consult the "Fault codes" chapter.
05	XX	Consult the "Fault codes" chapter.
06	XX	Consult the "Fault codes" chapter.
07	XX	Consult the "Fault codes" chapter.
08	XX	Consult the "Fault codes" chapter.
09	XX	Consult the "Fault codes" chapter.
10	XX	Consult the "Fault codes" chapter.

- To erase the fault memory registered by the appliance, consult the "Installation adjustments" chapter and use code "d.94".

15.3 Fault codes




The faults described in this chapter should be carried out by a qualified engineer and if needed by the After Sales Service.

Fault codes	Description	Cause	Solution	
F00	Flow heating temperature sensor fault	Sensor open circuit	<ul style="list-style-type: none"> • Check the sensor's connections. • Check the wiring harness. • Check the sensor. 	
F01	Return heating temperature sensor fault	Return heating temperature sensor disconnected		
F02	Hot water temperature sensor fault	Sensor disconnected		
F03	Storage tank temperature sensor fault	Sensor disconnected		
F10	Flow heating temperature sensor fault	Sensor short-circuit		
F11	Return heating temperature sensor fault	Return heating temperature sensor shorted.		
F12	Hot water temperature sensor fault	Hot water temperature sensor short circuit		
F13	Storage tank temperature sensor fault	Storage tank temperature sensor short-circuit		
F20	Overheating fault	Overheating safety device activated (97°C)		
		Improper bleeding		
F22	Water pressure of the installation (<0.3 bar)	Return water valve closed	<ul style="list-style-type: none"> • Fill the installation. • Purge the installation. • Check the pump connections. • Check the flow and return heating sensor connections. • Check that there are no leaks. 	
		Pump disconnected		
F23	Maximum temperature difference reached between return and flow heating	Water circulation fault		
		Malfunction of the pump (excessively rapid temperature increase)		
F24	Water circulation fault	Malfunction of the pump (excessively rapid temperature increase)		
F26	Fault in gas valve motor.	Disconnected or defective cables		<ul style="list-style-type: none"> • Check the gas valve connections. • Check the operation of the gas valve. • Check the operation of the condensate pump (option).
F27	Flame detection fault.	Abnormal flame detection		<ul style="list-style-type: none"> • Check the flame detection electrode. • Check the main board. • Check the igniter unit.
		Gas mechanism defective		
F28	Ignition fault	No return gas / Insufficient gas flow Gas valve incorrectly adjusted		<ul style="list-style-type: none"> • Check the return gas circuit (gas valve open). • Check the observe the flame picture and check the CO₂ setting. • Check the igniter unit connections. • Check the state of the electrode (corrosion).
F29	Loss of flame during operation	Defective firing electrode and flame control / Defective igniter unit		


Fault codes	Description	Cause	Solution
F32	Incorrect air pressure	Incorrect fan speed.	<ul style="list-style-type: none"> • Check the entire flue system. • Check the fan's electrical connections.
F49	EBUS voltage fault	Fault in EBUS line Short circuit in EBUS connector	<ul style="list-style-type: none"> • Check that the eBus controls are fitted and wired correctly.
F61	Fault in the main board	Gas valve command fault	<ul style="list-style-type: none"> • Check the main boards connections. • Check the main board. • Check the appliance DSN number is correct. • Reset the appliance.
F62		Gas valve closure fault	
F63		Fault in the main board memory	
F64		Rapid fluctuation of return or flow heating sensor.	
F65		Excessive main board temperature	
F67		Flame signal fault in the main board	
F68	Fluctuation of flame signal	No return gas / Insufficient gas flow Gas valve incorrectly adjusted Defective firing electrode and flame control / Defective igniter unit	<ul style="list-style-type: none"> • Check the return gas circuit (gas valve open). • Check the observe the flame picture and check the CO₂ setting. • Check the igniter unit connections. • Check the state of the electrode (corrosion).
F70	User interface incompatible with the main board	Incorrect product code	<ul style="list-style-type: none"> • Check that the appliance DSN code on the screen matches the product code of the nameplate (in the event of a fault and the appliance DSN does not appear, consult menu.d.93 reserved for the code). • Check the boards reference.
F71	Flow heating temperature sensor fault	Flow heating temperature sensor unclipped or defective (no temperature variation)	<ul style="list-style-type: none"> • Check the sensor connections. • Make sure that the sensor is clipped to the tube.
F72	Permanent temperature difference between flow and return heating sensors	Mismatch between the flow and return heating temperatures (permanent difference)	<ul style="list-style-type: none"> • Check temperature sensors connections. • Replace faulty sensors.
F73	Heating circuit pressure sensor fault	The sensor is shorted or disconnected.	<ul style="list-style-type: none"> • Check the sensor's connections. • Check the sensor.
F74	Heating circuit pressure sensor fault	Fault in pressure sensor	
F76	Thermal fuse fault	Thermal fuse disconnected Defective thermal fuse	<ul style="list-style-type: none"> • Check the fuses connections. • Replace the heat exchanger.
F77	Fault in gas valve motor.	Defective gas valve. Defective condensate pump (option)	<ul style="list-style-type: none"> • Check the gas valve connections. • Check the operation of the gas valve. • Check the operation of the condensate pump (option).
F79	Storage tank temperature sensor fault	Storage tank temperature sensor fault	<ul style="list-style-type: none"> • Check the sensor connections • Check the sensor cables • Check the sensor
F81	Overheating of hot water circuit	Fault in the hot water circuit	<ul style="list-style-type: none"> • Check whether: <ul style="list-style-type: none"> - temperature sensor not clipped correctly (plate exchanger outlet) - hot water pump not functioning - non-return valve blocked - plate exchanger blocked - tank outlet pipes blocked - air in the primary circuit - main pump not functioning
F83	No water in the installation : the temperature does not increase when the burner is lit	Return water valve closed Pump disconnected Leak in the installation	<ul style="list-style-type: none"> • Fill the installation. • Purge the installation. • Check the pump connections. • Check the flow and return heating sensor connections. • Check that there are no leaks.
F84	Permanent temperature difference between flow and return heating sensors	Inverted or disconnected flow and return heating temperature sensors Defective temperature sensors	<ul style="list-style-type: none"> • Check temperature sensors connections. • Replace faulty sensors.
F85	Flow and return heating sensors fault	Flow and return heating temperature sensor connected to same tube	<ul style="list-style-type: none"> • Check temperature sensors connections.
F86	Underfloor heating contact fault	Floor heating contact open Sensor disconnected or defective	<ul style="list-style-type: none"> • Check the sensor connections. • Check that the sensor is connected to the main board and the shunt is removed.
Err	User interface fault	Defective user interface	<ul style="list-style-type: none"> • Check connection from user interface PCB to main PCB. • Replace user interface.

15.4 Functional flow diagram

15.4.1 Central Heating

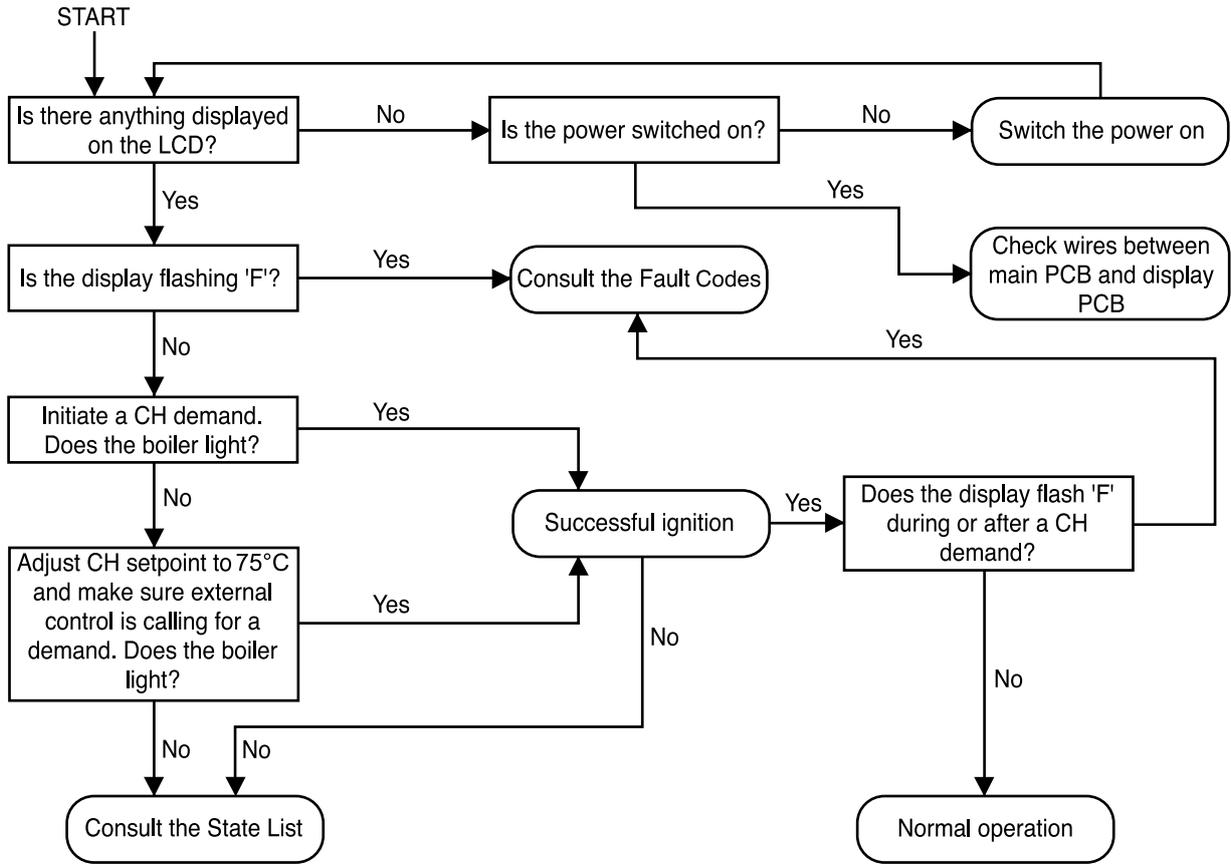

15.4.2 Domestic Hot Water

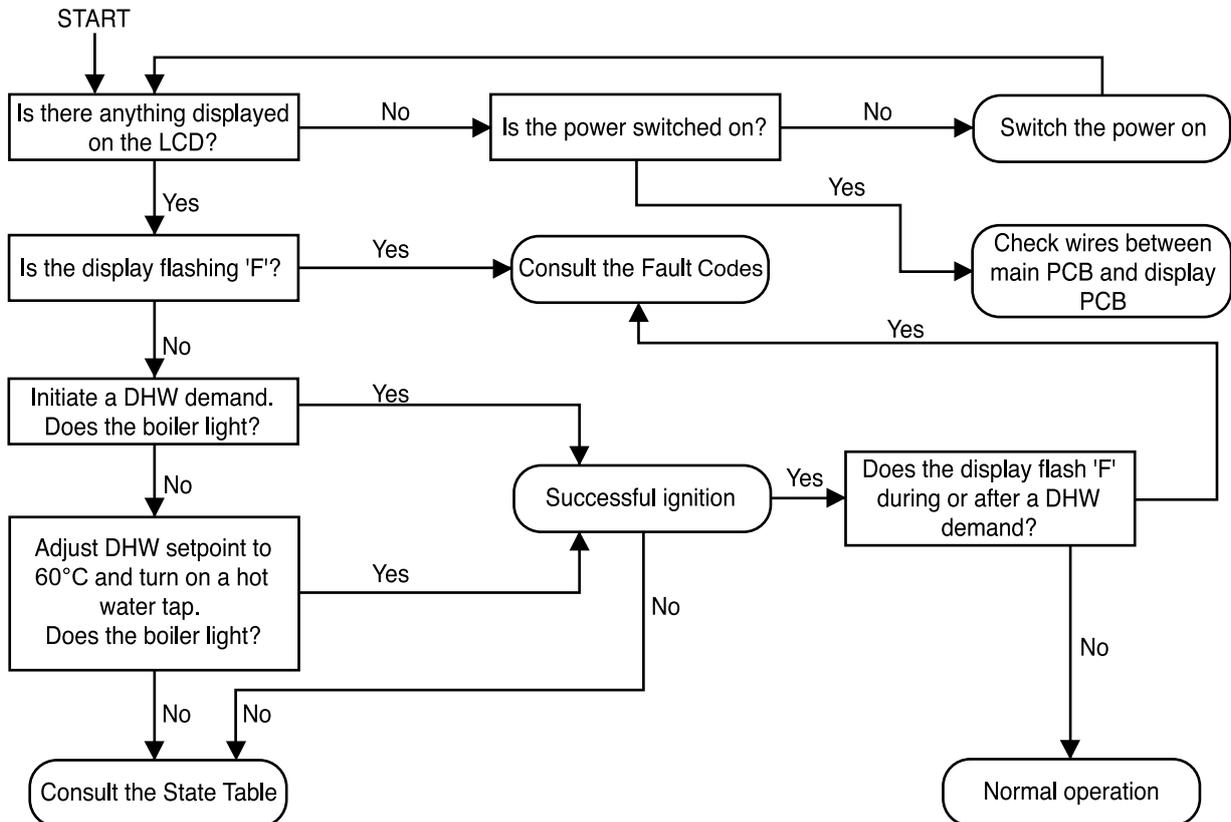

16 Gas conversion adjustments



Any seals destroyed must be replaced.

In order to operate with a gas other than that provided from the factory, it is necessary to make some adjustments to the gas valve.

This conversion should only be carried out by a competent person approved at the time by the Health and Safety Executive.

- During the conversion to Propane, use of a suitable flue gas analyser is necessary.

The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser and the interpretation of the results.

The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN50379-3 and be calibrated in accordance with the analyser manufacturers' requirements.

Competence can be demonstrated by satisfactory completion of the CPA1 ACS assessment, which covers the use of electronic portable combustion gas analysers in accordance with BS 7967, parts 1 to 4.

16.1 Settings




Steps "Switching on" to "Re-pressurising System" will need to be completed before the appliance can be converted (See chapter "Commissioning").

Tools required to make the conversion are a 2mm Allen key and an electrician's screwdriver.

Having checked :

- the appliance and system have been installed in accordance with the instructions.
- the integrity of the flue system and flue seals....
- the integrity of the appliance combustion circuit and relevant seals....
- that all internal/external controls are calling for heat.
- the gas service isolation valve is opened.

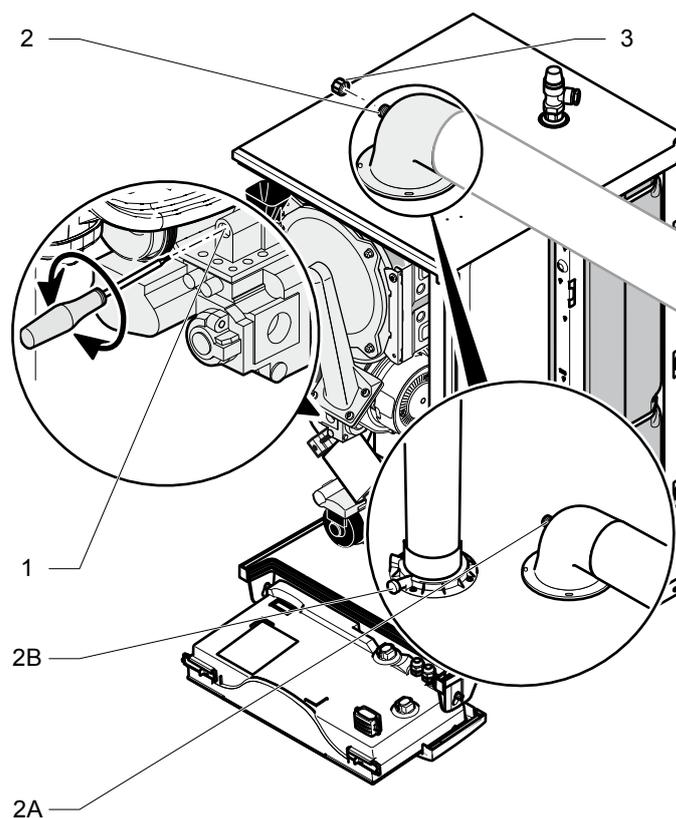

- Key
- 1 Throttle
 - 2 Combustion analyser sample point
 - 2A Flue elbow
 - 2B Vertical flue adaptor
 - 3 Cap

- Remove the front panel first.
- Remove the cap (3) and connect a CO₂ analyser to effect the measurement (2).

16.1.1 Adjusting the gas valve

- Press the on/off button to turn the appliance off.
- Turn the screw in the direction and the number of times indicated in the following table.

Gas adjustment	G20 ▶ G31	G31 ▶ G20
	X	2.5 turns
	2.5 turns	X

16.1.2 Adjusting the maximum power setting

- Activate the test mode "P.01" and set the value to 100 in order to force the burner at P. max. See chapter "Specific adjustment ▶ Appliance technical settings and parameter list ▶ Test modes".
- Wait approximately 5 minutes to read a stabilized CO₂ value.

- Compare the value measured with the values indicated in the table below.

Gas adjustment	G20	G31
CO ₂ case ON	9 ± 0.2 %	10.1 ± 0.2 %
CO ₂ case OFF	9.2 ± 0.3 %	10.3 ± 0.3 %




Safe combustion can only be verified by measuring CO/CO₂ ratio. This must not exceed the value shown in the table under the section "Maximum Rate and Adjustment".

16.1.3 Restarting

- Replace the cap
- Replace the appliance front panel.

Note: following the replacement of the front panel, the CO₂ value will change: you can check that the value "case on" is correct by the values in the previous table.

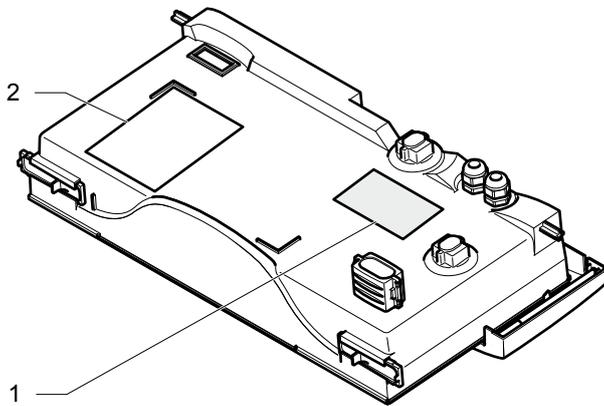

Key

- 1 Gas change label location
- 2 Data label location


- Firmly attach the gas replacement label to the appliance in the corresponding location (1) on the electrical box.
- Depending on the gas replacement label, tick the type of gas used on the sticker.

16.2 Restart - re-check commissioning

- Before putting the appliance into operation, follow the instructions within the chapter Specific adjustment.

17 Draining

17.1 Heating circuit

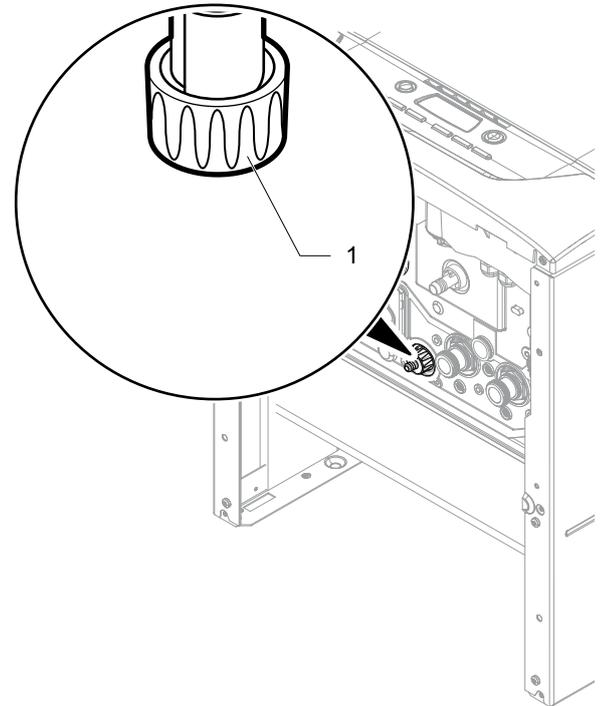

Key

- 1 Heating drain tap

- Open the heating drain tap (1) located under the boiler.
- Make an air intake by, for example, opening a bleed in the installation.
- To just drain the heating circuit water contained within the appliance, first close the heating outlet and return valves.

17.2 Domestic Hot water circuit

- Drain the domestic Hot Water circuit by closing the cold-water isolation valve on the wall mounting jig.
- Open one or more hot water taps to drain the hot water circuit.

18 Servicing

- To ensure the continued efficient and safe operation of the boiler it is recommended that it is checked and serviced as necessary at regular intervals.

The frequency of servicing will depend upon the particular installation conditions and usage.

If this appliance is installed in a rented property there is a duty of care imposed on the owner of the property by the current issue of the Gas Safety (Installation and Use) Regulations, Section 35.

- Servicing/maintenance should be carried out by a **competent person** approved at the time by the Health and Safety Executive in accordance with the rules in force in the countries of destination.
- To obtain service, please call your installer or Glow-worm's own service organisation.

PLEASE NOTE: During routine servicing, and after any maintenance, we recommend that the following must be checked:

- The integrity of the flue system and the flue seals,
- The integrity of the boiler combustion circuit and the relevant seals,
- The operational (working) gas inlet pressure at maximum rate,
- The gas rate,
- The combustion performance.
- See the "Safety instructions" chapter for a list of operations to be performed prior to the maintenance of the application.
- Once the maintenance operations have been completed, consult the "Start Up" chapter to restart the appliance.

18.1 Annual Maintenance

18.1.1 Verification of components

- Check that the flow sensor is working properly. See chapter "Specific adjustment ▶ Appliance technical settings and parameter list ▶ Installation settings" and use code "d.36".
- Check that the fan is working properly. See chapter "Specific adjustment ▶ Appliance technical settings and parameter list ▶ Installation settings" and use code "d.34".
- Check that the temperature sensors are working properly. See chapter "Specific adjustment ▶ Appliance technical settings and parameter list ▶ Installation settings" and use code "d.3, d.4, d.40, d.41".
- Check the ionisation quality.
- Check that the thermal fuse protects the appliance against dry fire. Disconnect the thermal fuse and check if "F76" fault code is displayed on the screen.
- Check that the pressure sensor is working properly. The pressure must be displayed on the screen.
- Check the pressure of:
 - the expansion vessel,
 - the DHW expansion vessel.
- Check the **particle filter**.

18.1.2 Other checks

- Check the CO₂ rate in the fuel and compare with the values indicated in the chapter "CO₂ Measurement".
- Check that there are no leaks in the joints and the safety valves.
- Check that there are no gas leaks.
- Verify that the flue system is sound and complete.
- Check the appliance's electrical safety.

18.1.3 Cleaning of the components

- Clean the following components:
 - The cold water filter
 - The heating filter
 - The **particle filter**
 - The condensate trap
 - The fan

18.1.4 Corrosion and anti-sludge protection

In order to avoid corrosion, the addition of a corrosion inhibitor to the heating circuit water is recommended. The inhibitor will stop electrolytic reaction and bacterial growth between the different metals used in the installation.

It will also avoid the formation of gas which could be produced following the chemical reactions.


It is especially important to treat the water in underfloor heating systems, as low temperatures favour bacterial growth. This can lead to the formation of sludge, which in turn may block some or all of the circuits.

In order to add the correct dosage of these products, you must know the volume of water contained in the installation. It is recommended that you note down the volume for future needs.

The inhibitors must be compatible with the materials employed in the installation.

18.2 Casing removing


18.2.1 Front panel

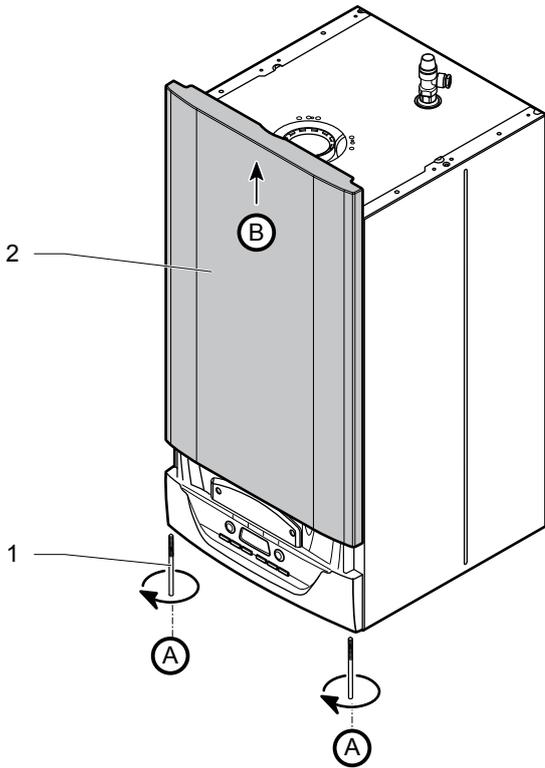

- Key**
 1 Front panel retaining screw
 2 Front panel

- Undo the two screws (1) on the underside of the front panel and remove the front panel (2).

18.2.2 Control box

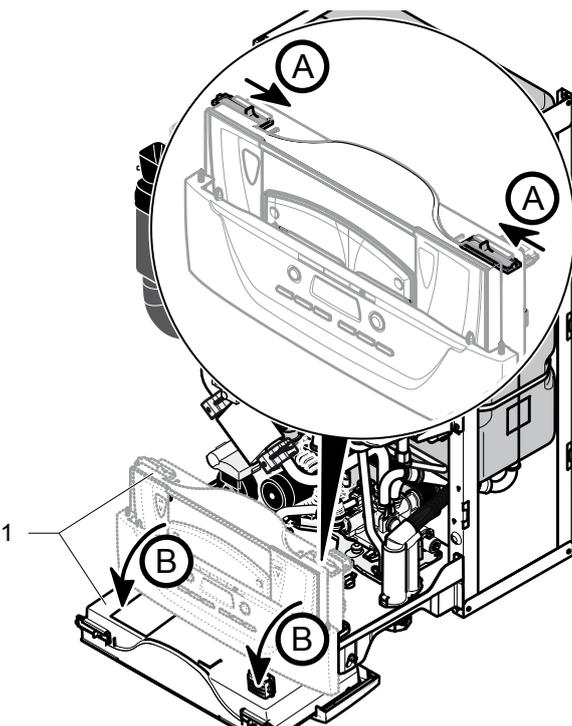

- Key**
 1 Control box

- Position the control box (1) into the service position.

18.3 Combustion check and setting the air/gas ratio valve

18.3.1 Competency to carry out the check of combustion performance



BS 6798: 2009 Specification for installation and maintenance of gas-fired boilers of rated input not exceeding 70kW net advises that:

- The person carrying out a combustion measurement must be assessed as competent in the use of a flue gas analyser and the interpretation of the results.
- The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN50379-3 and be calibrated in accordance with the analyser manufacturers' requirements.
- Competence can be demonstrated by satisfactory completion of the CPA1 ACS assessment, which covers the use of electronic portable combustion gas analysers in accordance with BS 7967, parts 1 to 4.
- Ensure that the gas analyser is set to the correct fuel setting.
- Select the “ + ”, constant central heating with DHW function by pressing the “” button repeatedly, refer to commissioning section. The boiler should fire automatically.



Safe combustion can only be verified by measuring CO/CO₂ ratio. This must not exceed the value shown in the table opposite.


18.3.2 Preliminaries

Prior to, during servicing and after any maintenance or changed parts, the following must be checked.

- The integrity of the flue system and flue seals.
- The integrity of the appliance combustion circuit and relevant seals.
- Electrical, gas and water connections.
- System pressure.
- The combustion performance, refer to the following procedure.
- The operational gas inlet pressure and gas rates, refer to the commissioning section paragraph 12.5. Correct any fault before continuing.

Combustion check and setting the air/gas ratio

- Remove the front casing panel, see diagram above and hinge down the control box. Taking care not to touch any internal components, proceed as follows:
- Connect the CO₂ combustion analyser to the relevant test point, see diagram opposite.

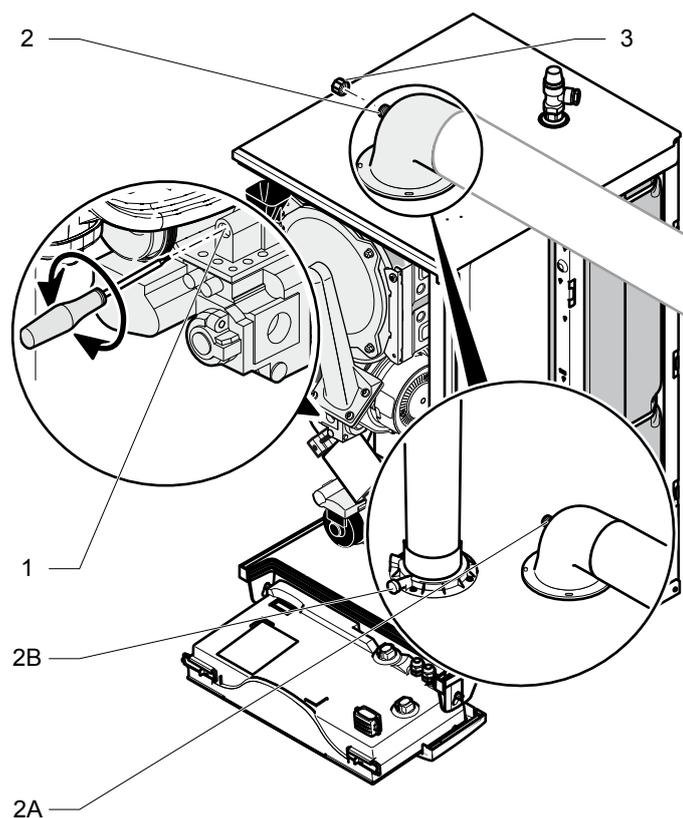

- Key**
- 1 Throttle
 - 2 Combustion analyser sample point
 - 2A Flue elbow
 - 2B Vertical flue adaptor
 - 3 Cap

18.3.3 Maximum rate check and adjustment



To verify the maximum gas rate CO₂ setting the appliance must be checked at the maximum rate.

- Activate the test mode "P.01" and set the value to 100 in order to force the burner at P. max. See chapter "Specific adjustment ▶ Appliance technical settings and parameter list ▶ Test modes".
- Wait approximately 5 minutes to read a stabilised CO₂ value.
- Check that the value is within the range specified in table in the "check" column.

G20 Burner % CO ₂			
Model	Check (case on)	Setting (case off)	CO/CO ₂ ratio
35 Store	9.2 ± 0.3%	9 ± 0.2%	0.004
G31 Burner % CO ₂			
Model	Check (case on)	Setting (case off)	CO/CO ₂ ratio
35 Store	10.3 ± 0.3%	10.1 ± 0.2%	0.004

If the combustion reading is not within the acceptable values and the integrity of the complete flue system and combustion circuit seals have been verified and the inlet gas pressure (and gas rate) have been verified, then, it will necessary to adjust the combustion rate of the appliance.



Adjustment is made by turning the throttle an 1/8 of a turn, waiting 1 minute to allow the appliance to stabilise before checking or making further adjustments.

- Remove the sticker covering the "throttle" adjustment screw, if fitted.
- Rotate the "throttle" (1) (anti-clockwise to increase), to the required CO₂, refer to previous diagram and the "Setting" column in the table.
- When you have finished, press the On/Off button to exit the test modes.
- Remove the analyser probe and replace the cap on the sampling point, replace the controls fascia, and the front casing panel.



Remember to replace the sample point cap on completion of the test.

18.3.4 Gas rate check

- Check the gas rates as described in the commissioning section.

18.3.5 Completion

If it is not possible to achieve the required results for either the combustion or gas rates, it will be necessary to complete a full service of the appliance and then repeat the combustion check procedure.

If after servicing and adjustment of the appliance the combustion values are still unacceptable and after further remedial work has been carried out, the appliance must be disconnected until the CO/CO₂ ratio is acceptable.

- Advice can be sought from the Glow-worm Technical Helpline.

18.4 Servicing



If the Combustion CO₂, CO/CO₂ ratio & Gas rate checks did not require adjustment then it will not be necessary to complete a full service.


All routine servicing requirements can be achieved by the removal of the front panel.

- Position the control box into the service position.
- Before commencing with a service or replacement of parts, isolate the boiler from the electrical and gas supplies.

18.4.1 Service interval record

- Refer to benchmark book stapled in the centre pages of this manual.

18.5 Silencer

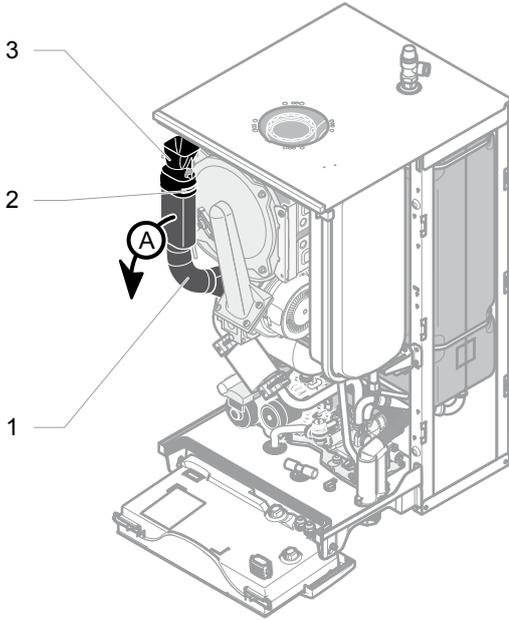


Key

- 1 Fixed silencer
- 2 Silencer retaining clip
- 3 Removable silencer

- Unclip and remove the silencer (3).
- Clean the interior of the silencer with a dry cloth if necessary, taking care not to damage the internal foam.
- Repeat the operation in reverse order to replace the silencer.

18.6 Central heating expansion vessel

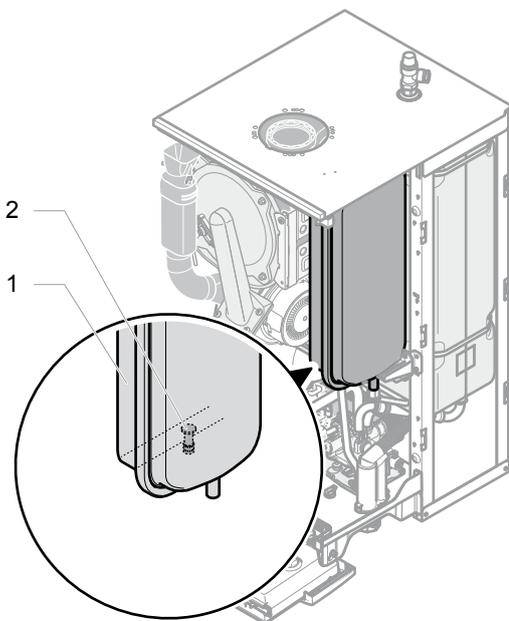


Key

- 1 Expansion vessel
- 2 Expansion vessel pressure inlet

- Check the expansion vessel's supply pressure (see « Technical Data » chapter) by means of the pressure inlet located on the expansion vessel. Adjust the pressure if necessary.
- Following the installation of a new expansion vessel, fill and purge the appliance or installation, if necessary.

18.7 DHW expansion vessel

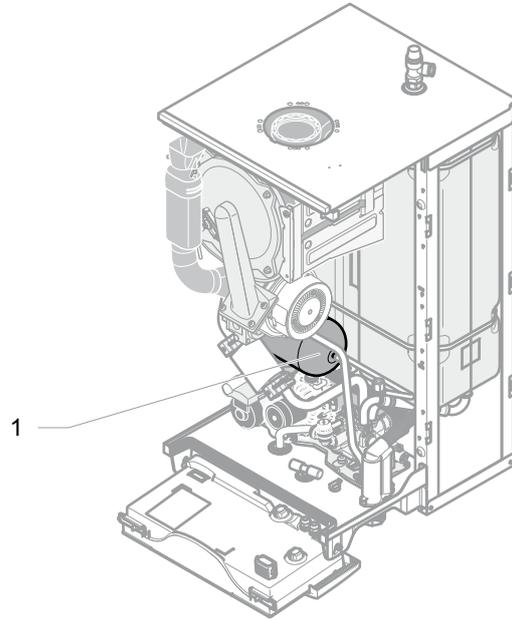

Key


- 1 DHW expansion vessel



It is not necessary to remove the heating expansion tank to remove the hot water expansion tank.

- Check the hot water expansion tank supply pressure (see section “Technical data”) using the pressure tap located below it and adjust if necessary.
- Following the installation of a new expansion vessel, fill and purge the appliance or installation, if necessary.

18.8 Particle filter

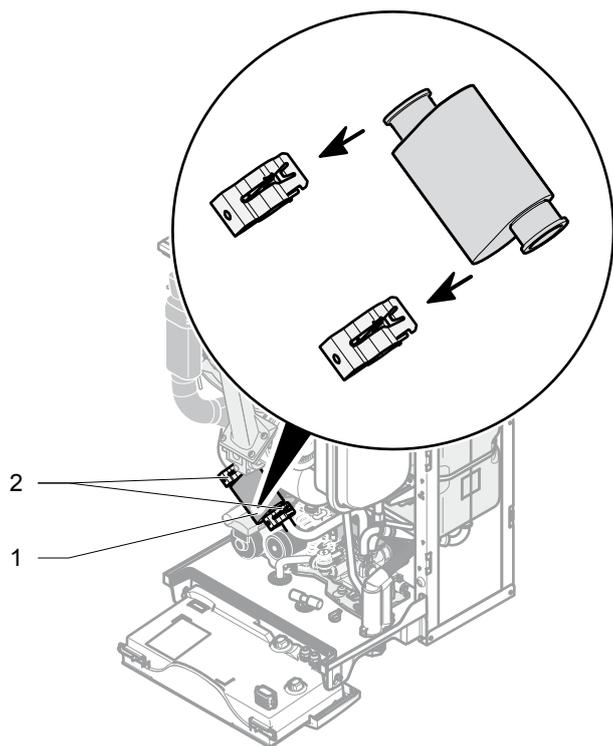

- Key**
 1 Particle filter
 2 Clips




Remove the particle filter to check its condition.

- Check the condition of the particle filter. To remove the particle filter (1) remove the 2 clips (2).
- The particle filter must be removed and cleaned after the first year(s) of use.
- Clean the grill inside.
- After installing a new particle filter, refill and bleed the appliance and the installation if necessary.

18.9 Condensate trap




Warning: condensate is mildly acidic. Use protective gloves.

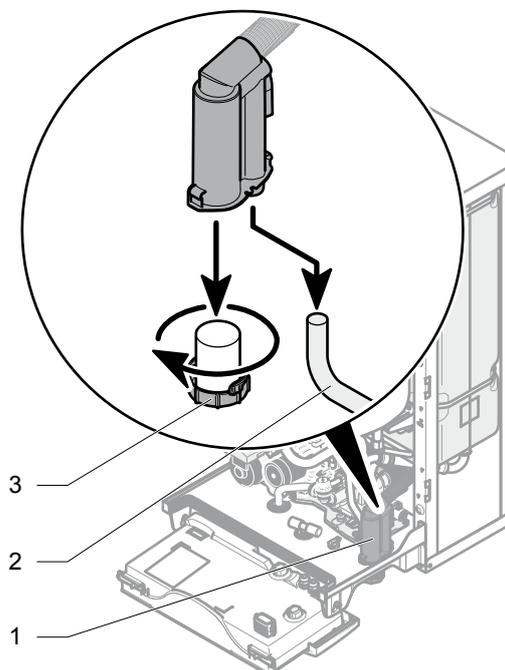

- Key**
 1 The condensate trap
 2 Discharge of condensate
 3 Siphon

- Place a container under the condensate trap (1).
- Remove the siphon (3) from the recoverer and clean.
- Disconnect the condensation discharge (2).
- Clean the hose, the trap and the siphon, remove any accumulated dirt.
- Reassemble the components, taking care to position the gaskets correctly.
- Start the siphon (3) and fill with water.

18.10 Combustion block

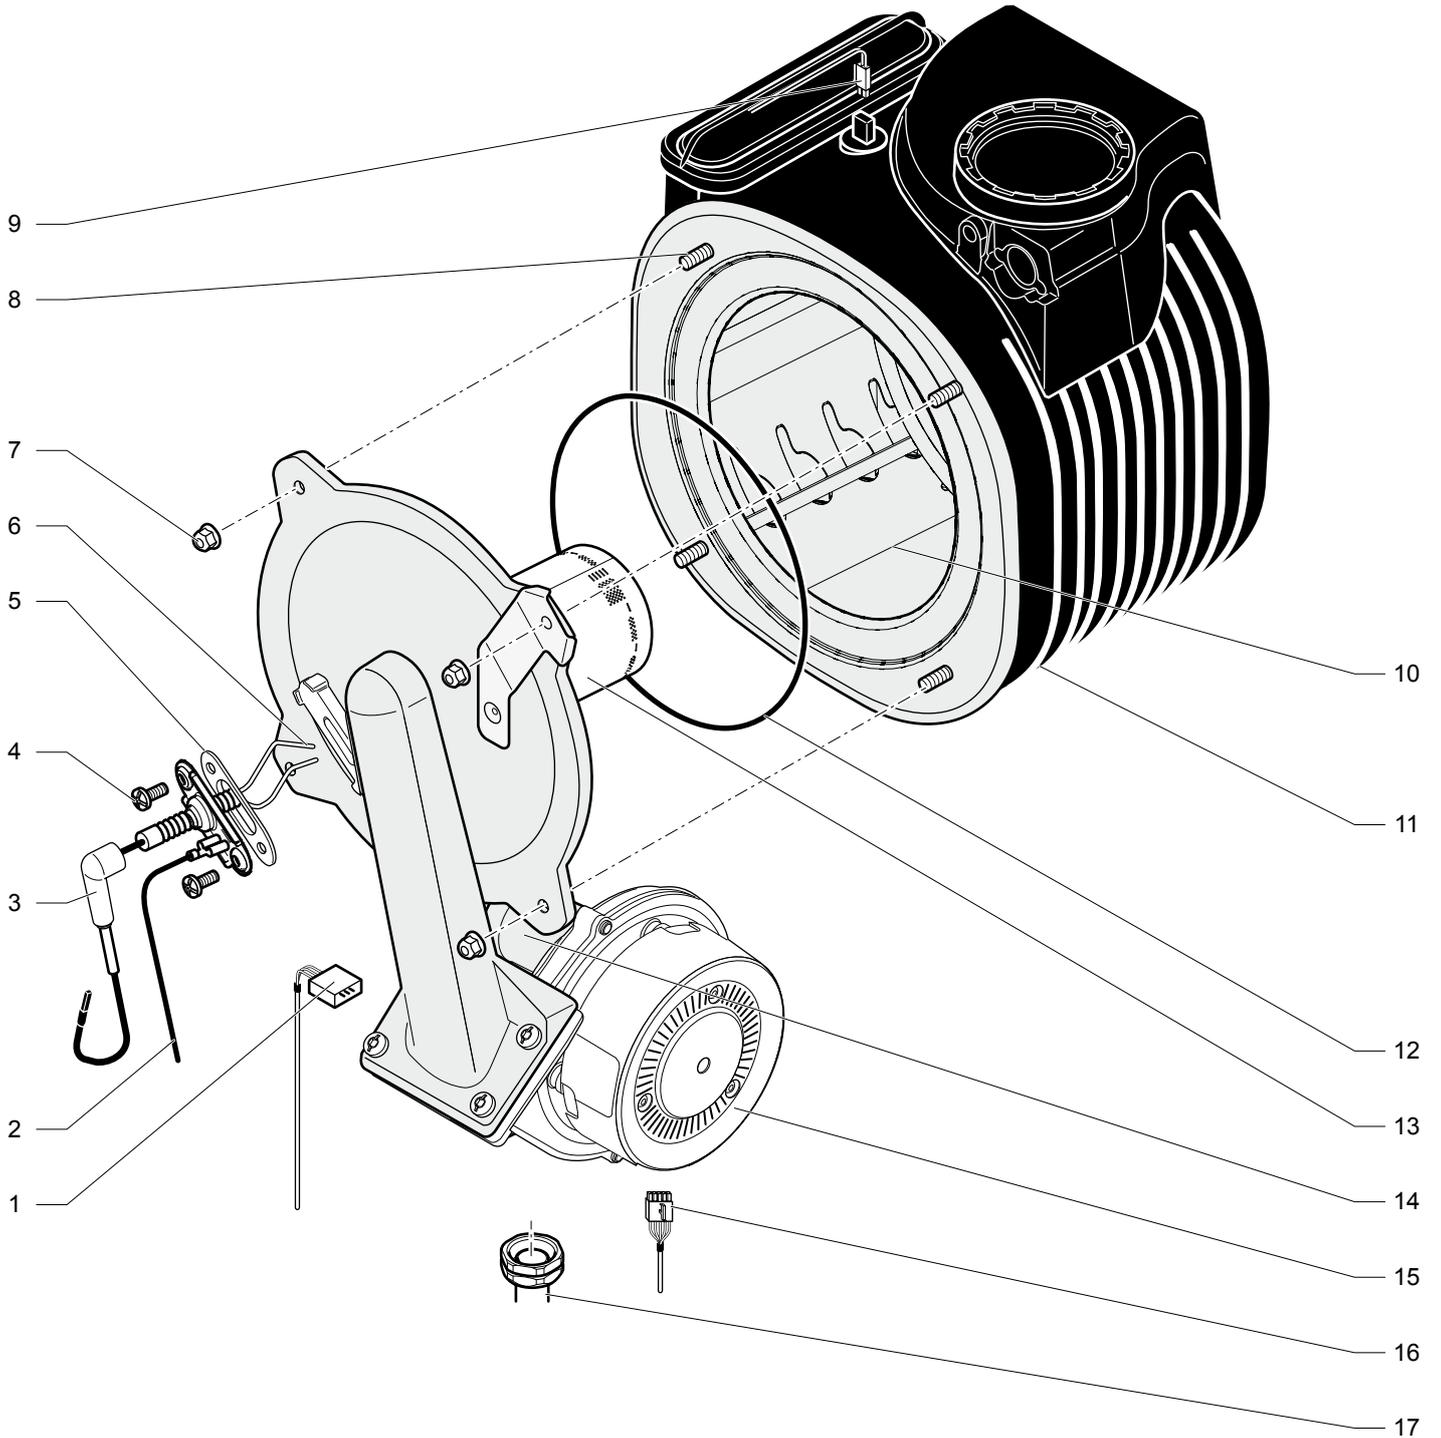

Key

- 1 Gas valve connection
- 2 Grounding cable
- 3 Spark electrode inlet
- 4 Spark electrode retaining screw.
- 5 Spark electrode gasket
- 6 Spark electrode
- 7 Burner retaining nut
- 8 Burner retaining screw
- 9 Thermal fuse connection

- 10 Coil
- 11 Heat exchanger
- 12 Burner gasket
- 13 Burner
- 14 Gas valve
- 15 Fan
- 16 Fan connection
- 17 Gas pipe

18.10.1 Spark electrode

- Disconnect the electrode inlet (3) and the grounding cable (2).
- Remove the 2 spark electrode retaining screws (4).
- Carefully remove the electrode from the combustion chamber.
- Check that the extremes of the electrode (6) are not damaged.
- Clean away any accumulation of dirt and check that the distance between the two electrodes is between 3.5 and 4.5 mm.
- Check that the gasket (5) is not damaged. Replace if necessary.

18.10.2 Dismantling the burner



Warning: The gasket (12) must be replaced each time the burner is dismantled.

- Disconnect the spark electrode connector (6) from the igniter unit.
- Remove the gas pipe (17).
- Remove the connectors from the gas valve (1) and the fan (15).
- Remove the retaining screw of the silencer.
- Loosen the 4 nuts (7).
- Remove the burner group from the heat exchanger (11).
- The studs (8) fixed to the heat exchanger must not be damaged. Should it be damaged, replace the heat exchanger.
- The burner gate insulation should not be damaged. Replace if damaged.

18.10.3 Cleaning the heat exchanger

- Clean the coil (19) in the heat exchanger (11) with water.

18.10.4 Burner control

- The burner (13) does not require maintenance and should not be cleaned.
- Check that its surface is not damaged. Replace the burner if necessary.
- Following the verification or replacement of the burner, assemble the burner group as described in the following chapter.

18.10.5 Re-assembling the burner group

- Place the burner group on the heat exchanger (11).
- Progressively tighten the 4 nuts (7) in an alternate order.
- Reassemble the silencer.
- Connect the gas tube (17) with a new gasket to the burner group.
- Connect the spark electrode connector (6) to the igniter unit.
- Connect the connector to the gas valve (1) and the fan (15).

- Open the appliance gas input.
- Check the watertightness of the gas connection.

18.11 Service completion

- Re-check the combustion, see chapter "Combustion check".

On completion of the service, the "Benchmark" Service Record could be completed.

19 Replacement of Parts

- Do not use reconditioned or copy parts, only use original parts supplied by Glow-worm.
- If a part is required, contact the Glow-worm service organisation.
- Please quote the name of the appliance, this information will be on the name badge on the front of the appliance.
- If in doubt seek advice from the local gas company or Glow-worm's own service organisation.



Replacement of parts must be carried out by a competent person approved at the time by the Health and Safety Executive.

PLEASE NOTE: During change of part of the combustion circuit, we recommend that the following is the following must be checked:

- The integrity of the flue system and the flue seals,
- The integrity of the boiler combustion circuit and the relevant seals,
- The operational (working) gas inlet pressure at maximum rate,
- The gas rate,
- The combustion performance.

19.1 General



The replacement of parts described in sections "Combustion block" will require the removal of the burner module assembly and the replacement of seal and self locking nuts.

Replacement parts that have associated components that need replacing on removal, i.e. 'O' ring, seals, gasket, etc., will be supplied and should be fitted.

- Before replacing any parts of the boiler, isolate from the mains electric supply and turn off the gas at the gas service isolation valve on the boiler.

Unless stated otherwise parts are replaced in the reverse order to removal.


- After replacing any parts, always test for gas soundness and if necessary carry out functional test of the controls.

19.2 Boiler Access

For replacement of parts, the front casing panel of the boiler will need to be removed.

- To remove undo the two screws on the underside of the front casing and lift off.

19.3 Viewing window

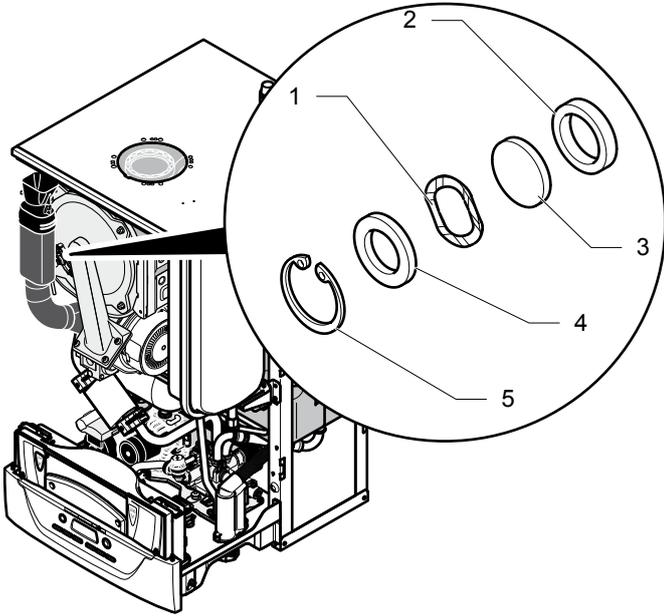


Key

- 1 Fibre washer
- 2 Steel washer
- 3 Glass
- 4 Steel washer
- 5 Circlip

- Remove the circlip (5).
- Remove the steel washer (4).
- Remove fibre washer (1).
- Remove the glass (3).

19.3.1 Central heating expansion vessel

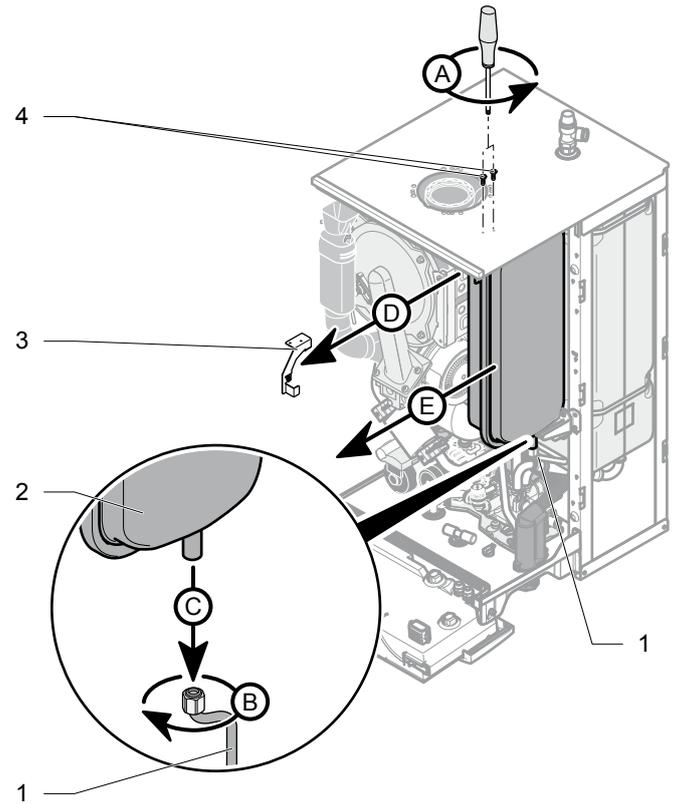

Key


- 1 Connector
- 2 Expansion vessel
- 3 Upper support bracket
- 4 Retaining screw

Drain the boiler heating circuit as described in the appropriate chapter "Draining".

- Remove the two screws (4).
- Undo the connector (1) at the base of the vessel.
- Remove upper support bracket (3).
- Remove the expansion vessel (2).
- Fit a new gasket between the expansion vessel and connector.
- Refill, vent and pressurise the boiler.

19.3.2 DHW expansion vessel

Drain the boiler domestic hot water circuit as described in the appropriate chapter "Draining".

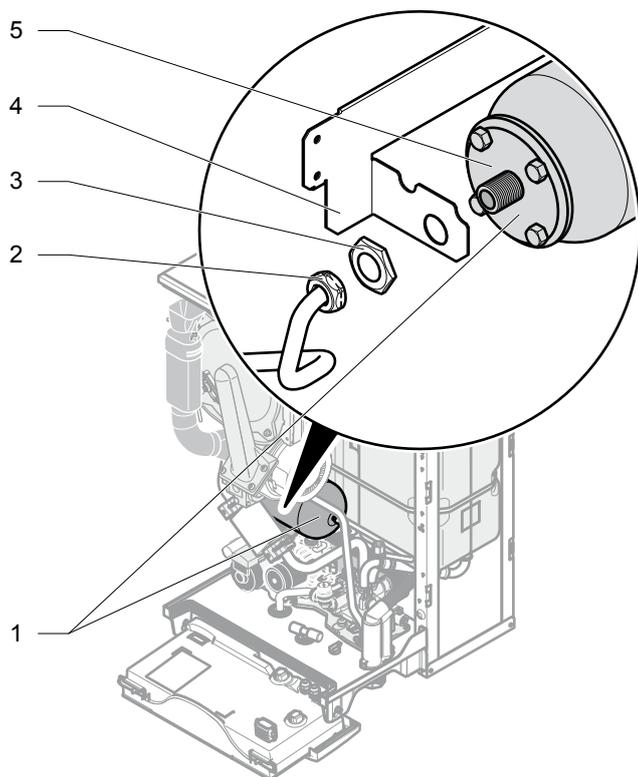


- Key**
- 1 Expansion vessel
 - 2 Expansion vessel pipe
 - 3 nut
 - 4 bracket

Drain the boiler domestic hot water circuit as described in the appropriate chapter "Draining".

- Undo the expansion vessel pipe (2).
- Remove nut (3).
- Remove the expansion vessel (1).

19.3.3 Particle filter

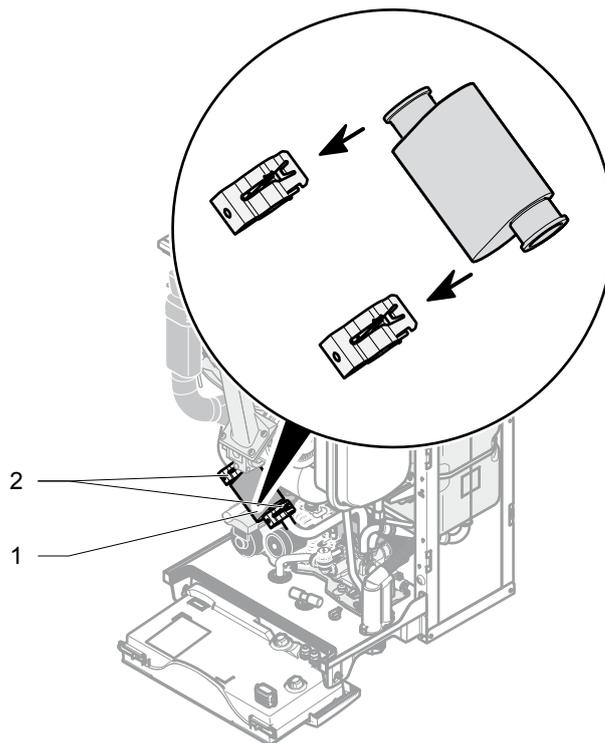

- Key**
- 1 Particle filter
 - 2 Clips




Remove the particle filter to check its condition.

Drain the boiler heating circuit as described in the appropriate chapter "Draining".

- Remove the 2 clips (2).
- Remove the particle filter (1).
- After installing a new particle filter, refill and bleed the appliance and the installation if necessary.

19.4 Hydraulic block

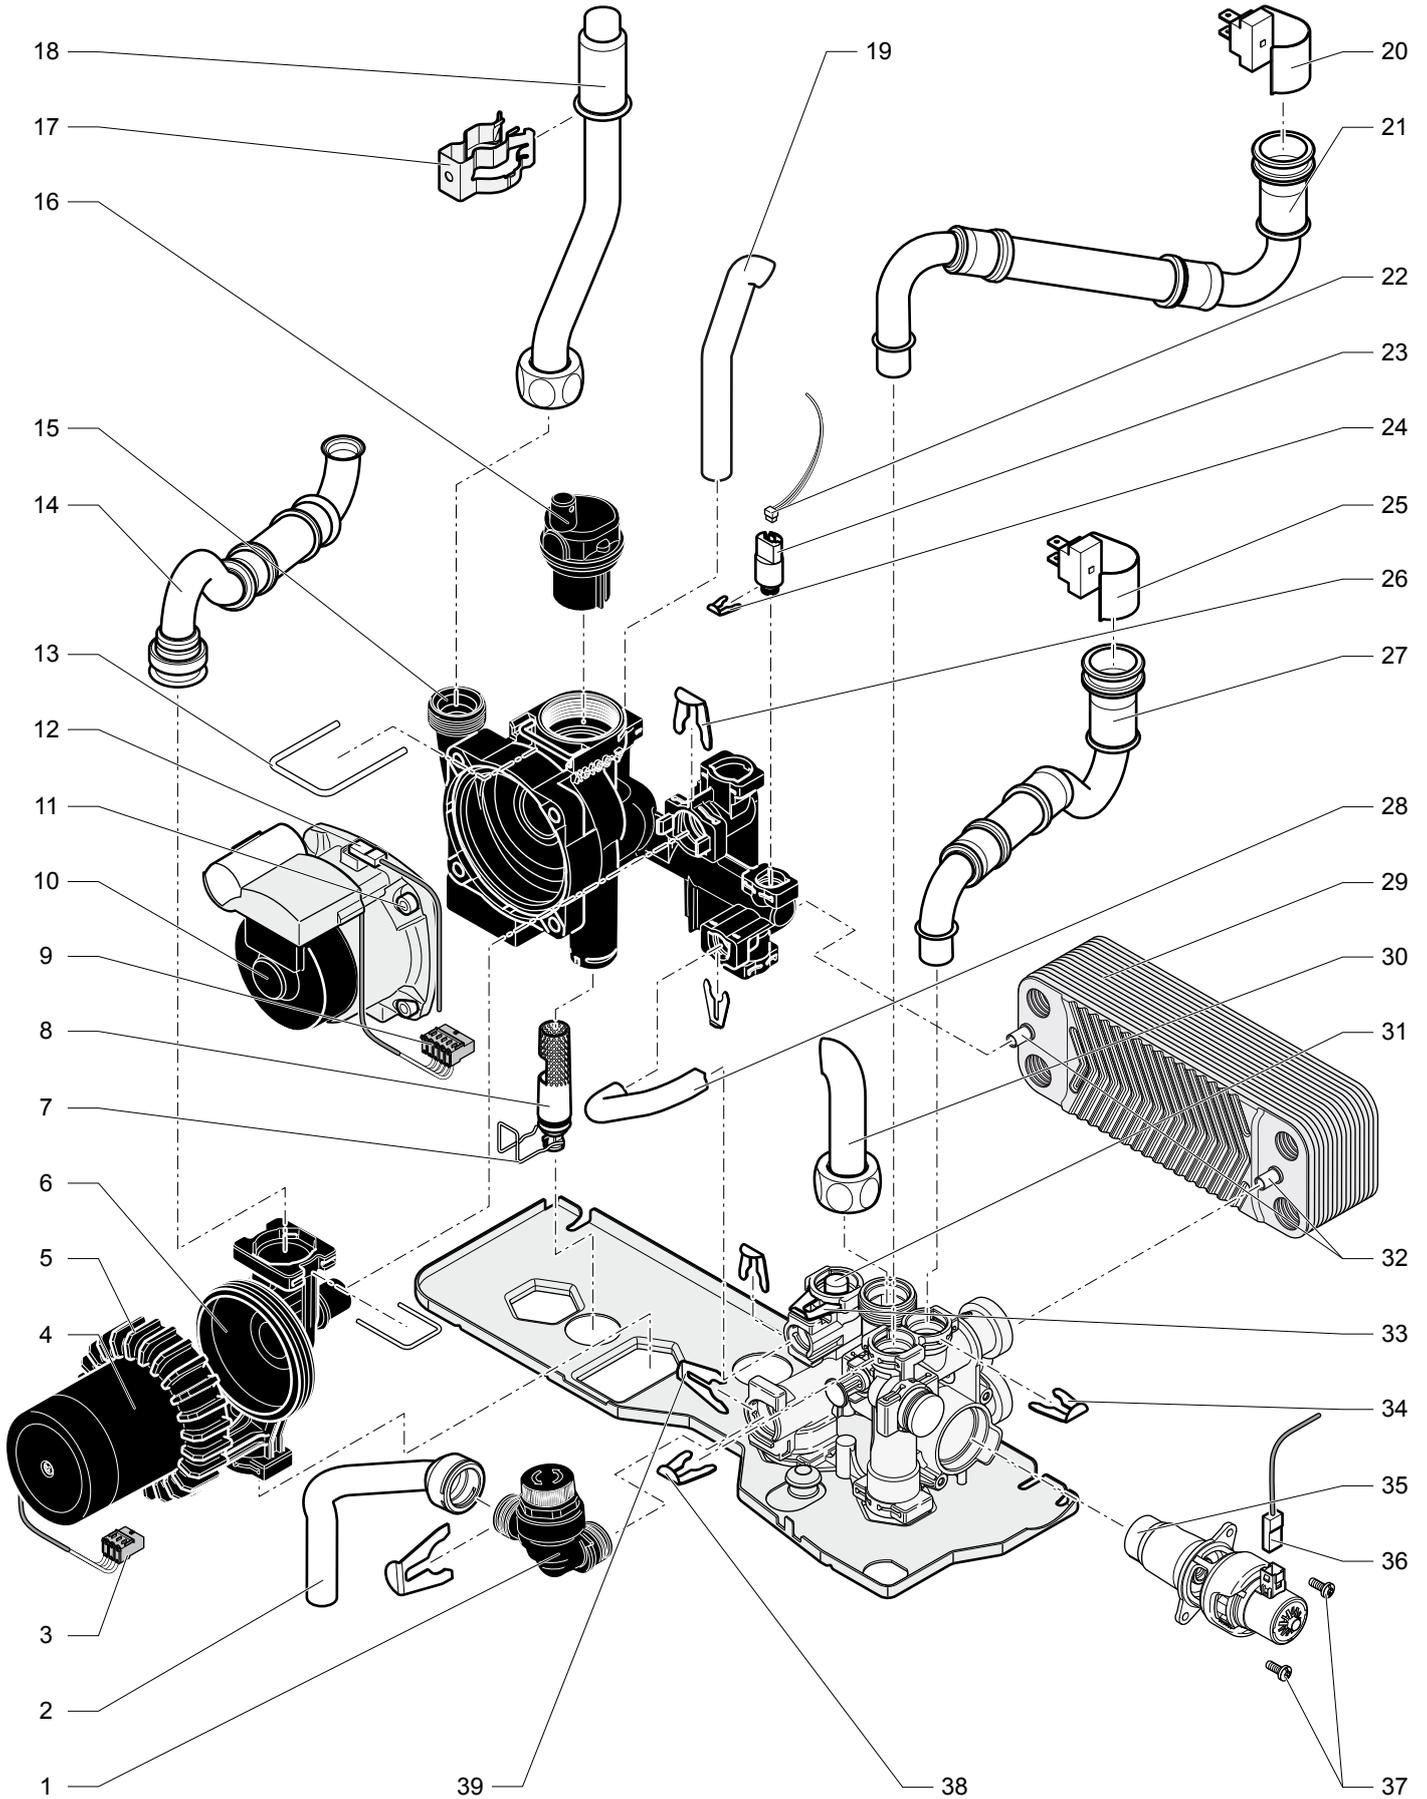

Key

- 1 Safety Discharge Valve
- 2 Safety Discharge Valve discharge pipe
- 3 Domestic hot water pump head connector
- 4 Domestic hot water pump head
- 5 Domestic hot water pump head nut
- 6 Domestic hot water pump housing
- 7 "Foaming" filter retaining clip
- 8 "Foaming" filter
- 9 Heating pump head connector
- 10 Heating pump head
- 11 Heating pump head retaining screws
- 12 Heating pump head earth lead
- 13 Automatic air vent retaining clip
- 14 Flexible 3WV / tank
- 15 Heating pump housing
- 16 Automatic air vent
- 17 Heating return pipe retaining clip
- 18 Heating return pipe
- 19 Heating expansion vessel pipe
- 20 Hot water temperature sensor
- 21 Flexible 3WV / tank
- 22 Low water pressure sensor connector
- 23 Low water pressure sensor
- 24 Low water pressure sensor retaining clip
- 25 Hot water heat exchanger output temperature sensor
- 26 Domestic hot water pump housing retaining clip
- 27 Flexible 3WV / tank
- 28 Pipe
- 29 Plate-to-plate heat exchanger
- 30 Heating flow pipe
- 31 Bypass screw
- 32 Plate-to-plate heat exchanger retaining screws
- 33 Bypass retaining clip
- 34 Flexible 3WV / tank retaining clip
- 35 Three-way valve
- 36 Three-way valve electrical plug
- 37 Three-way valve retaining screws
- 38 Flexible 3WV / tank retaining clip
- 39 Safety Discharge Valve discharge retaining clip

19.4.1 Heating pump (head only)

- Drain the boiler heating circuit as described in the appropriate chapter "Draining".
- Disconnect the electrical plug (9) from the main board.
- Disconnect the electrical plug (12) from the pump head.
- Remove the four cap head screws (11).
- Carefully remove the pump head (10) together with cable. Do not strain cable.
- Reconnect wiring to new pump head and fit cover.
- Fit the new pump head by repeating the operations in reverse.

19.4.2 Safety discharge valve

- Drain the boiler heating circuit as described in the appropriate chapter "Draining".
- Undo the safety discharge valve union and remove from the pipework (2).
- Remove the securing clip (39) and withdraw the safety discharge valve (1).
- Fit new 'O' ring. Refill, vent and pressurise the boiler.

19.4.3 Automatic air vent

- Drain the boiler heating circuit as described in the appropriate chapter "Draining".
- Remove the retaining clip (13).
- Remove the automatic air vent (16).
- Fit the new automatic air vent and 'O' ring ensuring the vent cap is left loose.
- Refill, vent and pressurise the boiler.

19.4.4 Low water pressure sensor

- Drain the boiler heating circuit as described in the appropriate chapter "Draining".
- Disconnect the electrical lead (22).
- Remove the retaining clip (24), remove the low water pressure sensor (23).
- Fit the new low water pressure sensor.
- Refill vent and pressurise the boiler.

19.4.5 Bypass

- Drain the boiler heating circuit as described in the appropriate chapter "Draining".
- Remove the retaining clip (33) to remove the bypass screw (31).
- After replacing the bypass, refill, vent and pressurise the boiler.

19.4.6 Three way valve

- Drain the boiler heating circuit as described in the appropriate chapter "Draining".
- Disconnect the electrical plug (36).
- Remove the two retaining screws (37).
- Remove the three way valve (35).
- Fit new three way valve assembly.
- Refill, vent and pressurise the boiler.

19.4.7 "Foaming" filter

- Drain the boiler heating and domestic hot water circuits as described in the appropriate chapter "Draining".
- Remove the filter retaining clip (7) located under the pump.
- Relieve the "foaming" filter (8).
- Refill vent and pressurise the boiler.

19.4.8 Plate-to-plate heat exchanger

- Drain the boiler heating and domestic hot water circuits as described in the appropriate chapter "Draining".
- Remove the two securing screws (32).
- Remove the plate-to-plate heat exchanger (29).
- When replacing the plate-to-plate heat exchanger, ensure that the four rubber sealing washers are fitted into the hydroblock.


NOTE: The plate-to-plate heat exchanger only fits one way.

- Refill, vent and pressurise the boiler.

19.4.9 Domestic hot water pump (head only)

- Drain the boiler heating and domestic hot water circuits as described in the appropriate chapter "Draining".
- Disconnect the electrical plug (3) from the main board.
- Unscrew the nut (5).
- Carefully remove the pump head (4) together with cable. Do not strain cable.
- Fit the new pump head by repeating the operations in reverse.

19.5 Combustion block

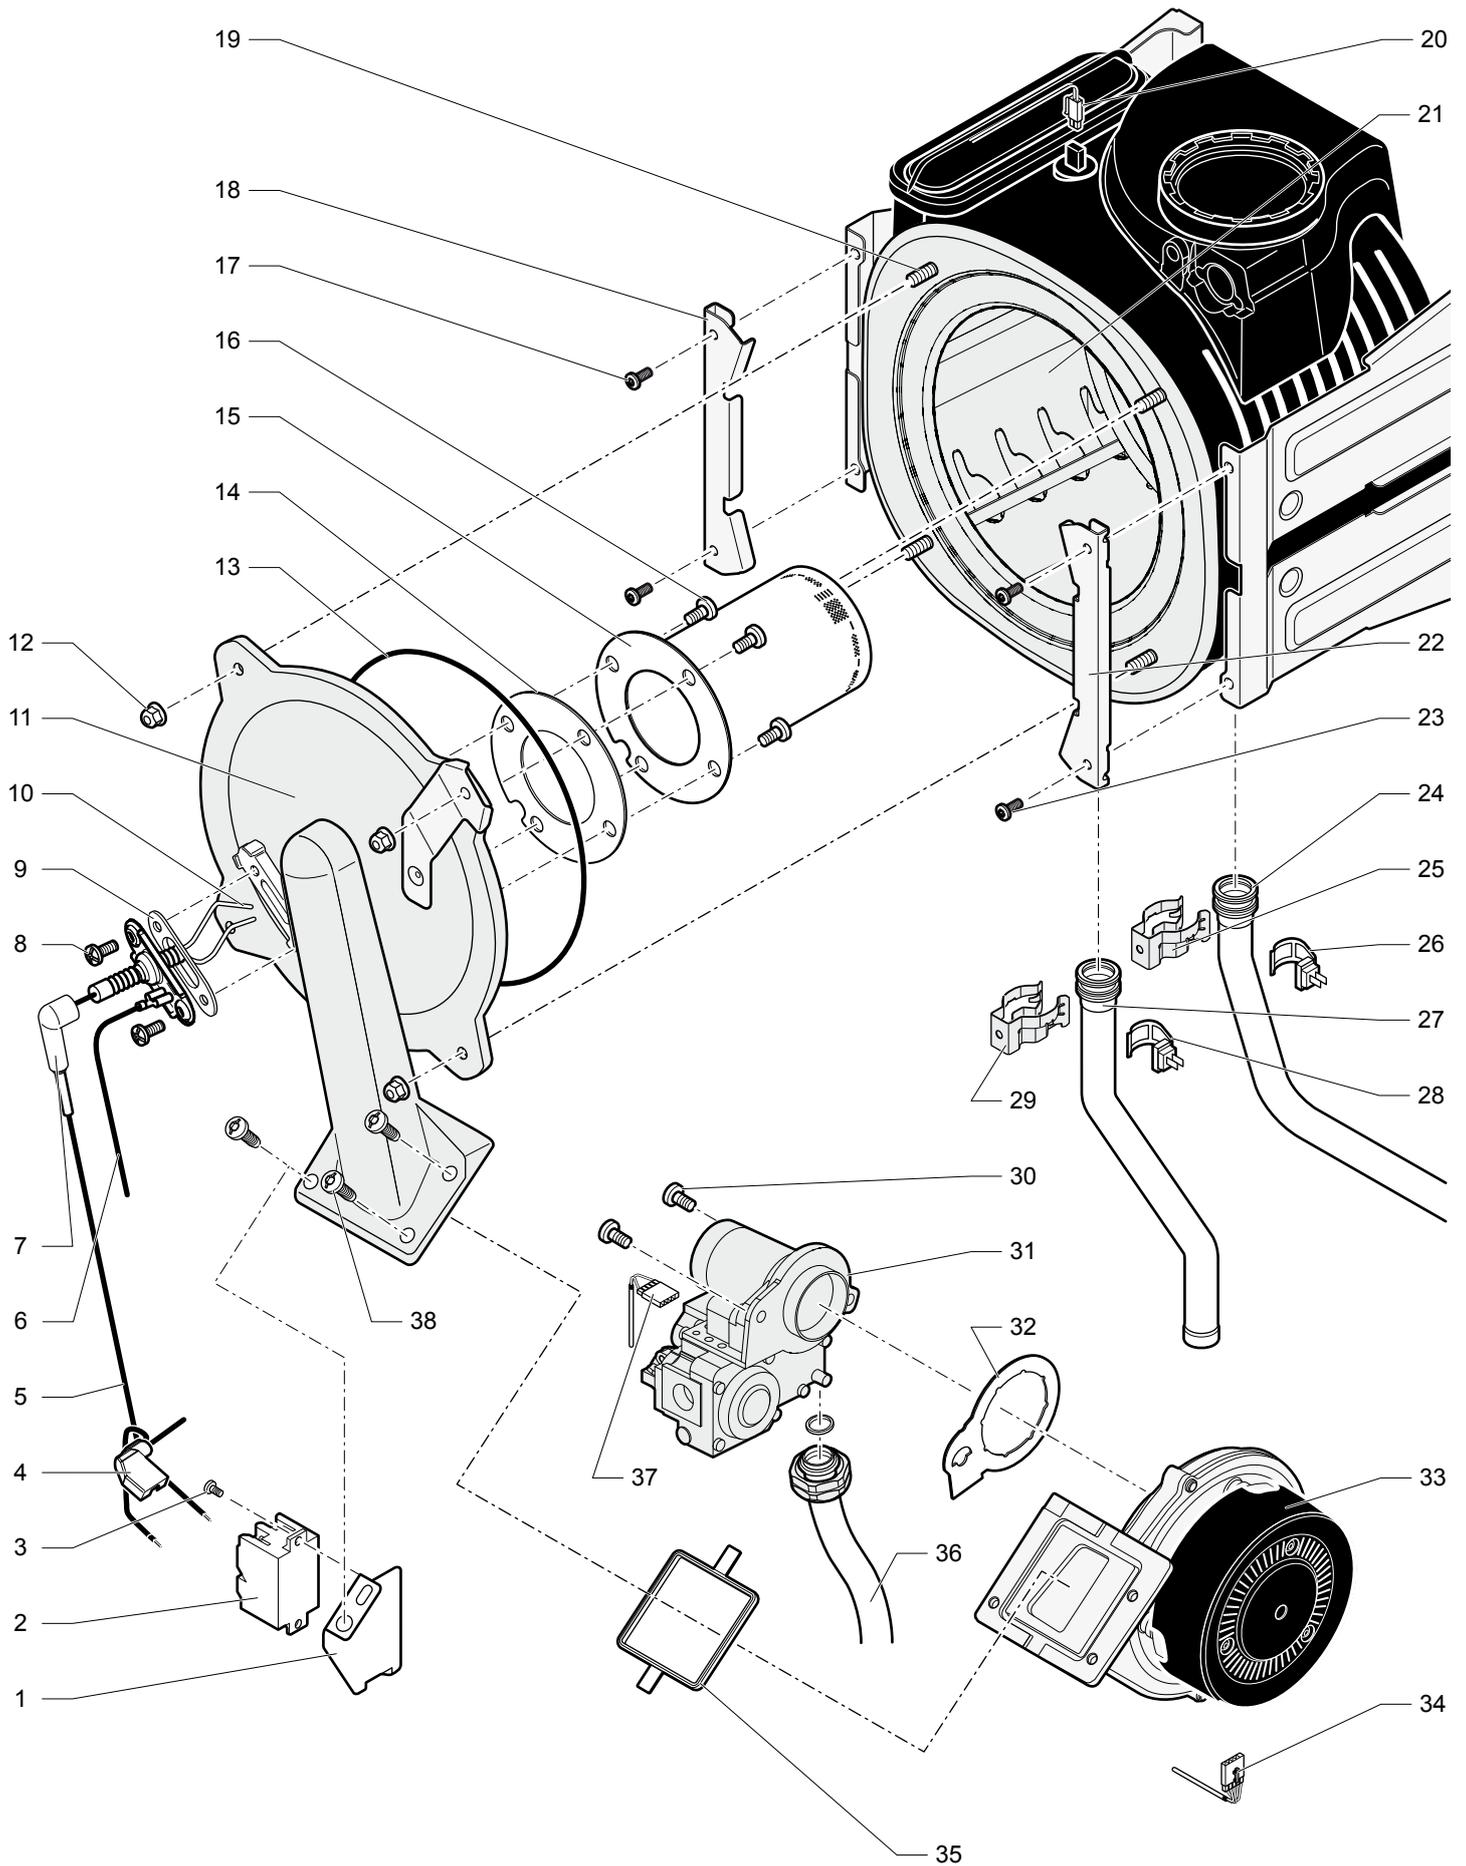

Key

- 1 Igniter unit retaining bracket
- 2 Igniter unit
- 3 Igniter unit retaining screw
- 4 Igniter unit electrical connector
- 5 Electrode / igniter unit connection cable
- 6 Earth cable
- 7 Spark electrode cap
- 8 Spark electrode retaining screw
- 9 Spark electrode gasket
- 10 Spark electrode
- 11 Combustion burner door assembly
- 12 Combustion burner door assembly - nut
- 13 Combustion burner door assembly - gasket
- 14 Burner gasket
- 15 Burner
- 16 Burner retaining screw
- 17 Heat exchanger retaining screw
- 18 Heat exchanger retaining bracket
- 19 Burner gate retaining screw
- 20 Thermal fuse connection
- 21 Heat exchanger
- 22 Heat exchanger retaining bracket
- 23 Heat exchanger retaining screw
- 24 Heating return pipe
- 25 Heating return pipe retaining clip
- 26 Return heating temperature sensor
- 27 Heating flow pipe
- 28 Flow heating temperature sensor
- 29 Heating flow pipe retaining clip
- 30 Gas valve retaining screw
- 31 Gas valve
- 32 Gas valve gasket
- 33 Fan
- 34 Fan electrical connection
- 35 Fan/burner gasket
- 36 Gas pipe
- 37 Gas valve electrical connection
- 38 Fan retaining screw

19.5.1 Spark electrode

- Disconnect the electrode cap (7) and the earthing cable (6).
- Remove the 2 spark electrode retaining screws (8).
- Carefully remove the electrode (10) from the combustion chamber.
- Remove the gasket (9).
- Check that the distance between the 2 electrodes is between 3.5 and 4.5 mm.
- Install the electrode and a new gasket.

19.5.2 Igniter unit

- Remove the ignition lead (2).
- Remove electrical connections (4).
- Loosen the screws (3) located on the igniter unit (2).
- Remove the igniter unit (2).

19.5.3 Removing the combustion/burner door assembly



Warning: The gasket (13) must be replaced each time the combustion/burner door assembly is removed.

- Disconnect the spark electrode cap (7) from the igniter unit.
- Disconnect the gas supply pipe (36) at the gas valve.
- Remove the electrical connectors from the gas valve (37) and the fan (34).
- Remove the retaining screw of the silencer.
- Loosen the 4 nuts (12).
- Remove the combustion/burner door assembly from the heat exchanger (11).
- The studs (19) must not be damaged. If damaged you will need to replace the heat exchanger.
- The combustion/burner door assembly insulation should be inspected and replaced if damaged.

19.5.4 Burner

- Remove the 3 burner retaining screws (16).
- Remove the burner (15) and the gasket (14).
- Fit the new burner and the new gasket.

19.5.5 Heat exchanger



There will be water in the heat exchanger. Carefully ease heat exchanger out.

- Drain the boiler heating and hot water circuits as described in the appropriate chapter "Draining".
- Remove the flue connection.
- Undo the two screws located on the top of each side panel.
- Remove the thermal fuse connector (20).
- Remove the 2 heating pipe retaining clips (25) and (29).
- Release the heating pipes (24) and (27) from the heat exchanger.
- Release the condensate trap pipe from the heat exchanger.
- Remove the combustion/burner door assembly (11) referring to chapter "Removing the combustion/burner door assembly".
- Unscrew the 4 retaining screws (17) and (23) and remove the 2 retaining plates (18) and (22) from the heat exchanger.
- Pull the heat exchanger towards you to extract it from its 2 side rails.

19.5.6 Re-assembling the burner group

- Place the burner assembly on the heat exchanger (21).
- Progressively tighten the 4 nuts (12) in an alternate order.
- Reassemble the silencer.
- Connect the gas pipe (36) with a new gasket to the burner group.
- Connect the spark electrode connector (5) to the igniter unit.
- Connect the connector to the gas valve (37) and the fan (34).
- Open the appliance's gas input.
- Check the tightness of the gas connection.

19.5.7 Heating Flow Thermistor

- Remove the electrical connections from the thermistor (28).
- Remove the retaining clip from the flow pipe (27).



When reconnecting, the polarity of the wiring to thermistors is not important.

19.5.8 Heating Return Thermistor

- Remove the electrical connections from the thermistor (26).
- Remove the retaining clip from the return pipe (24).



When reconnecting, the polarity of the wiring to thermistors is not important.

19.5.9 Gas valve

- Remove the burner door (11) referring to chapter "Dismantling the burner door".
- Remove the two gas valve retaining screws (30).
- Remove the gas valve (31) and the gasket (32).
- Fit the new gas valve and the new gasket by repeating the operations in reverse.
- **After assembly test for gas tightness and purge in accordance with the current issue of BS6891 or in IE, the current edition of I.S.813 "Domestic Gas Installations".**
- Check the combustion CO₂.

19.5.10 Fan


- Remove the burner door (11) referring to chapter "Dismantling the burner door".
- Remove the gas valve (31) (see previous paragraph).
- Loosen the 3 screws (38) located on the burner door (11).
- Remove the fan (33) and the gasket (35).
- Fit the new gasket (35).
- Screw the new fan to the burner door (11).

- **After assembly test for gas tightness and purge in accordance with the current issue of BS6891 or in IE, the current edition of I.S.813 "Domestic Gas Installations".**

19.6 Condensate trap



Warning: condensate is mildly acidic. Wear protective gloves.

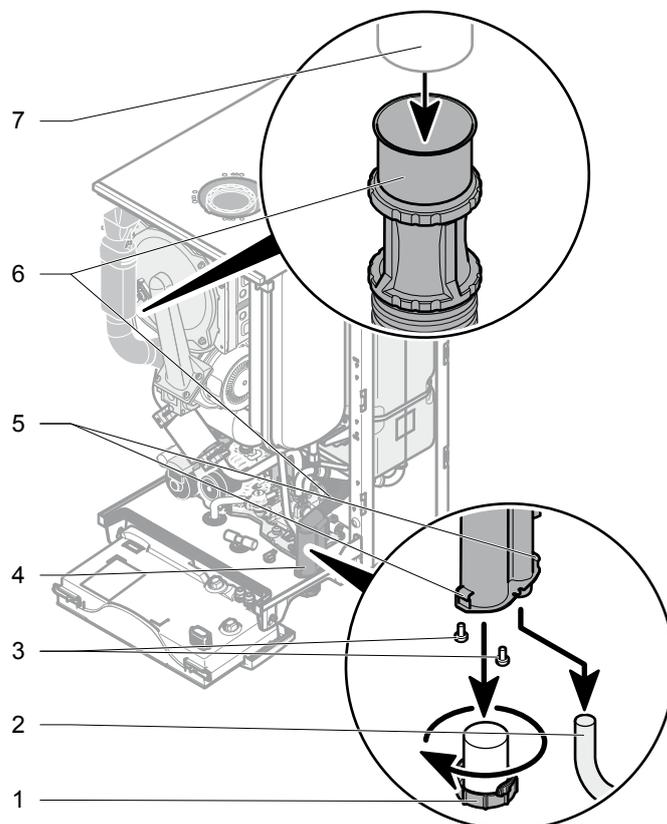

Key

- 1 Condensate reservoir
- 2 Condensate outlet pipe
- 3 Screws
- 4 Condensate trap
- 5 Condensate reservoir retaining clips
- 6 Hose
- 7 Heat exchanger

- Place a container under the condensate trap (4).
- Remove the condensate (1) from the reservoir.
- Disconnect the condensation discharge (2).
- Disconnect the hose (6) from heat exchanger (7).
- Remove the retaining screws (3) of the condensate trap (4).

The condensate trap will contain water, lift taking care not to spill the water.


- Remove the condensate trap (4) using the clips (5).
- **IMPORTANT: Partially fill the condensate trap with water before replacing. Start the siphon (1) and fill with water.**

19.7 PCB



When replacing the board refer to instructions supplied with the spare part.

19.7.1 Main PCB

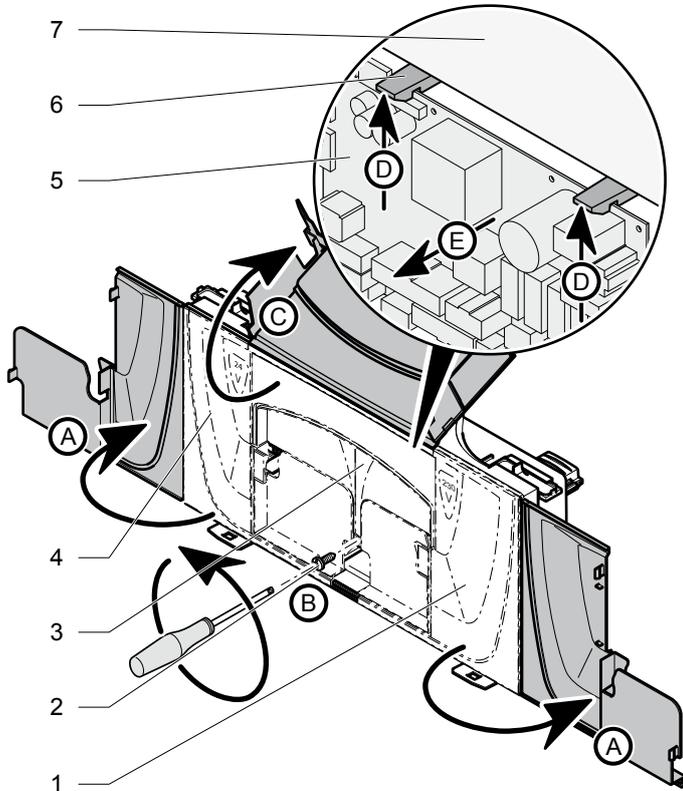


- Key**
- 1 230 V access cover
 - 2 Screw
 - 3 Main PCB access cover
 - 4 24 V access cover
 - 5 Main PCB
 - 6 Retaining clips
 - 7 Control Panel

- Remove the 24V and 230V connections.
- Open the covers (1;3;4).
- Ease back the two PCB retaining clips (6) and withdraw the PCB from the retaining lugs.
- Remove the electrical connections to the PCB (appliance interface cable).

19.7.2 2A Fuse Rating

- For access, refer to chapter "Main PCB".
- The fuse is located at top right hand side of the PCB, see chapter "Electrical connection ▶ Wiring diagram".

19.7.3 User interface PCB

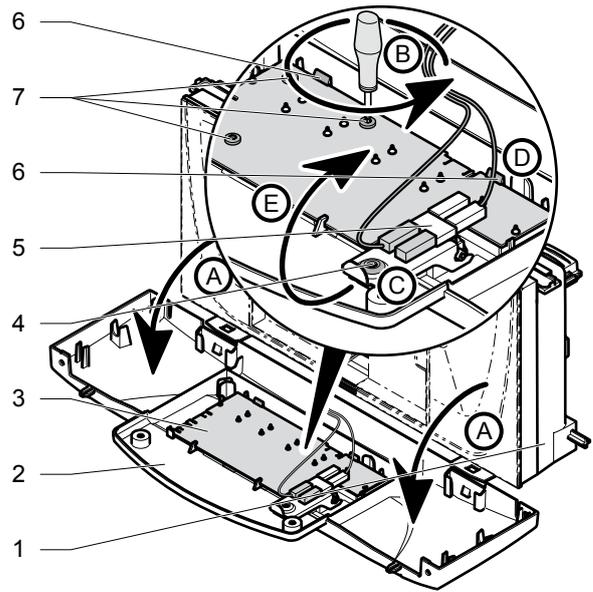

- Key**
- 1 Control Panel
 - 2 User interface
 - 3 User interface PCB
 - 4 Retaining screw
 - 5 Bracket (Switch On/Off)
 - 6 Retaining clips
 - 7 User interface PCB retaining screws

- Open the user interface (2).
- Remove the retaining screws (4;7) of the bracket (5).
- Ease back the two PCB retaining clips (6) and withdraw the PCB from the retaining lugs.
- Remove the electrical connections to the PCB.
- When refitting the user interface, ensure the leads are not trapped.

19.7.4 Mains supply cable



The main supply cable must be replaced by a qualified and competent electrician.

- If the main supply cable is damaged, replace it referring to the chapter "Electrical connection".

20 Spare parts

In order to guarantee the safe and prolonged life of the product, manufacturers genuine spare parts must be used.



This appliance displays a CE Mark of conformity. Only use the manufacturer's genuine, new spare parts.


- Ensure that spare parts are correctly mounted in the right position and direction. After fitting any spare part or servicing, the appliance must be tested for its safe operation.

20.1 Short List of Parts

- When ordering spare parts, contact Glow-worm's own service organisation.
- Please quote the name of the appliance and serial number, to be found on the data label. If ordering from British Gas also quote the G.C. number of the part.

Key No.	Part No.	Description	GC Part No.
1	0020097277	Fan	
2	A000035144	Spark igniter	
3	2000801935	Thermistor (flow and return)	
4	0020038071	Gas valve	
5	0020038441	Electrode assembly	
6	0020125457	User interface PCB	
7	0020112196	Plate to plate heat exchanger	
8	0020097214	3 way valve assembly	
9	0020125438	Heating Pump (head assembly)	
10	0020125434	DHW Pump (head assembly)	
11	0020014698	Flow restrictor	
12	0020125459	Main PCB	
13	A000024135	Low water pressure sensor	
14	801635	Burner Door Seal Kit	
15	0020117851	High capacity tank	

20.2 Short List of Parts

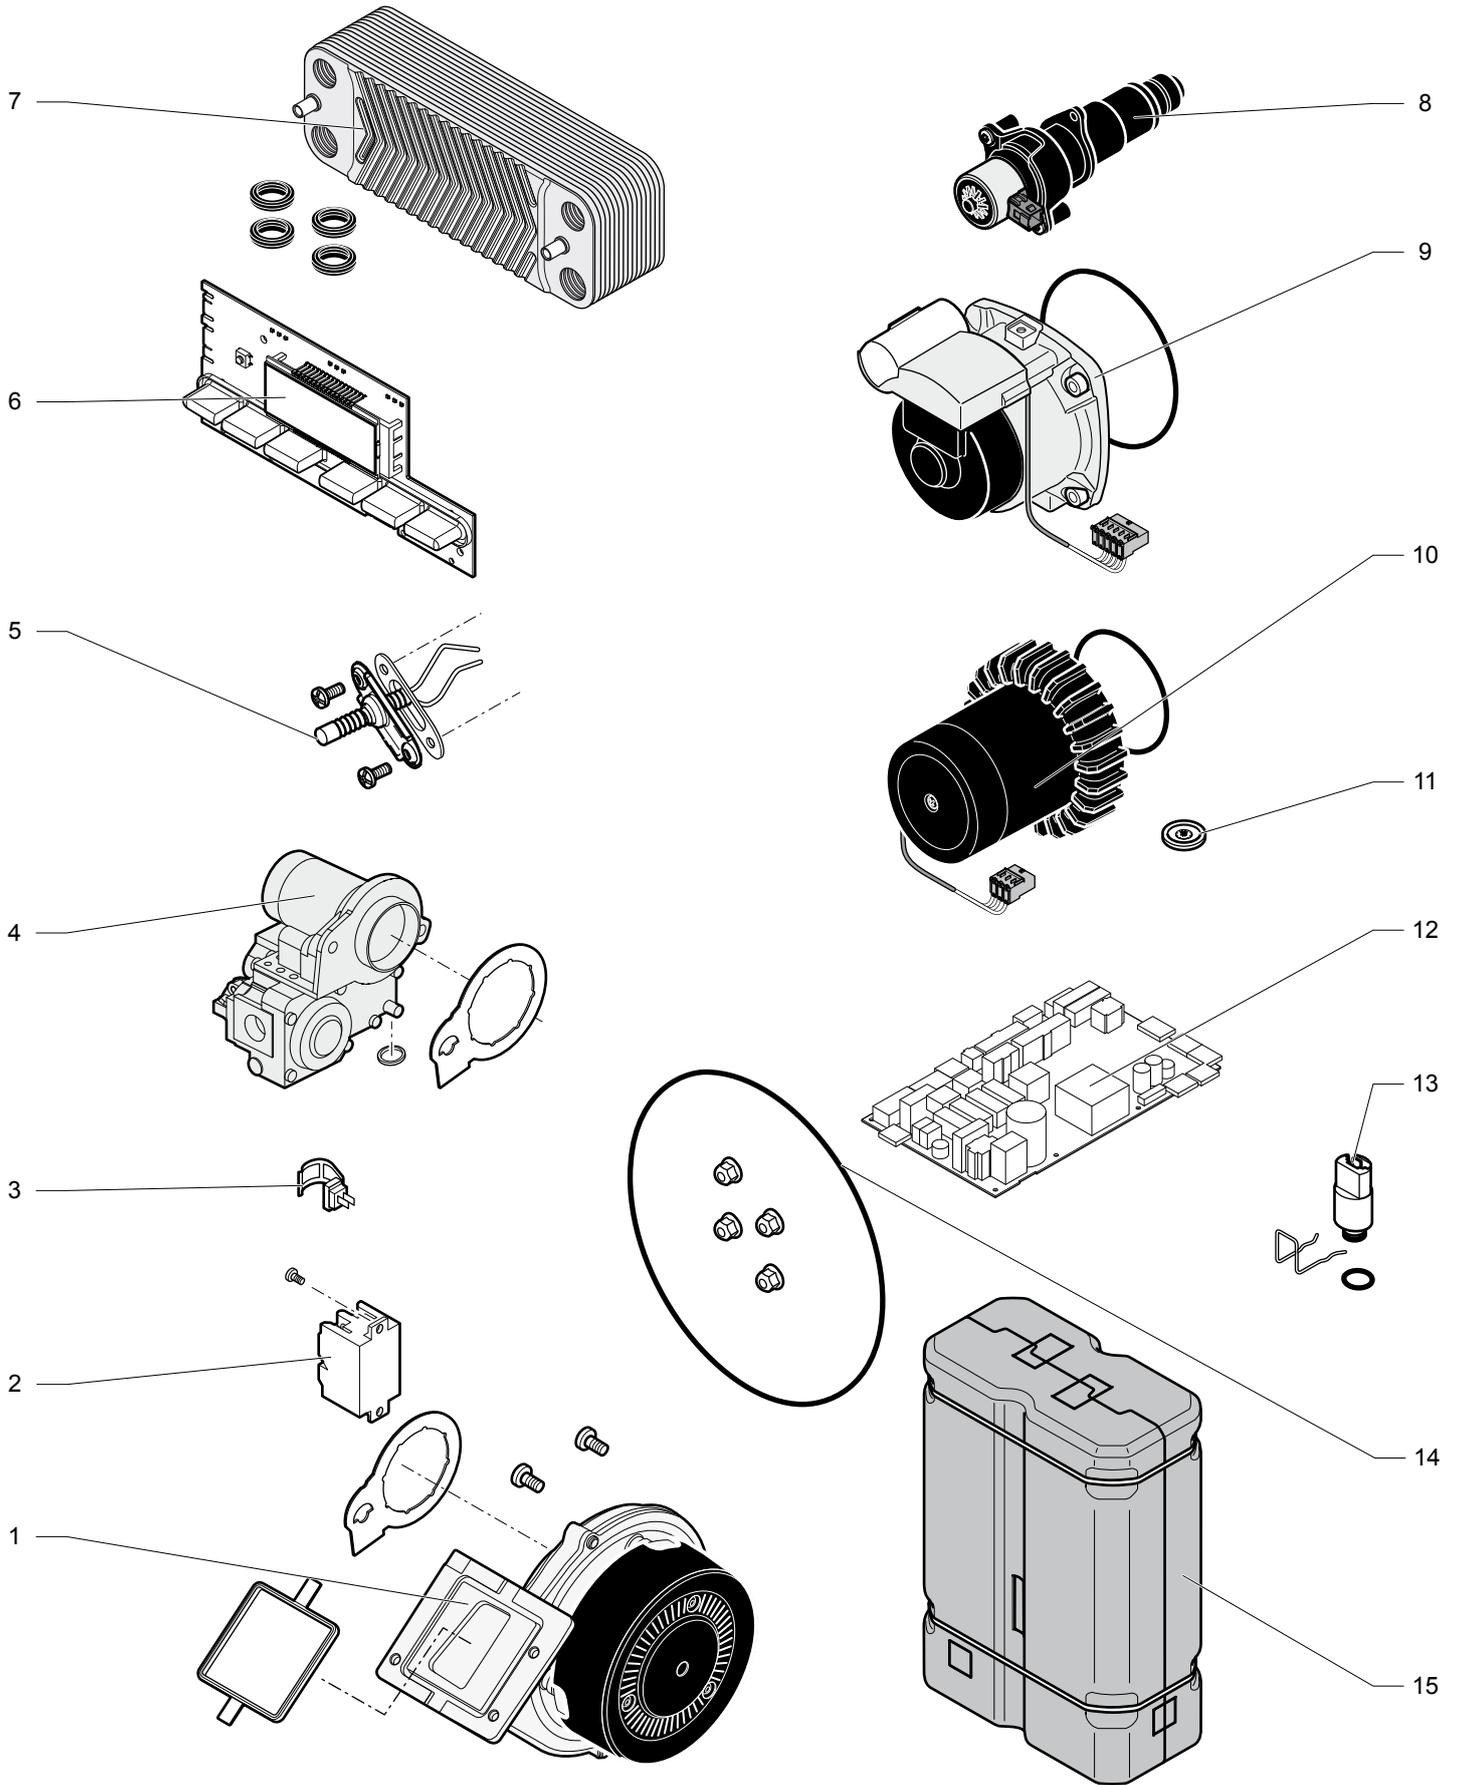

Manual Handling

IMPORTANT. With regards to the Manual Handling Operations, 1992 Regulations, the following lift operation exceeds the recommended weight for a one man lift.

General recommendations when handling

Clear the route before attempting the lift.

Ensure safe lifting techniques are used – keep back straight – bend using legs. Keep load as close to body as possible. Do not twist – reposition feet instead. If 2 persons performing lift, ensure co-ordinated movements during lift. Avoid upper body/top heavy bending - do not lean forward/sideways. Recommend wear suitable cut resistant gloves with good grip to protect against sharp edges and ensure good grip. Always use assistance if required.

Removal of carton from delivery van

Recommend 2 person lift or 1 person with use of sack truck. If 1 person is performing lift, straddle the load, tilt and place carton into position on truck. Recommend secure appliance onto truck with suitable straps. Ensure safe lifting techniques are used – keep back straight – bend using legs. Keep load as close to body as possible. If 2 persons performing lift, ensure co-ordinated movements during lift. Always use assistance if required.

Carriage of carton from point of delivery to point of installation – ground floor.

Recommend 2 person lift or 1 person with use of sack truck. If 1 person is performing lift, straddle the load, tilt and place carton into position on truck. Recommend secure appliance onto truck with suitable straps. Ensure safe lifting techniques are used – keep back straight – bend using legs. Keep load as close to body as possible. If 2 persons performing lift, ensure co-ordinated movements during lift. Clear the route before attempting the lift. If removing boiler from truck straddle the load and tilt forwards to facilitate secure grip. Ensure safe lifting techniques are used – keep back straight – bend using legs. Do not twist – reposition feet instead. Take care to avoid trip hazards, slippery or wet surfaces and when climbing steps and stairs. Always use assistance if required.

Carriage of carton from point of delivery to point of installation – first or higher floor, cellar.

Recommend 2-person lift or 1 person with use of sack truck. If 1 person is performing lift, straddle the load, tilt and place carton into position on truck. Recommend secure appliance onto truck with suitable straps. Ensure safe lifting techniques are used – keep back straight – bend using legs. Keep load as close to body as possible. If 2 persons performing lift, ensure co-ordinated movements during lift. Avoid upper body/top heavy bending - do not lean forward/sideways. Clear the route before attempting the lift. If removing boiler from truck straddle the load and tilt forwards to facilitate secure grip. Ensure safe lifting techniques are used – keep back straight – bend using legs. Do not twist – reposition feet instead. Take care to avoid trip hazards, slippery or wet surfaces and when climbing steps and stairs. Always use assistance if required.

Carriage of carton from point of delivery to point of installation – roofspace.

Recommend 2-person lift. Ensure co-ordinated movements during lift. Avoid upper body/top heavy bending - do not lean forward/sideways. Clear the route before attempting the lift. Take care to avoid trip hazards, slippery or wet surfaces and when climbing steps and stairs. When transferring appliance into roofspace, recommend 1 person to be in roofspace to receive the appliance and other person to be below to pass up and support appliance. Ensure safe lifting techniques are used – keep back straight – bend using legs. Keep load as close to body as possible. Always use assistance if required. It is assumed safe access, flooring and adequate lighting are provided in the roof space. It is recommended a risk assessment of the roof space area be carried out before moving the appliance into the area to take into account access, stability of flooring, lighting and other factors, and appropriate measures taken.

Unpacking of appliance from carton.

Recommend 2 persons unpack appliance from carton. Always keep working area clear. Cut the carton straps, lift carton up and slide over polystyrene end packs. Remove top polystyrene pack with fittings.

Positioning of Appliance for Final Installation – no obstructions.

Recommend 2 persons lift appliance to position into place. Fit bracket securely onto wall before lifting appliance into position. Obtain firm grip on front and sides of appliance, lift upwards, ensure stable balance achieved and lift upwards to position in place on bracket. Ensure safe lifting techniques are used – keep back straight – bend using legs - when lifting load from floor level. Do not twist – reposition feet instead. Keep boiler as close as possible to body throughout lift to minimise strain on back. Ensure co-ordinated movements to ensure equal spread of weight of load. Always use assistance if required. Recommend wear suitable cut resistant gloves with good grip to protect against sharp edges and ensure good grip when handling appliance.

Positioning of Appliance for Final Installation – above worktop, foreseeable obstructions etc.

Recommend 2 persons lift appliance to position into place. Fit bracket securely onto wall before lifting appliance into position. Obtain firm grip on front and sides of appliance, lift upwards, onto worktop if practicable. Ensure stable balance achieved and lift upwards to position in place on bracket. If 2 persons positioning onto bracket obtain firm grip at front and sides/base of boiler. Ensure co-ordinated movements during 2 person lifts to ensure equal spread of weight of load. Ensure safe lifting techniques are used – keep back straight – bend using legs - when lifting load from floor level. Do not twist – reposition feet instead. Keep boiler as close as possible to body throughout lift to minimise strain on back. Avoid upper body/top heavy bending - do not lean forward/sideways. Always use assistance if required. Recommend wear suitable cut resistant gloves with good grip to protect against sharp edges and ensure good grip when handling appliance.

Positioning of Appliance for Final Installation – within compartment etc. restricting installation.

Recommend 2 persons lift appliance to position into place, space permitting. Fit bracket securely onto wall before lifting appliance into position. Obtain firm grip on front and sides of appliance, lift upwards, onto worktop if practicable. Ensure stable balance achieved and lift upwards to drop into place onto bracket. If 2 persons positioning onto bracket obtain firm grip at front and sides/base of boiler. Ensure co-ordinated movements during 2 person lifts to ensure equal spread of weight of load. If 1 person positioning onto bracket recommend obtain firm grip supporting base of boiler. Ensure safe lifting techniques are used – keep back straight – bend using legs - when lifting load from floor level. Do not twist – reposition feet instead. Keep boiler as close as possible to body throughout lift to minimise strain on back. Always use assistance if required. Recommend wear suitable cut resistant gloves with good grip to protect against sharp edges and ensure good grip when handling appliance.

Positioning of Appliance for Final Installation – in roof space restricting installation.

Recommend 2 persons lift appliance to position into place, space permitting. Fit bracket securely onto wall before lifting appliance into position. Obtain firm grip on front and sides of appliance, lift upwards, ensure stable balance achieved and lift upwards to drop into place onto bracket. If 2 persons positioning onto bracket obtain firm grip at front and sides/base of boiler. Ensure co-ordinated movements during 2 person lifts to ensure equal spread of weight of load. If 1 person positioning onto bracket recommend obtain firm grip supporting base of boiler. Ensure safe lifting techniques are used - keep back straight – bend using legs - when lifting load from floor level. Do not twist – reposition feet instead. Keep boiler as close as possible to body throughout lift to minimise strain on back. Always use assistance if required. Recommend wear suitable cut resistant gloves with good grip to protect against sharp edges and ensure good grip when handling appliance. It is recommended a risk assessment of the roof space area be carried out before moving the appliance into the area to take into account access, stability of flooring, lighting and other factors, and appropriate measures taken.

Declaration of Conformity

CE DECLARATION OF CONFORMITY

Name and Address of the Manufacturer :	Glow-worm Nottingham Road Belper, Derbyshire DE56 1JT
Identification of product	CONDENSING WALL HUNG GAS COMBINATION BOILER
Appliance type & models	GLOW WORM - ULTRACOM 2 35 Store -A/1

The appliance types satisfy the essential requirements of the relevant directives and Standards:

2009/142/EEC including amendments
"Directive on the approximation of the law of the member states relating to appliances burning gaseous fuels"

Designed and built to CE-type examination certificate:

92/42/EEC including amendments
"Directive of efficiency relating to boiler burning gaseous fuels"

PIN N°: 1312CL5531

2006/95/EEC including amendments
"Directive on the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits"

Designed and built according to European Standards:

2004/108/EEC including amendments
"Directive on the approximation of the law of the member states relating to electromagnetic compatibility "

**EN 483 EN 297/A4 EN13203-1
EN 677
EN 625
EN 60335-1 & EN 60335-2-102
EN 60529
EN 50165
EN 55014
EN 61000-3-2
EN 61000-3-3**

Any change to the appliance and/or any use not according to the instructions will lead to the invalidation of this Declaration of Conformity

Nantes, January 2011

(place, date)


Program Manager
Richard HUVELIN


Certification Manager
Yannick GAUDIN

Service Record

It is recommended that your heating system is serviced regularly and that the appropriate Service Interval Record is completed.

Service Provider

Before completing the appropriate Service Record below, please ensure you have carried out the service as described in the manufacturer's instructions.

Always use the manufacturer's specified spare part when replacing controls.

Service 1

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 2

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 3

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 4

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 5

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 6

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Operative ID No. _____

Comments: _____

Signature: _____

Service 7

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 8

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 9

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 10

Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____



Subject to engineering changes

0020112185_PROTO_13-01/11

GLOW-WORM

Nottingham Road,
Belper, Derbyshire.
DE56 1JT

Because of our constant endeavour for
improvement, details may vary slightly
from those shown in these instructions.

Glow•worm

www.glow-worm.co.uk